

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PhoneSuit](#) /

› [PhoneSuit Journey 3500mAh All-in-One Charger User Manual \(Model: PS-JOURN-35-BLK\)](#)

PhoneSuit PS-JOURN-35-BLK

PhoneSuit Journey 3500mAh All-in-One Charger User Manual

Model: PS-JOURN-35-BLK

1. INTRODUCTION

Thank you for choosing the PhoneSuit Journey 3500mAh All-in-One Charger. This device is designed to provide portable power for your mobile devices with maximum convenience. It features an integrated AC wall charger, a 3500mAh battery pack, and built-in Lightning and Micro-USB charging cables, making it an ideal solution for on-the-go charging. Please read this manual thoroughly to ensure proper use and optimal performance of your charger.



Figure 1: PhoneSuit Journey All-in-One Charger in its retail packaging.

2. PRODUCT FEATURES

The PhoneSuit Journey charger offers several key features for convenient power management:

- **Built-in 3500 mAh Battery Pack:** Provides ample power for emergency charges or extended use.
- **2.4 Amp Quick Charge:** Delivers fast charging speeds to compatible devices.
- **Ultra Slim Design:** Compact and lightweight for easy portability.

- **Integrated AC Wall Charger:** Allows direct charging from any standard wall outlet without extra adapters.
- **Integrated Lightning & Micro-USB Cable:** Built-in cables for direct connection to a wide range of smartphones and other devices.



Figure 2: Rear view of the packaging, illustrating key features and integrated components.

3. SETUP

Before using your PhoneSuit Journey charger for the first time, it is recommended to fully charge its internal battery.

1. **Unpack the Device:** Carefully remove the PhoneSuit Journey charger from its packaging.
2. **Locate AC Prongs:** Extend the integrated AC wall charger prongs from the device.
3. **Connect to Power:** Plug the charger directly into a standard wall power outlet.
4. **Initial Charge:** Allow the device to charge until the battery indicator lights (if present) show a full charge. This may take several hours for the first charge.

4. OPERATING INSTRUCTIONS

4.1. Charging the PhoneSuit Journey Charger

To recharge the internal 3500mAh battery of your PhoneSuit Journey:

- Extend the integrated AC wall prongs.
- Plug the charger into any standard wall outlet.
- The device will begin charging automatically. Monitor the indicator lights for charge status.
- Once fully charged, disconnect the charger from the wall outlet and fold the prongs back into the device for storage.

4.2. Charging External Devices

The PhoneSuit Journey can charge a variety of mobile devices using its integrated cables:

1. **Identify Cable:** Select the appropriate integrated cable for your device: the Lightning cable for Apple devices or the Micro-USB cable for compatible Android and other devices.
2. **Connect Device:** Plug the chosen cable into your smartphone, tablet, or other compatible electronic device.
3. **Initiate Charge:** The charging process should begin automatically. Some devices may require you to press

a power button on the PhoneSuit Journey to start charging (refer to device for specific indicator lights).

4. **Monitor Charge:** Observe your device's screen or battery indicator to confirm charging is active. The PhoneSuit Journey provides 2.4 Amp quick charging for efficient power delivery.
5. **Disconnect:** Once your device is sufficiently charged, disconnect it from the PhoneSuit Journey.

5. MAINTENANCE

Proper care and maintenance will extend the lifespan of your PhoneSuit Journey charger:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the charger. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the charger in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Handle the integrated cables gently. Avoid excessive bending or pulling, especially at the connectors, to prevent damage.
- **Battery Health:** For optimal battery life, avoid completely draining the battery frequently. Recharge the device regularly, even if not in constant use.

6. TROUBLESHOOTING

If you encounter issues with your PhoneSuit Journey charger, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Charger not powering on or charging devices.	<ul style="list-style-type: none">◦ The internal battery may be depleted. Plug the PhoneSuit Journey into a wall outlet to recharge it.◦ Ensure the integrated cables are securely connected to both the charger and your device.◦ Check if your device requires a button press on the charger to initiate charging.
Slow charging of external devices.	<ul style="list-style-type: none">◦ Ensure your device is compatible with 2.4 Amp charging.◦ Close unnecessary applications on your device to reduce power consumption during charging.◦ The PhoneSuit Journey's internal battery may be low. Recharge the charger.
Integrated cable appears damaged or not working.	<ul style="list-style-type: none">◦ Inspect the cable for visible signs of wear or damage.◦ Ensure the connector is clean and free of debris.◦ If a cable is physically damaged, discontinue use and contact PhoneSuit support for assistance.

7. SPECIFICATIONS

Brand	PhoneSuit
Model Number	PS-JOURN-35-BLK (Item model number: 4326453363)
Battery Capacity	3500 Milliamp Hours (mAh)

Charging Output	2.4 Amp (Quick Charge)
Integrated Cables	Lightning, Micro USB
Integrated Charger	AC Wall Charger
Product Dimensions	8.4 x 7.4 x 2 inches
Item Weight	12 ounces
Color	Black
Special Features	Fast Charging, Slim Design

8. WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance with your PhoneSuit Journey 3500mAh All-in-One Charger, please refer to the official PhoneSuit website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

Manufacturer: PhoneSuit