

## Utilitech 108174

# Utilitech White Doorbell Instruction Manual

Model: 108174

## 1. INTRODUCTION

Thank you for choosing the Utilitech White Doorbell. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new doorbell unit. Please read these instructions thoroughly before beginning installation and retain this manual for future reference.

## 2. SAFETY INFORMATION

Always follow basic safety precautions when installing or servicing electrical equipment to reduce the risk of fire, electric shock, and personal injury.

- **WARNING:** Turn off power at the circuit breaker or fuse box before installing or servicing the doorbell. Failure to do so may result in serious injury or death.
- Ensure all wiring connections are secure and comply with local electrical codes.
- Do not install the doorbell in wet or damp locations unless specifically rated for such environments.
- If you are unsure about any part of the installation process, consult a qualified electrician.

## 3. PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- Utilitech White Doorbell Unit (Model: 108174)
- Instruction Manual
- *Note: Mounting hardware and transformer are typically sold separately and are not included with the doorbell unit.*

## 4. SETUP AND INSTALLATION

Follow these steps to properly install your Utilitech White Doorbell.

1. **Turn Off Power:** Locate your home's circuit breaker or fuse box and turn off the power to the circuit that supplies electricity to your doorbell wiring. Verify power is off using a voltage tester.
2. **Mount the Doorbell Unit:**

Position the doorbell unit in the desired location. Mark the mounting holes. Drill pilot holes if necessary and secure the doorbell unit to the wall using appropriate screws (not included).



Figure 4.1: Front view of the Utilitech White Doorbell unit. This image displays the compact, white rectangular housing of the Utilitech doorbell unit, featuring a smooth, minimalist design suitable for various home aesthetics.

3. **Wire Connections:**

Connect the low-voltage wires from your doorbell transformer and push button to the appropriate terminals on the Utilitech doorbell unit. Typically, there are terminals for "TRANS" (transformer), "FRONT" (front door push button), and "REAR" (rear door push button, if applicable). Ensure all connections are tight and secure.

- Connect the transformer wire to the "TRANS" terminal.
- Connect the front door push button wire to the "FRONT" terminal.
- If using a rear door push button, connect its wire to the "REAR" terminal.

4. **Restore Power:** Once all connections are made and the unit is securely mounted, return to your circuit breaker or fuse box and turn the power back on.

5. **Test Operation:** Press the doorbell push button(s) to ensure the chime sounds correctly.

5. **OPERATING INSTRUCTIONS**

The Utilitech White Doorbell operates by producing an audible chime when the connected push button is pressed. The sound output is designed to alert occupants to visitors at the door.

- To activate the doorbell, a visitor simply presses the corresponding push button located outside your door.
- The doorbell unit will then emit its chime sound.

6. **MAINTENANCE**

The Utilitech White Doorbell requires minimal maintenance to ensure long-lasting performance.

- **Cleaning:** Periodically wipe the exterior of the doorbell unit with a soft, dry cloth to remove dust and dirt. Do not use abrasive cleaners or solvents, as these may damage the finish.
- **Connection Check:** If you experience issues, ensure all wiring connections remain secure. Always turn off power at the circuit breaker before inspecting connections.

7. **TROUBLESHOOTING**

If your Utilitech White Doorbell is not functioning as expected, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Doorbell does not chime or chimes weakly.	<ul style="list-style-type: none"><li>◦ No power to the doorbell circuit.</li><li>◦ Loose or incorrect wiring connections.</li><li>◦ Faulty push button.</li><li>◦ Incorrect transformer voltage.</li></ul>	<ul style="list-style-type: none"><li>◦ Check the circuit breaker and ensure power is on.</li><li>◦ Turn off power, then inspect and tighten all wiring connections at the doorbell unit, transformer, and push button.</li><li>◦ Test the push button. If it's faulty, replace it.</li><li>◦ Ensure the transformer provides the correct voltage for your doorbell (typically 16V AC).</li></ul>
Doorbell chimes continuously.	<ul style="list-style-type: none"><li>◦ Stuck push button.</li><li>◦ Short circuit in wiring.</li></ul>	<ul style="list-style-type: none"><li>◦ Inspect the push button to ensure it is not stuck in the "pressed" position. Clean or replace if necessary.</li><li>◦ Turn off power and inspect wiring for any exposed wires touching each other or metal surfaces. Repair any shorts.</li></ul>

## 8. SPECIFICATIONS

Key technical specifications for the Utilitech White Doorbell (Model 108174).







- **Model Number:** 108174
- **Part Number:** 108174
- **ASIN:** B014FWTJLE
- **Item Weight:** 16 ounces
- **Package Dimensions:** 9.2 x 5.7 x 2 inches
- **Batteries Required:** No
- **Date First Available:** August 25, 2015
- **Color:** White

## 9. WARRANTY AND SUPPORT

Specific warranty details and customer support contact information for the Utilitech White Doorbell are not provided within this manual. Please refer to the product packaging or the retailer's website for information regarding warranty coverage and how to obtain technical support.

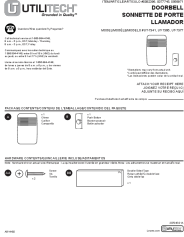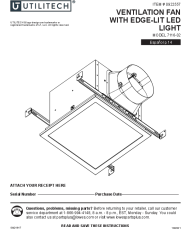

**Related Documents - 108174**

	<p><a href="#">Utilitech Wireless Doorbell Installation Guide and Troubleshooting</a></p> <p>Comprehensive guide for installing and troubleshooting your Utilitech wireless doorbell (models UT-7341, UT-7366, UT-7377). Includes package contents, hardware, safety information, installation steps, tune settings, and warranty details.</p>
	<p><a href="#">Utilitech 7116-02 Ventilation Fan with Edge-Lit LED Light Installation and Operation Manual</a></p> <p>This manual provides detailed instructions for the installation, operation, care, and troubleshooting of the Utilitech 7116-02 Ventilation Fan with Edge-Lit LED Light. It includes product specifications, package contents, safety information, and warranty details.</p>
	<p><a href="#">Utilitech LED Tape Light Quick Reference Guide</a></p> <p>A quick reference guide for the Utilitech LED Tape Light (Model LR0005-LED36K60RGBW), providing essential safety information, preparation steps, installation instructions, care and maintenance tips, warranty details, and troubleshooting solutions for optimal use and longevity.</p>
	<p><a href="#">UTILITECH Halogen Work Light MPL1025-C500K9030 User Guide and Safety Information</a></p> <p>Get detailed instructions, safety warnings, troubleshooting tips, and warranty information for the UTILITECH Halogen Work Light (Model MPL1025-C500K9030). Learn how to safely operate, maintain, and troubleshoot your work light.</p>
	<p><a href="#">Utilitech 12-inch Plug-in LED Undercabinet Light Installation and Safety Guide</a></p> <p>Comprehensive guide for the Utilitech 12-inch Plug-in LED Undercabinet Light (Model MXW1003-LED6K9027), covering preparation, installation, troubleshooting, safety, and warranty information.</p>
	<p><a href="#">UTILITECH 10000mAh Portable Battery User Manual and Specifications</a></p> <p>Comprehensive user manual for the UTILITECH 10000mAh Portable Battery (Model #L338PB002-CS-R). Includes product specifications, what's in the box, troubleshooting, care and maintenance, warranty, and critical safety information.</p>



## TECH BULLETIN TECHNICAL SUPPORT

© 25APR18 Clare Controls, LLC

### Clare Video Doorbell: Compatible Chimes, Digital Doorbells, and Transformers

Last modified: 04/25/18

#### Introduction

The Clare Video Doorbell has been tested and found compatible with the below doorbell chimes (Table 1) and transformers (Table 2).

**Note:** There are currently no Clare Video Doorbell compatible digital doorbells at this time.

Table 1: Clare Video Doorbell compatible chimes

Description	Item Number (store ID)	Manufacturer Model Number
<b>Lowes</b>		
Unibach White Doorbell Kit	72914	UT-2719-02
Unibach White Doorbell	77143	UT-2719-02
Unibach White Doorbell	108114	UT-2725-02
Unibach Satin Nickel Doorbell	81726	UT-2747-02

#### Home Depot

Wired Door Bell Controller Kit	1001436918	216088
Wired Door Bell Deluxe Controller Kit	1001436920	216088

#### Amazon

NuTone LA119H1 Decorative Wired Two-Tone Door Chime, White Textured	8001432720	LA119H1
Bosch BR125L WH NuTone Chime Kit (2 Lighted Push Buttons, 1 Transformer)	800044581	BR125LWH
Heath Zenith SL-2796-02 Basic Series Wired Door Chime, White	800089464	SL-2796-02

Doc ID: 1811 - REV 03

1 / 2

## [\[pdf\]](#) Decleration of Conformity

Product Topic Tech Facts Bulletin YYSSS Patrick Daugherty Compatible Chimes Digital Doorbells and Transformers doorbell chimes Table 1 transformers 2 Lowes Utilitech Multi Color Doorbell Transformer

63548 LE 125C A Clare Video Doc ID 1611 dealer clarecontrols Products Security Access ClareVision Docs REV 03 TECH BULLETIN TECHNICAL SUPPORT © 25APR18 Controls LLC 1611Clare

DoorbellsClare BulletinClare BulletinDoc anddoorbell AClare DOC 1611cdn2 hubspot net hubfs 2972898

Pubs Information ClareVideo Bulletins 1611clarecontrols 1611dealer |||

TECH BULLETIN TECHNICAL SUPPORT 25APR18 Clare Controls, LLC. Clare Video Doorbell: Compatible Chi ... h-Buttons, 1 Transformer Heath Zenith SL-2796-02 Basic Series Wired Door Chime, White 72914 77143 **108174** I9736 1001406918 1001406920 B001EG272I B000VH5ILI B000BPHIK4 Manufacturer Model Number UT-27...

lang:en score:22 filesize: 118.67 K page\_count: 2 document date: 2018-04-25



## TECH BULLETIN TECHNICAL SUPPORT

© 12JUN18 Clare Controls, LLC

### The Clare Video Doorbell no longer supports digital chimes

Last modified: 06/12/18

#### Introduction

Clare Controls has removed support for digital chimes on the Clare Video Doorbell. This decision has been made due to the large variety of digital chimes available on market, a majority which have differing custom configurations with no common standard. Existing digital chimes currently working will continue to function normally. This decision does not affect our continuous support for mechanical chimes.

The following table lists devices known to work with the Clare Video Doorbell. Devices not listed may or may not be compatible.

Table 1: Clare Video Doorbell compatible mechanical chimes

Description	Item Number (store ID)	Manufacturer Model Number
<b>Lowes</b>		
Unibach White Doorbell Kit	72914	UT-2719-02
Unibach White Doorbell	77143	UT-2719-02
Unibach White Doorbell	108114	UT-2725-02
Unibach Satin Nickel Doorbell	81726	UT-2747-02

#### Home Depot

Wired Door Bell Controller Kit	1001436918	216088
Wired Door Bell Deluxe Controller Kit	1001436920	216088

#### Amazon

NuTone LA119H1 Decorative Wired Two-Tone Door Chime, White Textured	8001432720	LA119H1
Bosch BR125L WH NuTone Chime Kit (2 Lighted Push Buttons, 1 Transformer)	800044581	BR125LWH
Heath Zenith SL-2796-02 Basic Series Wired Door Chime, White	800089464	SL-2796-02

Doc ID: 1762 - REV 01

1 / 2

## [\[pdf\]](#) Decleration of Conformity Catalog

Product Topic Tech Facts Bulletin YYSSS Patrick Daugherty Clare Video Doorbell No Longer Supports

Digital Chimes Doc ID 1762 snapav wcsstore ExtendedSitesCatalogAssetStore attachments documents

SmartHome SupportDocuments

TECH BULLETIN TECHNICAL SUPPORT 12JUN18 Clare Controls, LLC. The Clare Video Doorbell no longer s ... h-Buttons, 1 Transformer Heath Zenith SL-2796-02 Basic Series Wired Door Chime, White 72914 77143 **108174** I9736 1001406918 1001406920 B001EG272I B000VH5ILI B000BPHIK4 Manufacturer Model Number UT-27...

lang:en score:19 filesize: 106.84 K page\_count: 2 document date: 2018-06-12