

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ergotron](#) /

› [Ergotron Vertical CPU Holder Instruction Manual \(Model 97-468-216\)](#)

Ergotron 97-468-216

Ergotron Vertical CPU Holder Instruction Manual

Model: 97-468-216

INTRODUCTION

The Ergotron Vertical CPU Holder provides a secure and space-saving solution for mounting your computer's central processing unit (CPU) or power supply. Designed to integrate with VESA monitor arms or directly onto sturdy vertical surfaces, this holder helps maintain an organized workspace by keeping your PC off the desk and out of the way. Its robust steel construction ensures durability and secure retention for a wide range of CPU sizes.

PACKAGE CONTENTS

Before beginning installation, ensure all components are present:

- Vertical CPU Holder assembly
- Mounting hardware (screws, washers, Allen wrench)
- Protective pads (adhesive)



Image: Ergotron Vertical CPU Holder and its components, including the main white holder, mounting screws, an Allen wrench, and protective adhesive pads.

SETUP AND INSTALLATION

This CPU holder can be installed directly onto a sturdy vertical surface or an Ergotron Wall Track. Choose the appropriate method for your setup.

1. Prepare the CPU Holder

1. Apply the provided protective pads to the inner surfaces of the CPU holder where your computer will rest. This prevents scratches and provides a snug fit.
2. Adjust the width of the holder to match your CPU. The holder accommodates PCs from 2 to 8 inches (5 to 20 cm) wide. Use the included fasteners to lock the desired width.

2. Mounting Options

Option A: Direct Wall/Surface Mount

1. Select a sturdy vertical surface capable of supporting the weight of the CPU holder and your computer (up to 40 lbs / 18 kg).
2. Position the CPU holder against the surface at the desired height. Mark the locations for the

mounting screws.

3. Drill pilot holes if necessary, according to the type of surface and mounting hardware.
4. Secure the CPU holder to the surface using the provided screws and an appropriate screwdriver or drill. Ensure it is firmly attached and does not wobble.

Option B: Ergotron Wall Track Mount

1. Ensure you have an Ergotron Wall Track securely installed.
2. Align the mounting holes on the CPU holder with the attachment points on the Ergotron Wall Track.
3. Use the appropriate hardware (often included with the wall track or CPU holder) to attach the holder to the track. Tighten all fasteners to ensure stability.

OPERATING INSTRUCTIONS

Once the CPU holder is securely installed and its width adjusted:

1. Carefully slide your CPU or power supply into the holder.
2. Ensure the CPU is seated firmly and evenly within the holder.
3. If necessary, re-adjust the width fasteners to achieve a snug fit, preventing movement without applying excessive pressure.

The holder is designed for vertical orientation of your CPU, optimizing space and airflow.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your Ergotron CPU Holder.

- **Cleaning:** Wipe the holder with a soft, damp cloth. Avoid abrasive cleaners or solvents that may damage the finish.
- **Fastener Check:** Periodically check all mounting screws and width adjustment fasteners to ensure they remain tight. Re-tighten if any looseness is detected.
- **Pad Inspection:** Inspect the protective pads for wear or damage. Replace if necessary to maintain proper cushioning and grip for your CPU.

TROUBLESHOOTING

Problem	Possible Cause	Solution
CPU holder feels loose after installation.	Mounting screws are not fully tightened or surface is not sturdy.	Ensure all mounting screws are securely tightened. Verify the mounting surface is appropriate and can support the weight.
CPU does not fit or is too loose in the holder.	Width adjustment is incorrect or CPU dimensions are outside the specified range.	Re-adjust the width fasteners to match your CPU's dimensions. Confirm your CPU's width is between 2 and 8 inches (5 to 20 cm).
Scratches on CPU casing.	Protective pads are missing or worn.	Ensure all protective pads are correctly applied and in good condition. Replace if necessary.

SPECIFICATIONS

Feature	Detail
Model Number	97-468-216
Product Dimensions	11.26 x 10.35 x 7.4 inches (28.6 x 26.3 x 18.8 cm)
Item Weight	1.98 pounds (0.9 kg)
CPU Width Capacity	2 to 8 inches (5 to 20 cm)
Weight Capacity	Up to 40 lbs (18 kg)
Material	Steel construction
Color	White

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available for this specific model at this time.

WARRANTY INFORMATION

For detailed warranty information regarding your Ergotron Vertical CPU Holder, please refer to the official Ergotron website or contact Ergotron customer support directly. Warranty terms and conditions may vary by region and product.

CUSTOMER SUPPORT

If you require assistance with installation, troubleshooting, or have any questions about your Ergotron Vertical CPU Holder, please contact Ergotron customer support. Visit the official Ergotron website for contact details and support resources.

You can also visit the [Ergotron Store on Amazon](#) for more product information.