

## TecTake 401541

# TecTake XXL Double Garden Hammock Chair User Manual

Model: 401541 | Brand: TecTake

## 1. PRODUCT OVERVIEW

The TecTake XXL Double Garden Hammock Chair is designed to provide a comfortable and relaxing experience in your garden or outdoor space. Its generous lying surface and flexible fabric adapt to your body, ensuring maximum comfort. The robust wooden bar and anti-slip protection enhance safety, while the included storage bag allows for easy transport and space-saving storage.



Image 1.1: The TecTake XXL Double Garden Hammock Chair, showing its vibrant multi-color fabric and the included carry bag for convenient storage and portability.

## 2. SAFETY INSTRUCTIONS

---

Please read and understand all safety instructions before using the hammock chair. Failure to follow these instructions may result in injury or damage to the product.

- **Maximum Load Capacity:** Do not exceed the maximum load capacity of 150 kg (approximately 330 lbs). Overloading can cause the hammock to break, leading to falls and serious injury.
- **Secure Installation:** Ensure the hammock chair is securely attached to a stable and strong anchor point capable of supporting the maximum load capacity plus dynamic forces from swinging.

- **Clearance:** Maintain adequate clearance around the hammock chair to prevent collisions with walls, furniture, or other objects. Recommended ground clearance is approximately 40 to 50 cm (15.7 to 19.7 inches).
- **Regular Inspection:** Before each use, inspect the hammock fabric, ropes, wooden bar, and suspension hardware for any signs of wear, fraying, cracks, or damage. Do not use if any damage is found.
- **Children Supervision:** Children should always be supervised when using the hammock chair.
- **Avoid Sharp Objects:** Keep sharp objects away from the hammock fabric to prevent tears.
- **Weather Conditions:** Do not use the hammock chair during strong winds, storms, or heavy rain. Store indoors during adverse weather conditions and off-season.
- **Proper Use:** Use the hammock chair for its intended purpose only. Avoid standing, jumping, or excessive swinging.

### 3. PACKAGE CONTENTS

---

Carefully unpack the box and ensure all items are present and in good condition. If any parts are missing or damaged, please contact customer support.

- 1 x Hammock Chair with Stabilizing Bar
- 1 x Suspension Swivel
- 1 x Storage Bag



## 4. SETUP AND INSTALLATION

---

Follow these steps to set up your TecTake XXL Double Garden Hammock Chair:

1. **Choose a Location:** Select a sturdy overhead support point, such as a strong tree branch, a robust ceiling beam, or a dedicated hammock stand. Ensure the support can safely hold at least 150 kg.
2. **Attach Suspension:** Use a strong, secure hook or carabiner (not included, unless part of your chosen mounting kit) to attach the suspension swivel to your chosen support point. Ensure the hook is rated for outdoor use and sufficient weight.
3. **Connect Hammock:** Connect the suspension swivel at the top of the hammock chair's ropes to the hook on your support point. The swivel allows for free rotation and prevents twisting of the ropes.
4. **Check Height:** Once suspended, ensure the bottom of the hammock chair is approximately 40 to 50 cm (15.7 to 19.7 inches) from the ground. Adjust the suspension point or use an extension chain/rope if necessary to achieve the ideal height.
5. **Final Check:** Before first use, gently apply weight to the hammock to test the stability of the installation. Ensure all connections are tight and secure.



Image 4.1: A detailed view of the robust wooden spreader bar and the durable metal suspension ring, highlighting the quality of the attachment points for secure installation.

## 5. OPERATING INSTRUCTIONS

---

Using your TecTake XXL Double Garden Hammock Chair is simple and intuitive:

- **Entering the Hammock:** Carefully sit into the center of the hammock chair. The flexible fabric will adapt to your body shape, providing a comfortable and supportive seat.
- **Relaxation:** Enjoy the gentle swaying motion. The design allows for both sitting upright and reclining comfortably.
- **Exiting the Hammock:** Lean forward slightly and place your feet on the ground to safely exit the hammock chair.





Image 5.1: A woman comfortably seated in the hammock chair, demonstrating its spacious and relaxing design for individual use.



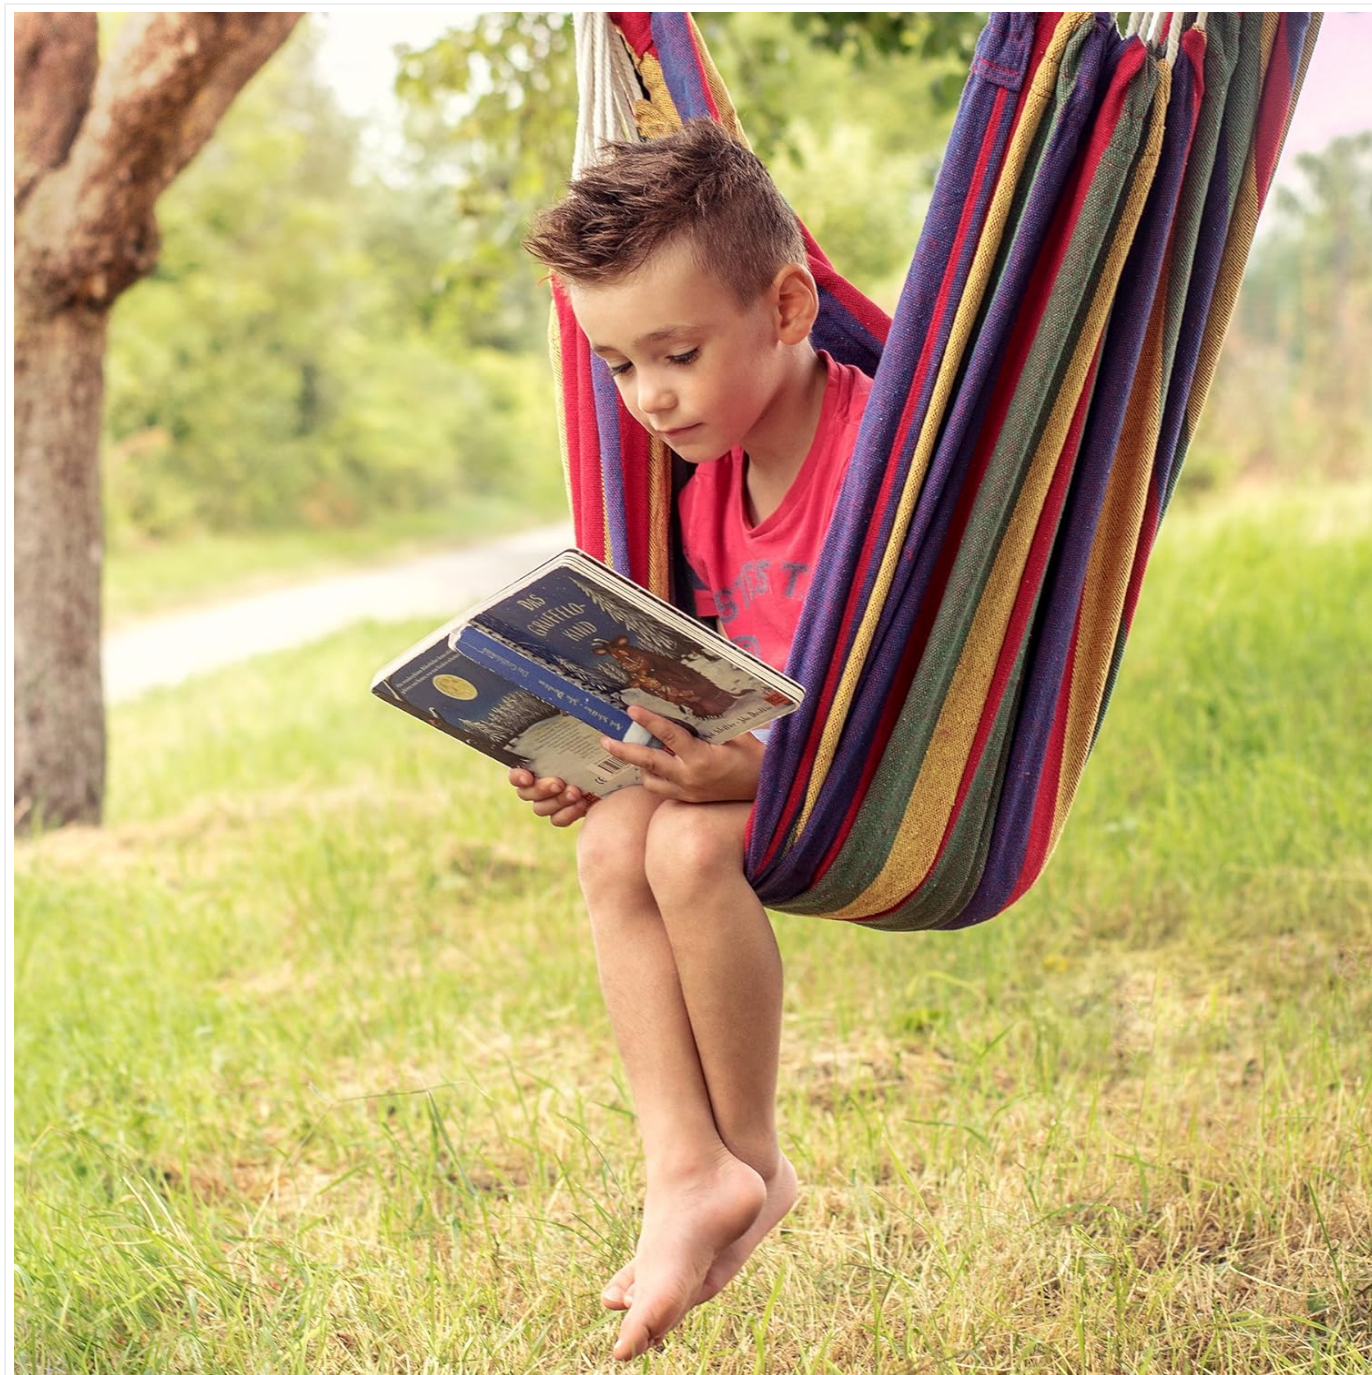


Image 5.2: A child engrossed in a book while seated in the hammock chair, illustrating its appeal and comfort for younger users.

## 6. MAINTENANCE AND CARE

---

Proper care will extend the life of your hammock chair:

- **Cleaning:** The fabric is hand washable at 30°C (86°F). Use mild soap and water. Do not bleach.
- **Drying:** Air dry completely before storing to prevent mildew.
- **Storage:** When not in use, especially during prolonged periods or adverse weather, store the hammock chair in its included storage bag in a dry, cool place away from direct sunlight.
- **Wood Care:** The wooden bar can be wiped clean with a damp cloth. Periodically check for splinters or cracks and sand if necessary.
- **Metal Parts:** The metal swivel should be kept clean and dry. If rust appears, clean with a wire brush and apply a rust-inhibiting spray.





Image 6.1: A close-up view of the hammock chair's multi-colored fabric, showcasing its weave and vibrant stripes, which are easy to maintain with hand washing.

## 7. SPECIFICATIONS

Product Dimensions (L x W)	Approx. 185 x 125 cm (72.8 x 49.2 inches)
Bar Dimensions (L x Ø)	Approx. 100 x 4 cm (39.4 x 1.6 inches)
Storage Bag Dimensions (L x W x H)	100 x 14 x 9 cm (39.4 x 5.5 x 3.5 inches)
Recommended Ground Clearance	Approx. 40 to 50 cm (15.7 to 19.7 inches)
Maximum Load Capacity	150 kg (330 lbs)
Weight	Approx. 2.6 kg (5.7 lbs)
Materials	Wood, 65% Cotton, 35% Polyester



Color	Multi-color
Model Number	401541

## 8. TROUBLESHOOTING

If you encounter any issues with your hammock chair, refer to the following common solutions:

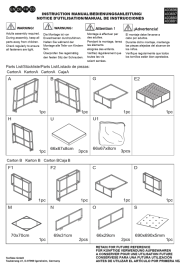
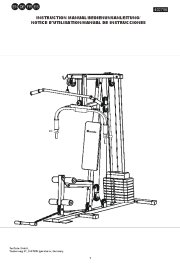

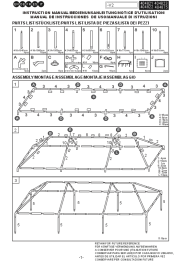


Problem	Possible Cause	Solution
Hammock feels unstable or sways excessively.	Improper installation; anchor point not secure.	Re-check the security of your anchor point. Ensure it is rated for the hammock's weight and dynamic forces. Verify all connections are tight.
Hammock is too low or too high.	Incorrect suspension height.	Adjust the height of the suspension point. You may need an extension chain or rope to lower it, or a higher anchor point to raise it. Aim for 40-50 cm ground clearance.
Fabric appears dirty or stained.	Normal outdoor use; spills.	Hand wash the fabric at 30°C with mild soap. Air dry completely.
Ropes or fabric show signs of wear.	Aging; exposure to elements; excessive use.	Discontinue use immediately. Replace worn components or the entire hammock chair if safety is compromised. Regular inspection and proper storage can prevent premature wear.

## 9. WARRANTY AND SUPPORT

TecTake products are manufactured with quality and durability in mind. For information regarding warranty coverage, product support, or to purchase replacement parts, please visit the official TecTake website or contact their customer service department. Keep your purchase receipt as proof of purchase.

**Online Resources:** [www.tectake.de](http://www.tectake.de) (Please note: This link is for informational purposes and may not be the exact support page.)



	<p><a href="#">TecTake Rattan Garden Furniture Assembly Instructions</a></p> <p>Comprehensive assembly instructions for TecTake rattan garden furniture sets, including a detailed parts list and step-by-step visual guidance. Model numbers: 403696, 403697, 403880, 403881.</p>
	<p><a href="#">TecTake 402756 Home Gym Assembly and Exercise Guide</a></p> <p>Instruction manual for the TecTake 402756 home gym, covering assembly, safety precautions, and exercise guidance. Includes preparation tips and warm-up/cool-down routines.</p>
	<p><a href="#">TecTake 400777 Semi-Automatic Washing Machine User Manual and Instructions</a></p> <p>This user manual provides comprehensive instructions for the TecTake 400777 semi-automatic washing machine, covering installation, operation, safety guidelines, and maintenance. Learn how to effectively wash and spin your clothes with this efficient appliance.</p>
	<p><a href="#">tectake Gazebo Instruction Manual - Assembly Guide</a></p> <p>Comprehensive instruction manual for assembling and maintaining your tectake gazebo. Includes parts list, step-by-step assembly, location advice, care instructions, and contact information.</p>
	<p><a href="#">2-in-1 Grass Shear / Hedge Trimmers WIRELESS BATTERY LI-ION 7.2V - User Manual</a></p> <p>Comprehensive user manual for the 2-in-1 Grass Shear / Hedge Trimmers WIRELESS BATTERY LI-ION 7.2V (Model 401542). Includes technical specifications, intended use, safety warnings, operating instructions, maintenance, and troubleshooting.</p>
	<p><a href="#">Roller Blind Installation Manual</a></p> <p>Comprehensive instruction manual for the installation of a roller blind, including parts list, assembly steps, and contact information for tectake.</p>