

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Hoover](#) /
- › [Hoover Air Lift Deluxe Bagless Upright Vacuum UH72511PC User Manual](#)

Hoover UH72511PC

Hoover Air Lift Deluxe Bagless Upright Vacuum UH72511PC User Manual

Model: UH72511PC

1. INTRODUCTION

The Hoover Air Lift Deluxe is a versatile bagless upright vacuum cleaner designed for comprehensive home cleaning. It transitions between an upright vacuum for floor cleaning and a lift-away canister for cleaning stairs, ceilings, and hard-to-reach areas. This model features WindTunnel 3 Technology, which utilizes three channels of suction to effectively lift and remove embedded dirt and surface debris. It also includes Allergen Block Technology to capture common allergens.



Figure 1: Hoover Air Lift Deluxe Bagless Upright Vacuum UH72511PC

2. IMPORTANT SAFETY INFORMATION

Before operating this appliance, read all instructions thoroughly. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the vacuum cleaner from the electrical outlet before cleaning or servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.

- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.

3. ASSEMBLY

The Hoover Air Lift Deluxe requires minor assembly before first use. A Phillips head screwdriver is needed for one screw.

1. **Attach Handle:** Insert the handle into the top of the main unit until it clicks securely into place. Ensure it is fully seated.
2. **Secure Power Head Holder:** Attach the Power Head Holder to the handle using a Phillips head screwdriver and the provided screw. This holder keeps the power head attachment accessible.
3. **Connect Hose:** Connect the flexible hose to the designated port on the vacuum body. Ensure a tight connection for optimal suction.
4. **Attach Accessories:** Snap the various cleaning attachments onto their storage locations on the vacuum. These attachments are designed to fit firmly.

4. OPERATING INSTRUCTIONS

4.1 Upright Mode

For general floor cleaning, use the vacuum in its upright configuration. The steerable floor head allows for easy maneuvering around furniture and obstacles. The WindTunnel 3 Technology ensures deep cleaning on carpets and effective debris pickup on hard floors without scattering.

4.2 Lift-Away Canister Mode

To clean above-floor areas, stairs, or tight spaces, detach the lift-away canister. Simply press the release button and lift the canister from the main unit. This allows for portable cleaning with the hose and attachments.



Figure 2: Cleaning high areas with the lift-away canister and extension wand.



Figure 3: Cleaning stairs with the portable lift-away canister.

4.3 Floor Type Selection

The vacuum can switch between carpet and hard floor cleaning modes with the touch of a button. This adjusts the brush roll speed or turns it off to prevent damage to delicate surfaces and optimize cleaning performance.

4.4 Using Attachments

A variety of onboard tools are available for specialized cleaning tasks. Connect them to the end of the hose or extension wand in lift-away mode.

- **Pet Hair Tool:** Ideal for removing pet hair from upholstery and stairs.
- **Dusting Tool:** Use for dusting delicate surfaces, shelves, and ceiling fans.
- **Crevice Tool:** Perfect for reaching into tight corners, edges, and between cushions.





Figure 4: Detached canister with hose and brush attachment.



Figure 5: Using the dusting tool for high-reach cleaning.



Figure 6: Removing pet hair from upholstery with the specialized tool.

4.5 Product Features Demonstration Video

Your browser does not support the video tag.

Video 1: This video demonstrates the key features of the Hoover Air Lift Deluxe, including its transition from upright to lift-away mode, maneuverability, and effective cleaning on various surfaces with different attachments.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

5.1 Emptying the Dirt Cup

Empty the dirt cup when debris reaches the 'Max Fill' line or after each use. To empty, detach the dirt cup from the vacuum, position it over a trash receptacle, and press the release button on the bottom to open the trap door. The dirt cup can also be twisted apart for more thorough cleaning if needed.

5.2 Cleaning Filters

The vacuum features a pre-motor filter and a HEPA filter, both crucial for maintaining suction and air quality.

- **Pre-Motor Filter:** This filter is located above the dirt cup. It can be easily removed, rinsed under running water, and must be allowed to air dry completely for at least 24 hours before reinstallation.
- **HEPA Filter:** Located behind a removable grill on the front of the vacuum. This filter should be tapped clean to remove dust. **Do not wash the HEPA filter.** Replace it periodically as recommended by the manufacturer.

6. TROUBLESHOOTING

If your vacuum cleaner is not performing as expected, consult the following common issues:

- **No Power:** Check if the power cord is securely plugged into a working outlet. Verify if the circuit breaker has tripped.
- **Loss of Suction:** Ensure the dirt cup is not full and is properly seated. Check all filters (pre-motor and HEPA) for clogs and clean them as instructed. Inspect the hose, wand, and attachments for any blockages.
- **Brush Roll Not Spinning:** Check for obstructions around the brush roll, such as tangled hair or debris. Ensure the vacuum is in the correct mode for carpet cleaning (brush roll engaged).
- **Vacuum Tips Over When Using Hose:** This can occur if the main unit is not stable. Ensure the vacuum is placed on a flat, stable surface when using the hose, or hold the main unit for support.

7. SPECIFICATIONS

Brand	Hoover
Model Name	Hoover Vacuum Cleaner Air Lift Deluxe Bagless Corded Upright Vacuum UH72511PC
Model Number	UH72511PC
Form Factor	Upright
Vacuum Collection Technology	Cyclonic, Bagless
Power Source	Corded Electric
Wattage	1320 watts
Amperage	11 Amps
Motor Horsepower	1.77 Horsepower
Capacity	1 Liters (Dirt Cup)
Hose Length	9.5 Inches
Product Dimensions	34.7"L x 12"W x 34.7"H
Item Weight	17.1 pounds
Noise Level	80 Decibels
Filter Type	S (HEPA)
Surface Recommendation	Carpet, Hard Floors
Assembly Required	Yes

8. WARRANTY AND SUPPORT

This Hoover Air Lift Deluxe Bagless Upright Vacuum (Model UH72511PC) is backed by a **5-year limited warranty**. For warranty claims, technical support, or to purchase replacement parts, please refer to the contact information provided in your product packaging or visit the official Hoover website.

