

Soundmaster UR200WE

Soundmaster UR200 White Alarm Clock Radio User Manual

 
Model: UR200WE

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Soundmaster UR200 White Alarm Clock Radio. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage.

The Soundmaster UR200 is a versatile alarm clock radio featuring PLL FM radio, a dimmable display, dual alarms with weekend function, and various alarm modes including radio or buzzer. It also includes convenient sleep and snooze functions, along with a date display.

PRODUCT OVERVIEW

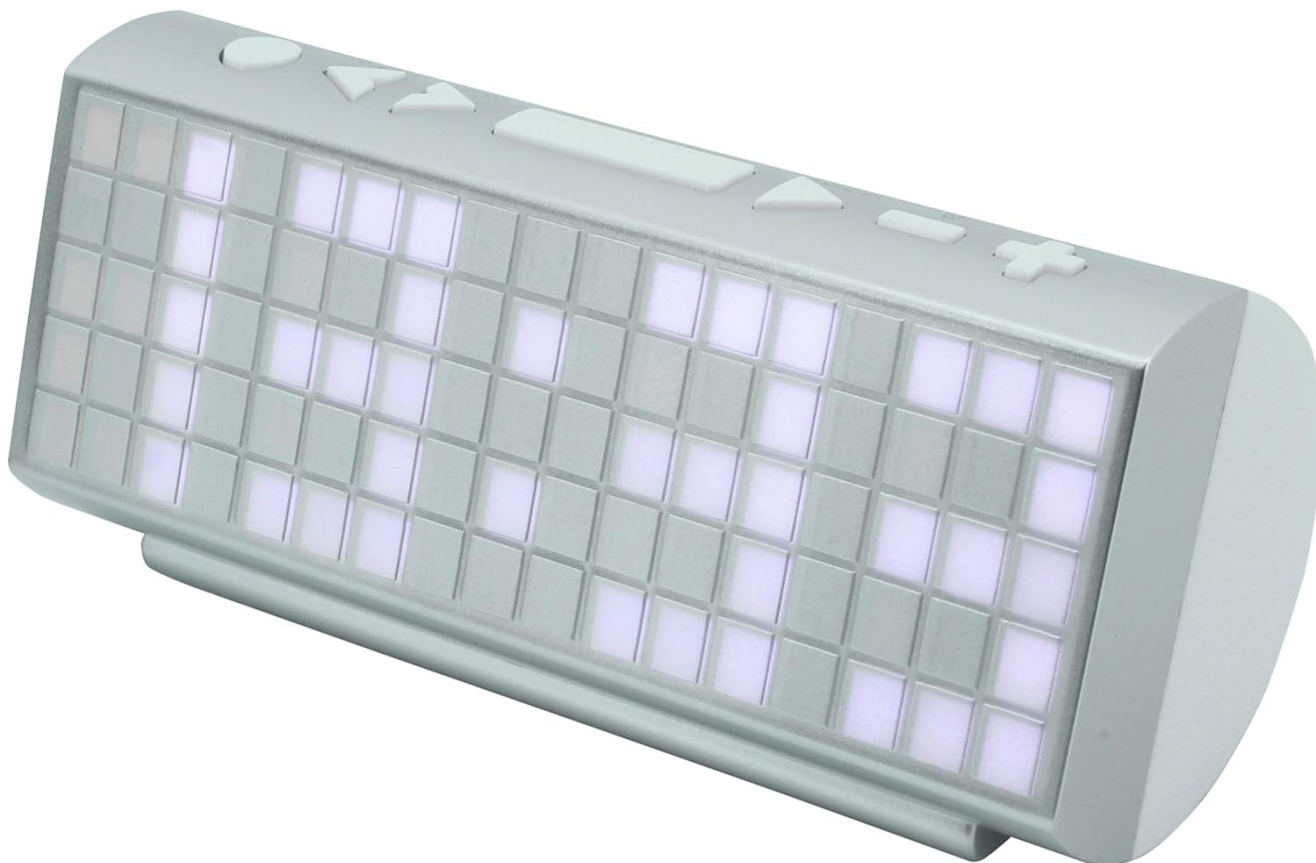

Front view of the Soundmaster UR200, showcasing its large, illuminated digital display and control buttons on top.



Angled view of the Soundmaster UR200, highlighting the sleek design and the arrangement of control buttons on the top panel.



Left side view of the Soundmaster UR200, showing its compact profile.

Key Features:

- PLL FM Radio with 10 preset stations
- Dimmable display brightness
- Two programmable alarms with weekend function; wake up with radio or buzzer
- NAP timer - Sleep function - Snooze function
- Date display

SETUP

1. Power Connection:

Connect the provided power adapter to the DC input jack on the back of the UR200. Plug the adapter into a standard wall outlet (AC 230V ~ 50Hz). The unit will power on and the display will illuminate.

2. Battery Backup (Optional):

For time and alarm settings backup during power outages, insert 2 x AAA batteries (not included) into the battery compartment located on the bottom of the unit. Ensure correct polarity (+/-) when inserting batteries.

3. Antenna Setup:

Extend the FM wire antenna fully for optimal radio reception. Adjust its position to improve signal clarity if needed.

OPERATING INSTRUCTIONS

1. Setting the Time:

1. In standby mode, press and hold the **TIME SET** button. The hour digits will flash.
2. Use the **HOUR** and **MINUTE** buttons to adjust the time.
3. Press **TIME SET** again to confirm and exit.

2. Setting Alarms (Alarm 1 & Alarm 2):

1. Press and hold the **ALARM 1** or **ALARM 2** button. The alarm time will flash.
2. Use the **HOUR** and **MINUTE** buttons to set the desired alarm time.
3. Press the respective **ALARM** button again to select the alarm source (Radio or Buzzer). An icon will appear on the display.
4. Press the **ALARM** button one more time to activate/deactivate the alarm.

3. FM Radio Operation:

1. Press the **POWER** button to turn on the radio.
2. Press the **TUNING +/-** buttons to manually tune to a station.
3. Press and hold **TUNING +/-** for automatic scanning to the next available station.
4. To save a preset station: Tune to the desired station, then press and hold the **PRESET** button until the preset number flashes. Use **PRESET +/-** to select a preset number (1-10), then press **PRESET** again to confirm.
5. To recall a preset station: Press the **PRESET** button repeatedly to cycle through saved stations.

4. Snooze and Sleep Functions:

- **Snooze:** When the alarm sounds, press the **SNOOZE** button to temporarily silence the alarm for approximately 9 minutes.
- **Sleep:** While the radio is playing, press the **SLEEP** button repeatedly to set a sleep timer (e.g., 90, 60, 30, 15 minutes). The radio will automatically turn off after the selected time.

5. Display Brightness:

Press the **DIMMER** button to cycle through different display brightness levels (High, Low, Off).

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Storage:** If the unit will not be used for an extended period, disconnect it from the power outlet and remove the backup batteries. Store in a cool, dry place.
- **Battery Replacement:** Replace backup batteries annually or when the display shows signs of dimming during a power outage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Power adapter not connected or faulty.	Ensure power adapter is securely plugged into the unit and a working wall outlet.
Poor FM reception.	Antenna not extended or poor signal area.	Fully extend the FM wire antenna and reposition it for better reception. Try moving the unit to a different location.
Alarm does not sound.	Alarm not activated or set incorrectly.	Verify alarm time and source are set correctly. Ensure the alarm icon is displayed. Check volume level if radio alarm is selected.
Display is too bright/dim.	Brightness setting needs adjustment.	Press the DIMMER button to cycle through brightness levels.

SPECIFICATIONS

Feature	Detail
Brand	Soundmaster
Model Number	UR200WE
Color	White
Product Dimensions (L x W x H)	30 x 20 x 20 cm (approx. 11.8 x 7.9 x 7.9 inches)
Item Weight	560 g (approx. 1.23 lbs)
Material	Plastic (Acrylonitrile Butadiene Styrene frame)
Power Source	Mains powered (AC adapter), Battery powered (for backup)
Voltage	3 Volts (for battery backup)
Special Features	Calendar, Alarm function, Integrated speaker, Volume control
Radio Type	PLL FM Radio
Preset Stations	10
Display	Dimmable LED display
Alarm Functions	Dual programmable alarms, Weekend function, Radio/Buzzer wake-up, NAP timer, Snooze, Sleep

 
Soundmaster products are designed for reliability and performance. For warranty information, please refer to the warranty card included with your purchase or visit the official Soundmaster website. Keep your proof of purchase for any warranty claims.

For technical support, troubleshooting assistance beyond this manual, or spare parts inquiries, please contact Soundmaster customer service. Contact details can typically be found on the manufacturer's website or on the product packaging.

Manufacturer: Soundmaster
Country of Origin: Germany


© 2024 Soundmaster. All rights reserved.
This manual is subject to change without notice.

Documents - Soundmaster – UR200WE

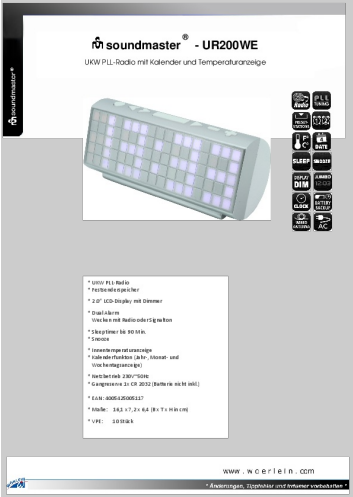

[pdf] Safety Datasheet

PR UR200WE DE gs Schuh soundmaster Sleep timer bis 90 Min * Snooze Innentemperaturanzeige
Kalenderfunktion Jahr Monat und Wochentagsanzeige Netzbetrieb 230V~50Hz Soundmaster Technische
Details 0bec65 cdn billiger dynamisch i5Z vZyJRptlRt9V362 Wpt4H9rycHjeBa9LTdXG2DAnNeXDpGzs
2rfg1F2Xe 9sWP3 AbY5T6uz Mvm0sDSA |||
soundmaster - **UR200WE** UKW PLL-Radio mit Kalender und Temperaturanzeige *
UKW PLL-Radio * Festsenderspeicher * 2.0 LCD-Display mit Dimmer * Dual Alarm
Wecken mit Radio oder Signalton * Sleep timer bis 90 Min. * Snooze *
Innentemperaturanzeige * Kalenderfunktion Jahr-, Monat- und Wochentagsanzeige * ...
lang: score:31 filesize: 220.35 K page_count: 1 document date: 2015-10-26

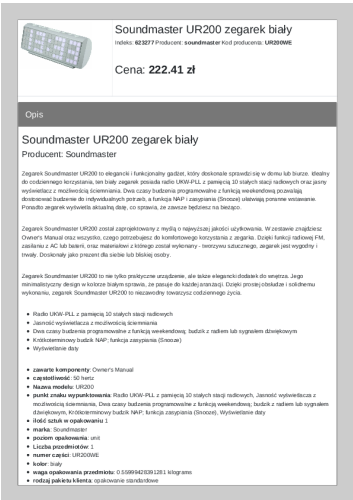 

[pdf] User Manual Owner's Manual

Soundmaster UR200 zegarek biały Sklep internetowy stylem pl soundmaster ur200 biały 623277 upload
files product |||
Soundmaster UR200 zegarek biały Indeks: 623277 Producent: soundmaster Kod
producenta: **UR200WE** Cena: 222.41 zł Opis Soundmaster UR200 zegarek biały
Producent: Soundmaster Zegarek Soundmaster UR200 to elegancki i funkcjonalny
gadget, który doskonale sprawdzi się w domu lub biurze. Idealny do codziennego ...
lang:pl score:30 filesize: 129.57 K page_count: 2 document date: 2025-01-29




[\[pdf\]](#) Datasheet

UR200WE soundmaster® Jumbo FM PLL Radio with Temperature Display 10 Preset Station 50 mm 2 segments Dimmer Dual Alarm Weekend Function PR EN soundmaster de media woerlein Datasheets PRESET STATIONS View |||

UR200WE Jumbo FM-PLL Radio with Temperature Display Technical Features: FM-PLL Radio 10 Preset Station 50 mm / 2 segments Display with Dimmer Dual Alarm with Weekend Function Wake-up by Radio or Buzzer NAP Alarm Sleep Snooze Date announcement Battery back-up 1 x 3V CR2032 Battery Batter...

 lang:pl **score:24** filesize: 3.18 M page_count: 1 document date: 2021-07-19

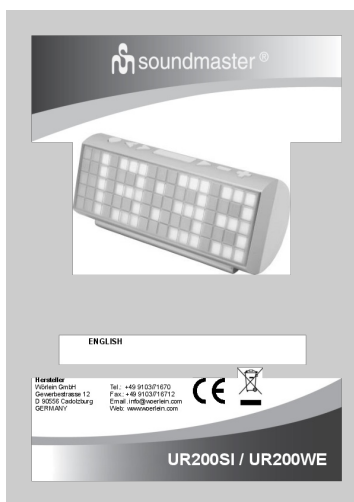

[\[pdf\]](#) User Manual Instructions

LOCATION OF CONTROLS alina SoundMaster UR200SI Radio alarm clock FM Silver Manual 001424961ML02 asset conrad media10 add 160267 c1 en |||

ENGLISH Hersteller Wrlein GmbH Gewerbestrasse 12 D 90556 Cadolzburg GERMANY Tel.: 49 9103/71670 Fax.: 49 9103/716712 Email. info woerlein.com Web: www.woerlein.com UR200SI / **UR200WE** ENVIRONMENTAL PROTECTION Do not dispose of this product with the normal household waste at the end of its life ...


lang:en **score:22** filesize: 931.62 K page_count: 11 document date: 2016-03-02



[\[pdf\]](#)

Herunterladen Pro AV Multimedia Audio Radio Streaming Radios Soundmaster SCD2120GR Grün NewStore GmbH Support index dispatch attachments getfile attachment id 6465 shop newstore ch ||| 50 Jahre electronic 2018/19 Inhalt 2018/19 2 www.woerlein.com Bluetooth DAB Internet 2018 ... Battery Back-up for Clock 1x CR2032 Battery not incl. AC 230V 50Hz UR105GR UR105HBR UR105WE **UR200WE** UR200SI UR200 Jumbo UKW-PLL Radio mit Temperaturanzeige Jumbo FM-PLL Radio with Temperatur...

 lang:de **score:14** filesize: 9.26 M page_count: 68 document date: 2018-02-15

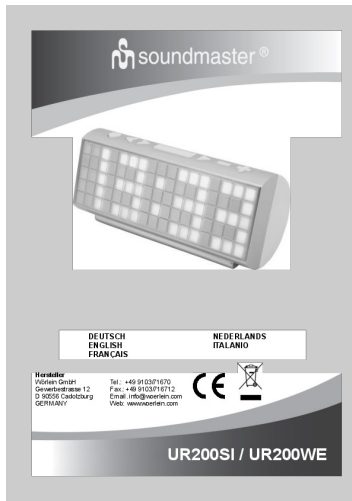

[\[pdf\]](#)

LOCATION OF CONTROLS alina Download Radiowecker mit Jumbo Anzeige günstig bei EUROtops
bestellen AM 27467 BA Eurotops DEU 01 eurotops ch out media pim |||

DEUTSCH ENGLISH FRANCAIS Hersteller Woerlein GmbH Gewerbebestrasse 12 D 90556
Cadolzburg GERMANY Tel.: 49 9103/71670 Fax.: 49 9103/716712 Email. info
woerlein.com Web: www.woerlein.com NEDERLANDS ITALIANO UR200SI /

UR200WE Dieses Symbol zeigt an, dass im Inneren des Gerätes gefährliche
Spannungen v...

lang:de score:13 filesize: 941.61 K page_count: 10 document date: 2015-12-08