

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [iBall](#) /

> [iBall Nightingale K9 4.1 Channel Multimedia Speakers User Manual](#)

iBall Nightingale K9

iBall Nightingale K9 4.1 Channel Multimedia Speakers User Manual

Model: Nightingale K9

1. INTRODUCTION

Thank you for purchasing the iBall Nightingale K9 4.1 Channel Multimedia Speakers. This manual provides important information regarding the setup, operation, maintenance, and troubleshooting of your new speaker system. Please read this manual thoroughly before using the product to ensure proper function and safety.

2. SAFETY INFORMATION

To prevent fire, electric shock, or product damage, please observe the following safety guidelines:

- Do not expose this appliance to rain or moisture.
- Do not place objects filled with liquids, such as vases, on the apparatus.
- Ensure proper ventilation. Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.

3. PRODUCT OVERVIEW

The iBall Nightingale K9 is a 4.1 channel multimedia speaker system designed to deliver powerful sound with deep bass. It features a stunning design with rosewood finishing and offers multiple connectivity options for versatile audio playback.

Key Features:

- 4.1 Channel Speaker System
- Fully remote controlled operation
- LED display for easy navigation
- Multiple input options: USB, SD/MMC Card, AUX
- Built-in FM radio with auto-tuning
- Wooden encased woofer and satellites for enhanced sound quality
- Bluetooth connectivity (Version V2.1) for wireless audio streaming
- Output Power: 3W RMS (*Note: This value typically refers to individual satellite output. Total system RMS output may be higher.*)
- Frequency Response: 200Hz to 18kHz

Package Contents:

- 1 x Woofer Unit
- 4 x Satellite Speakers
- 1 x Remote Control
- 1 x Audio Input Cable (AUX)
- 1 x User Manual



Figure 1: iBall Nightingale K9 4.1 Channel Multimedia Speakers system showing the main woofer unit and satellite speakers.

4. SETUP

4.1 Unpacking

Carefully remove all components from the packaging. Ensure all items listed in the "Package Contents" section are present and undamaged. Keep the packaging for future transport or storage.

4.2 Speaker Placement

For optimal sound experience, place the woofer on the floor, preferably in a corner or against a wall to enhance bass. Position the four satellite speakers around your listening area. For a 4.1 setup, two satellites can be placed at the front (left and right of your display) and two at the rear.

4.3 Connecting the Speakers

1. Connect the satellite speaker cables to the corresponding output ports on the rear panel of the woofer unit. Ensure a secure connection for each satellite.
2. Connect the audio input cable (AUX) from your audio source (e.g., computer, smartphone) to the AUX input port on the woofer unit.

4.4 Power Connection

Plug the power cord of the woofer unit into a standard AC power outlet. Ensure the power switch on the back of the woofer is in the OFF position before plugging it in.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Flip the power switch on the rear panel of the woofer unit to the ON position. The LED display on the front panel will illuminate. To turn off, flip the switch back to the OFF position.

5.2 Input Mode Selection

Press the "MODE" button on the front panel of the woofer or on the remote control to cycle through available input modes: AUX, USB, SD/MMC, FM, and Bluetooth.

5.3 Volume Control

Adjust the master volume using the rotary knob on the front panel of the woofer or the "VOL+" and "VOL-" buttons on the remote control.

5.4 Bluetooth Operation

1. Switch the speaker system to Bluetooth mode. The LED display will show "BT" and a pairing indicator will flash.
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.) and search for available devices.
3. Select "iBall Nightingale K9" from the list of found devices.
4. Once paired, the speaker will emit a confirmation tone, and the Bluetooth indicator will stop flashing. You can now play audio wirelessly from your device.
5. Use the remote control to play/pause, skip tracks, and adjust volume.

5.5 USB/SD/MMC Card Playback

1. Insert a USB drive or SD/MMC card into the respective slot on the front panel.
2. The system will automatically switch to USB or SD/MMC mode and begin playing audio files. If not, press the "MODE" button to select the correct input.
3. Use the remote control for playback functions such as play/pause, next track, previous track, and direct track selection.

5.6 FM Radio Operation

1. Switch the speaker system to FM mode.

2. Press and hold the "PLAY/PAUSE" button on the remote control or front panel to initiate an automatic channel scan. The system will scan and save available FM stations.
3. Use the "PREV" and "NEXT" buttons on the remote control to navigate through the saved FM stations.

5.7 AUX Input

Connect your audio device (e.g., MP3 player, TV) to the AUX input port on the woofer unit using the provided audio cable. Switch the speaker system to AUX mode. Audio from your connected device will now play through the speakers.

6. MAINTENANCE

6.1 Cleaning

Wipe the speaker surfaces with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Ensure the unit is unplugged from the power outlet before cleaning.

6.2 Storage

If storing the speakers for an extended period, unplug them from the power source and store them in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to use the original packaging for storage.

6.3 Battery Care (Remote Control)

The remote control uses batteries. If the remote control's range decreases or it stops responding, replace the batteries with new ones of the same type. Dispose of used batteries responsibly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power switch off; Power outlet faulty.	Ensure power cord is securely plugged in; Turn power switch ON; Try a different power outlet.
No sound	Volume too low; Incorrect input mode selected; Audio cable loose/damaged; Device not playing audio.	Increase volume; Select correct input mode (AUX, BT, USB, SD, FM); Check audio cable connections; Ensure connected device is playing audio.
Bluetooth pairing failure	Speaker not in pairing mode; Device Bluetooth off; Device too far; Interference.	Ensure speaker is in BT mode and flashing; Turn on device Bluetooth; Move device closer; Avoid other wireless devices.
USB/SD card not recognized	Card/drive improperly inserted; Unsupported file format; Corrupted media.	Reinsert card/drive correctly; Ensure files are in supported format (e.g., MP3); Try a different USB/SD card.
Poor FM reception	Weak signal; Antenna not extended/positioned correctly.	Extend the FM antenna fully; Reposition the antenna for better signal; Perform auto-scan again.

8. SPECIFICATIONS

Feature	Specification
Brand	iBall

Feature	Specification
Model Name	Nightingale K9
Speaker Type	4.1 Channel Multimedia Speakers (Bookshelf)
Audio Output Mode	Surround
Connectivity Technology	Auxiliary, Bluetooth, USB
Bluetooth Version	V2.1
Speaker Maximum Output Power	3 Watts (<i>Note: This value typically refers to individual satellite output. Total system RMS output may be higher.</i>)
Frequency Response	200Hz to 18kHz
Product Features	Built-in Microphone, Radio, Remote Control, SD Card Slot, Subwoofer
Controller Type	Remote Control, Touch (on unit)
Compatible Devices	Smartphone, Tablet, PC, MP3 Player
Power Source	Battery Powered (<i>Note: This may refer to the remote control or a specific component, as 4.1 systems typically require AC power for the main unit.</i>)
Colour	Wooden
Item Weight	10.27 Pounds (approx. 4.66 kg)
Waterproof	TRUE (<i>Note: While listed, it is generally advised to keep electronic devices away from water.</i>)

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official iBall website. Do not attempt to repair the product yourself, as this may void your warranty. For further assistance, please contact iBall customer support.