

[Manuals.plus](#) /

> [JBL](#) /

> JBL Xtreme Portable Wireless Bluetooth Speaker User Manual

JBL JBLXTREMEBLKUS

JBL Xtreme Portable Wireless Bluetooth Speaker User Manual

Model: JBLXTREMEBLKUS

INTRODUCTION

The JBL Xtreme is a powerful portable Bluetooth speaker designed to deliver dynamic and immersive stereo sound. Featuring a splashproof design, it is suitable for various environments, from indoor gatherings to outdoor adventures. With its robust battery, it not only provides extended playtime but also doubles as a power bank to charge your mobile devices.

This manual provides comprehensive instructions for setting up, operating, and maintaining your JBL Xtreme speaker, ensuring you get the most out of its features.

WHAT'S IN THE BOX

- JBL Xtreme Portable Wireless Bluetooth Speaker (Black)
- Power Adapter
- Shoulder Strap
- Quick Start Guide (not included in this manual)
- Safety Sheet (not included in this manual)



Image: The JBL Xtreme speaker shown alongside its power adapter, illustrating the main components included in the package.

PRODUCT OVERVIEW

Controls and Indicators



Image: Top view of the JBL Xtreme speaker, highlighting the control buttons: Bluetooth, Volume Down, Power, JBL Connect, Volume Up, and Play/Pause.

- 1. Bluetooth Button:** Press to enter Bluetooth pairing mode.
- 2. Volume Down Button:** Decreases the audio volume.
- 3. Power Button:** Press to turn the speaker on or off.
- 4. JBL Connect Button:** Used to wirelessly link multiple JBL Connect enabled speakers.
- 5. Volume Up Button:** Increases the audio volume.
- 6. Play/Pause Button:** Controls music playback (play/pause, skip tracks).

Rear Panel Connections



Image: Rear view of the JBL Xtreme speaker with the zipper open, revealing the power input, two USB charging ports, and an auxiliary input.

- 1. Power Input:** Connect the provided power adapter to the power input port on the rear of the JBL Xtreme.
- 2. USB Charging Ports (x2):** Use these ports to charge external devices like smartphones or tablets.
- 3. Auxiliary Input (3.5mm):** Connect audio devices via a 3.5mm audio cable.

SETUP

Charging the Battery

1. Connect the provided power adapter to the power input port on the rear of the JBL Xtreme.
2. Plug the power adapter into a wall outlet.
3. The LED indicator lights on the speaker will illuminate to show the charging status. All five LEDs will be solid white when fully charged.
4. A full charge takes approximately 3.5 hours. The speaker can be used while charging.

Powering On/Off

- To turn on the speaker, press the **Power Button**.
- To turn off the speaker, press the **Power Button** again.

OPERATING INSTRUCTIONS

Bluetooth Connection

1. Turn on the JBL Xtreme speaker. The Bluetooth indicator will flash blue, indicating it's in pairing mode.
 2. On your smartphone or tablet, enable Bluetooth and search for available devices.
 3. Select "JBL Xtreme" from the list of devices.
 4. Once connected, the Bluetooth indicator will turn solid blue, and you will hear an audible confirmation.
 5. The speaker can wirelessly connect up to 3 smartphones or tablets simultaneously, allowing users to take turns playing music.
-



Image: The JBL Xtreme speaker positioned on a table, with a smartphone nearby, illustrating a successful Bluetooth connection for music playback.

JBL Connect (Stereo Pairing)

The JBL Xtreme features JBL Connect, allowing you to wirelessly link two JBL Connect enabled speakers together for an amplified listening experience or true stereo sound.

1. Ensure both JBL Xtreme speakers are powered on.
2. Press the **JBL Connect Button** on both speakers.
3. The speakers will automatically connect to each other. Once connected, the JBL Connect button will illuminate solid white.
4. You can manage the stereo pairing settings (e.g., left/right channel assignment) via the JBL Connect app.

Speakerphone Function

The JBL Xtreme has a built-in noise and echo-cancelling speakerphone for crystal clear calls.

- When a call comes in, music playback will pause.
- Press the **Play/Pause Button** to answer the call.
- To end the call, press the **Play/Pause Button** again.
- To reject a call, press and hold the **Play/Pause Button** for 2 seconds.

Charging External Devices

The JBL Xtreme can act as a power bank to charge your mobile devices via its dual USB ports.

1. Open the zipper on the rear of the speaker to access the USB ports.
2. Connect your device's USB charging cable to one of the JBL Xtreme's USB ports.

3. Ensure the JBL Xtreme is powered on. Your device will begin charging.



Image: The JBL Xtreme speaker on a wooden table, with a tablet and smartphone connected to its USB ports, demonstrating its power bank capability.

MAINTENANCE AND CARE

Splashproof Design

The JBL Xtreme features a splashproof design, meaning you don't have to worry about rain or spills. You can even clean it with running tap water. However, it is important not to submerge the speaker in water.

- Do not submerge the speaker in water.
- Ensure the zipper on the rear panel is fully closed to maintain splashproof integrity.
- If the speaker gets wet, wipe it dry with a soft cloth before charging or opening the rear panel.



Image: The JBL Xtreme speaker placed on an outdoor table during a barbecue, demonstrating its suitability for outdoor use and resistance to splashes.

Cleaning

To clean the speaker, use a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Connect the speaker to the power adapter and charge it.
Cannot pair via Bluetooth.	Speaker is not in pairing mode; device's Bluetooth is off; speaker is already connected to another device.	Press the Bluetooth button to enter pairing mode. Ensure Bluetooth is enabled on your device. Disconnect from other devices.
No sound or low volume.	Volume is too low on speaker or source device; audio cable not connected properly (if using AUX).	Increase volume on both the speaker and your connected device. Ensure AUX cable is fully inserted.
Sound distortion.	Volume is too high; source audio quality is poor.	Reduce the volume. Try a different audio source or file.
JBL Connect not working.	Speakers are too far apart; not both in Connect mode.	Ensure speakers are within range and both have the JBL Connect button pressed.

Problem	Possible Cause	Solution
Speaker not charging external devices.	Speaker is off; cable issue.	Ensure the speaker is powered on. Try a different USB cable.
To reset the unit.	General malfunction or unresponsive.	Hold the Power Button and Bluetooth Button simultaneously for a few seconds until the speaker resets.

SPECIFICATIONS

Feature	Detail
Model Name	JBLXTREMEBLKUS
Dimensions (H x W x D)	7.5" x 12.5" x 8" (approx.)
Weight	4.65 pounds
Speaker Type	Portable Bluetooth Speaker
Connectivity	Bluetooth, 3.5mm Auxiliary Input
Bluetooth Version	(Not specified in input, assuming standard for release)
Battery Type	Rechargeable Lithium-ion
Battery Capacity	10000 mAh
Battery Life	Up to 15 hours (varies by volume and content)
Charging Time	Approx. 3.5 hours
Power Output	40 Watts
Frequency Response	70Hz – 20kHz
Signal-to-Noise Ratio	>80 dB
USB Charge Out	Yes (Dual USB ports)
Water Resistance	Splashproof (IPX4 equivalent, not submersible)
Special Features	JBL Connect, Speakerphone, Dual Passive Radiators

WARRANTY AND SUPPORT

The JBL Xtreme Portable Wireless Bluetooth Speaker comes with a **Limited Warranty**. Please refer to the warranty card included in your product packaging for specific terms and conditions, including coverage duration and limitations.

For technical support, troubleshooting assistance, or warranty claims, please visit the official JBL support website or

contact their customer service. Contact information can typically be found on the JBL website or in your product's documentation.

You can also visit the [JBL Store on Amazon](#) for more product information and support resources.