

[Manuals.plus](#) /

> [Beurer](#) /

> Beurer FB30 Foot Spa Instruction Manual

Beurer FB30

Beurer FB30 Foot Spa Instruction Manual

Model: FB30 (Type 638.50)

1. INTRODUCTION

Thank you for choosing the Beurer FB30 Foot Spa. This device is designed to provide a relaxing foot massage and soak experience. It features vibration and bubble massage, infrared light dots, and a pedicure attachment. Please read this instruction manual thoroughly before first use and keep it for future reference.



Image 1: The Beurer FB30 Foot Spa and its retail packaging.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent personal injury or damage to the device:

- Read all instructions before use.
- Do not use if you have open wounds, skin diseases, or circulatory problems in your feet. Consult a physician if you have diabetes or other medical conditions.
- Ensure the device is unplugged before filling or emptying with water.
- Do not immerse the entire unit in water.
- Keep out of reach of children.
- Use only with clean water.
- Do not stand in the foot spa. Sit comfortably while using.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in

order to avoid a hazard.

3. PACKAGE CONTENTS

Verify that all items are present and undamaged:

- 1 x Beurer FB30 Collapsible Foot Bath
- 1 x Pedicure attachment (removable pumice stone)
- 1 x Instruction Manual

4. PRODUCT OVERVIEW AND FEATURES

The Beurer FB30 Foot Spa is designed for foot relaxation and care. Key features include:

- **Vibration Massage:** Gentle vibrations to relax tense foot muscles.
- **Bubble Massage:** Soothing bubbles for a refreshing sensation.
- **Infrared Light Dots:** Integrated infrared lights to stimulate blood circulation.
- **Pedicure Attachment:** A removable pumice stone for gentle exfoliation.
- **Water Temperature Maintenance:** Helps keep water warm during use.
- **Collapsible Design:** Folds for space-saving storage.
- **Non-slip Rubber Feet:** Ensures stability during use.
- **Removable Splash Guard:** Minimizes water splashing.



Image 2: Overview of the Beurer FB30 Foot Spa's features.

5. SETUP

1. Place the foot spa on a flat, stable surface.
2. Unfold the foot spa by gently pulling the top rim upwards until it locks into place.
3. Ensure the power cord is easily accessible but not in a position where it can be tripped over.
4. Fill the foot bath with warm or cold water as desired, up to the indicated maximum fill line. Do not overfill.
5. Plug the device into a suitable power outlet.



Foot spa with folding function

for space-saving storage



Image 3: The collapsible design allows for easy setup and storage.

6. OPERATING INSTRUCTIONS

To use your Beurer FB30 Foot Spa:

1. After filling the foot bath and plugging it in, sit comfortably in a chair.
2. Place your feet into the foot spa.
3. Activate the desired functions using the control panel. You can choose vibration massage, bubble massage, and infrared light spots.
4. The device will maintain the water temperature.
5. For exfoliation, use the built-in pedicure station (removable pumice stone) to gently remove dead skin cells from your feet.
6. Enjoy the foot spa for a recommended duration of 10-20 minutes.
7. After use, switch off the device and unplug it from the power outlet.
8. Carefully empty the water and clean the unit as described in the Maintenance section.

 Vibration and bubble massage
and foot rest with massage nodules



Image 4: Enjoying a foot massage with the FB30.



Water temperature regulator and soothing infrared light spots



Image 5: Infrared light dots in action.

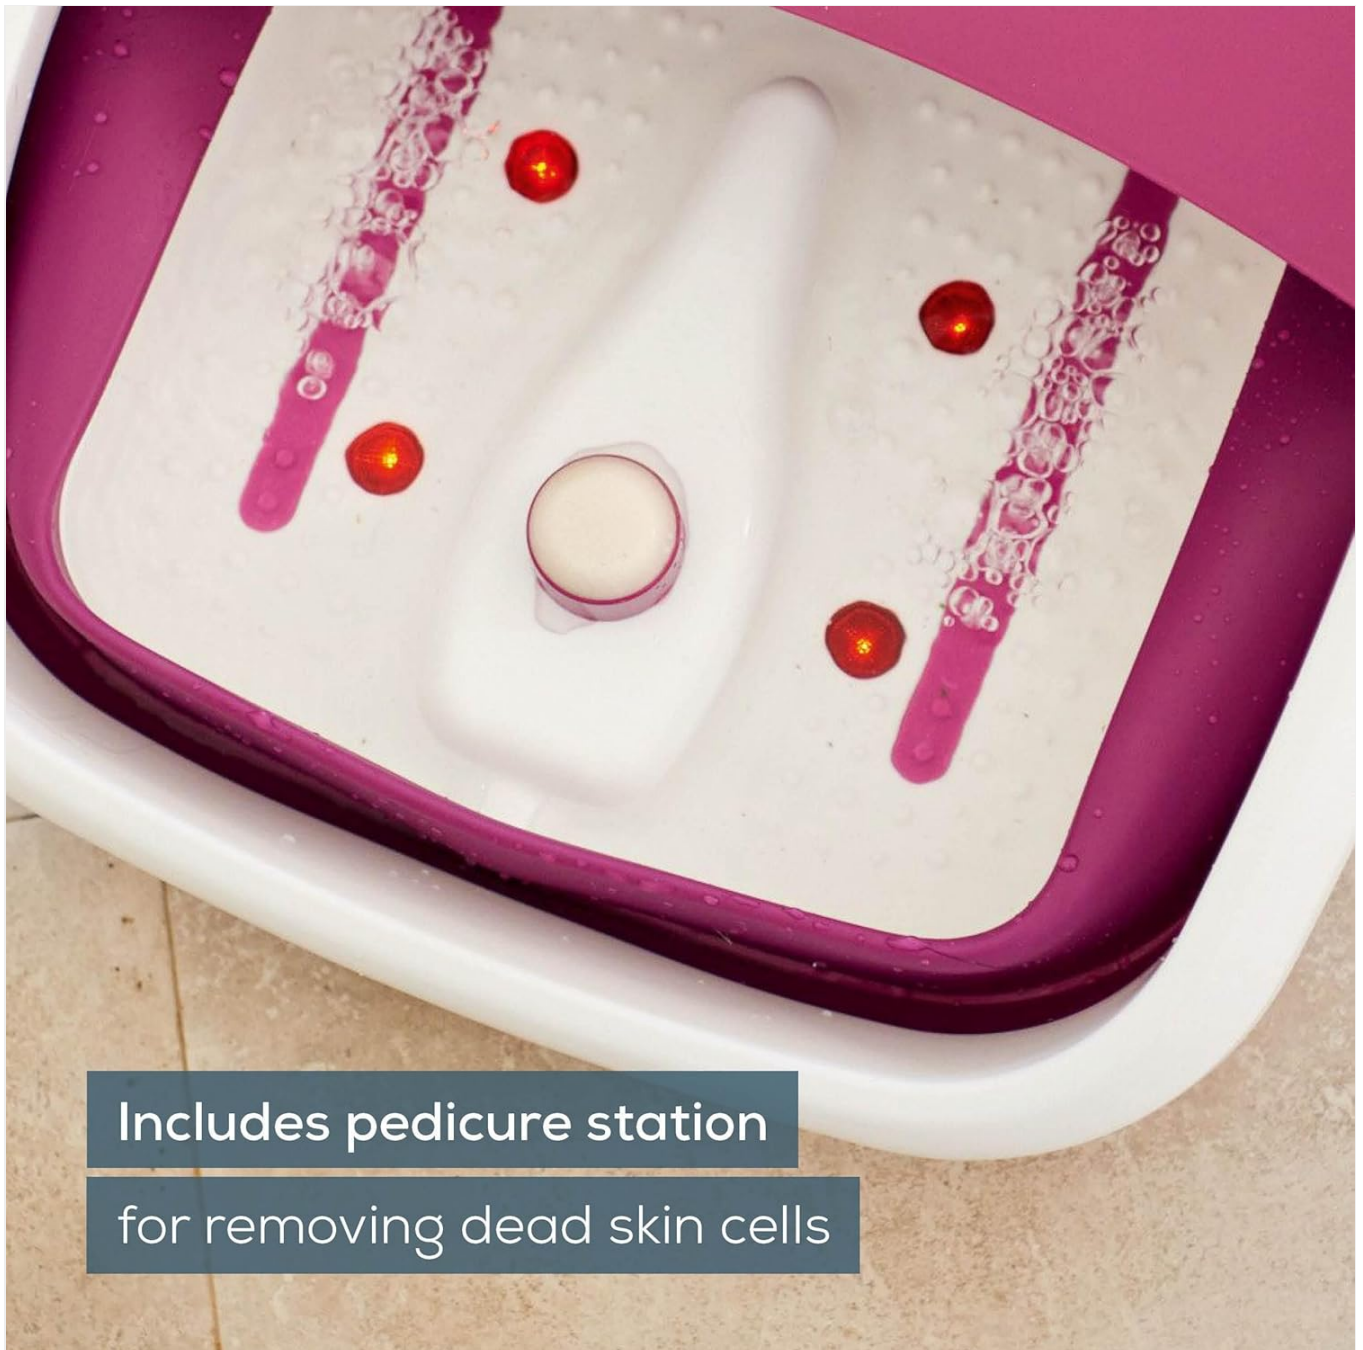


Image 6: The integrated pedicure station.

7. MAINTENANCE

7.1 Cleaning

- Always unplug the device before cleaning.
- Empty the water completely after each use.
- Wipe the interior and exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or harsh chemicals.
- Rinse the pedicure attachment under running water.
- Ensure the device is completely dry before storing.

7.2 Storage

- To store, gently push the top rim downwards to collapse the foot spa.
- Store the device in a cool, dry place, away from direct sunlight and extreme temperatures.

- Keep the original packaging for protection during storage if possible.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Not plugged in; power outlet malfunction; device fault.	Check power connection; try a different outlet; contact customer support if problem persists.
No bubbles or vibration.	Function not activated; water level too low/high.	Ensure function button is pressed; adjust water level.
Water not heating/maintaining temperature.	Device fault.	Contact customer support.

9. TECHNICAL SPECIFICATIONS

Brand: Beurer

Model Number: FB30 (638.50)

Product Dimensions: 42 x 40 x 19.5 cm (unfolded)

Item Weight: 1.6 Kilograms

Material: Rubber (collapsible parts)

Power Source: Corded Electric

Special Features: Foldable, Infrared Light Dots, Maintains Water Temperature, Vibration and Bubble Massage

Color: White/Purple

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Beurer website. Keep your proof of purchase for any warranty claims.

Legal Disclaimer: Actual product packaging and materials may contain more and different information than what is shown on our website. We recommend that you do not rely solely on the information presented and that you always read labels, warnings, and directions before using or consuming a product.

