

Greenworks 5201502

Greenworks Universal Pressure Washer Nozzle Tips (4 Pack) Model 5201502 User Manual

Model: 5201502

[Introduction](#) [Safety Information](#) [Product Overview](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#) [Support](#)

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Greenworks Universal Pressure Washer Nozzle Tips (4 Pack), Model 5201502. These nozzles are designed to provide various spray patterns for different cleaning tasks with compatible pressure washers up to 2000 PSI. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

Always observe basic safety precautions when using pressure washer accessories to reduce the risk of injury. Pressure washers operate at high pressure and can cause serious injury if not handled properly.

- **Read Pressure Washer Manual:** Always refer to your pressure washer's instruction manual for specific safety guidelines and operating procedures.
- **Wear Eye Protection:** Always wear ANSI Z87.1 approved eye protection when operating a pressure washer and changing nozzles.
- **Do Not Point at People or Animals:** Never point the spray nozzle at people, pets, or electrical equipment. The high-pressure spray can cause severe injury.
- **Secure Connection:** Ensure nozzles are securely connected to the spray wand before starting the pressure washer.
- **Release Pressure:** Always release pressure from the system before changing nozzles. Turn off the pressure washer, shut off the water supply, and squeeze the trigger to release residual pressure.
- **Use Correct Nozzle:** Select the appropriate nozzle for the task to avoid damaging surfaces.
- **Maximum Pressure:** Do not exceed the maximum pressure rating of 2000 PSI for these nozzles.

3. PRODUCT OVERVIEW

The Greenworks Universal Pressure Washer Nozzle Tips (Model 5201502) include four distinct nozzles, each designed for specific cleaning applications. They feature a 1/4-inch quick-connect fitting for easy attachment and detachment.



Image: The four universal quick-connect pressure washer nozzle tips included in the pack.

Nozzle Types and Their Uses:

Red Nozzle (0-Degree):

This nozzle delivers a concentrated, pencil-thin stream of water. It is the most powerful and aggressive nozzle, ideal for spot cleaning stubborn stains, removing caked-on dirt, or reaching high areas. Use with extreme caution as it can damage surfaces if not used correctly.



Image: The red 0-degree nozzle producing a powerful, focused stream.

Green Nozzle (25-Degree):

The green nozzle provides a 25-degree fan-shaped spray. This is a versatile nozzle suitable for general cleaning tasks on most surfaces, such as driveways, patios, and siding. It offers a good balance of power and coverage.



Image: The green 25-degree nozzle creating a wide, fan-shaped spray.

White Nozzle (40-Degree):

The white nozzle produces a wide 40-degree fan spray. This is the gentlest high-pressure nozzle, ideal for cleaning delicate surfaces like windows, vehicles, or painted surfaces. It provides maximum coverage with reduced impact force.

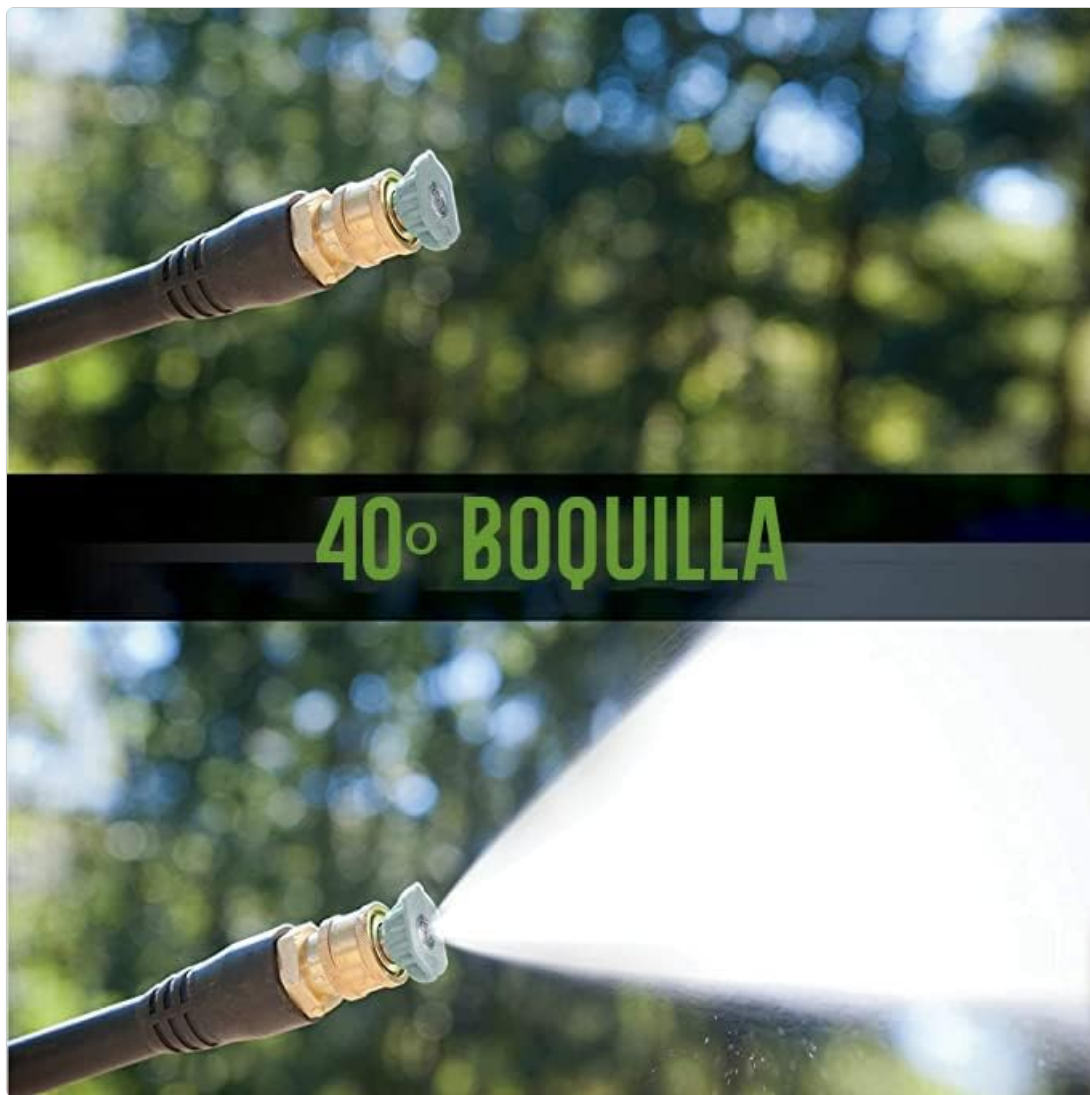


Image: The white 40-degree nozzle delivering a broad, gentle spray.

Black Nozzle (Soap/Low Pressure):

The black nozzle is a low-pressure, wide-angle nozzle specifically designed for applying detergents or cleaning solutions. It creates a broad, gentle stream that mixes with soap from your pressure washer's detergent tank. It is not for high-pressure cleaning.



Image: The black soap nozzle applying a wide, low-pressure stream, typically for detergent application.

4. SETUP

These nozzles are designed for quick and easy attachment to pressure washer wands with a 1/4-inch quick-connect coupler.

1. **Ensure Pressure Washer is Off:** Before attaching or detaching any nozzle, ensure your pressure washer is turned OFF and the water supply is disconnected.
2. **Release Residual Pressure:** Squeeze the trigger on your spray gun to release any remaining pressure in the system.
3. **Pull Back Collar:** Pull back the quick-connect collar on the end of your pressure washer wand.
4. **Insert Nozzle:** Insert the desired nozzle tip into the quick-connect coupler.
5. **Secure Connection:** Release the collar. Tug on the nozzle to ensure it is securely locked in place. A loose connection can result in the nozzle becoming a projectile under high pressure.
6. **Reconnect Water and Power:** Once the nozzle is securely attached, reconnect the water supply and turn on your pressure washer.



Image: Side view of the nozzle tips, highlighting the quick-connect mechanism.

5. OPERATING INSTRUCTIONS

Always start with the least aggressive nozzle (40-degree white or soap black) and gradually increase pressure or decrease the spray angle if needed. Test the spray on an inconspicuous area first.

- **Surface Preparation:** Clear the area of any loose debris that could be propelled by the water stream.
- **Nozzle Selection:** Choose the appropriate nozzle based on the cleaning task and surface sensitivity (refer to Product Overview).
- **Maintain Distance:** Hold the spray gun at a safe distance from the surface, typically 6-12 inches, and adjust as necessary. Closer distances increase pressure and can cause damage.
- **Consistent Motion:** Use a consistent, sweeping motion to clean surfaces evenly and prevent streaking or damage.
- **Detergent Application (Black Nozzle):** When using the black soap nozzle, ensure your pressure washer's detergent tank is filled with an appropriate pressure washer-safe cleaning solution. The pressure washer will automatically draw detergent at low pressure.



Image: Example of a pressure washer in use for cleaning, demonstrating proper distance and technique.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your nozzle tips.

- **Clean After Each Use:** Rinse the nozzles with clean water after each use to remove any chemical residues or debris.
- **Inspect for Clogs:** Periodically inspect the nozzle openings for clogs. Use a small wire or nozzle cleaning tool (often included with pressure washers) to clear any blockages.
- **Check for Damage:** Examine nozzles for any signs of wear, cracks, or damage. Replace damaged nozzles immediately to prevent injury or improper spray patterns.
- **Storage:** Store nozzles in a clean, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No water or low pressure from nozzle.	Nozzle clogged.	Turn off pressure washer, disconnect water. Clear nozzle opening with a small wire or nozzle cleaning tool.

Problem	Possible Cause	Solution
Nozzle leaks at connection point.	Nozzle not fully seated or O-ring damaged.	Ensure nozzle is fully inserted and quick-connect collar is released. Inspect O-ring for damage and replace if necessary.
Inconsistent spray pattern.	Partial clog or damaged nozzle tip.	Clean nozzle opening. If problem persists, replace the nozzle.

8. SPECIFICATIONS

Feature	Detail
Brand	Greenworks
Model Number	5201502
Number of Items	4 (Nozzle Tips)
Nozzle Types	0-degree (Red), 25-degree (Green), 40-degree (White), Soap (Black)
Connection Type	1/4-inch Quick Connection
Maximum Pressure	2000 PSI
Compatibility	Universal fit for most pressure washers, compatible with all Greenworks Pressure Washers
Item Weight	23 g
UPC	841821018412, 703570509118

9. WARRANTY INFORMATION

Greenworks products are manufactured to high-quality standards. For specific warranty details regarding your Greenworks Universal Pressure Washer Nozzle Tips, please refer to the warranty statement included with your original pressure washer purchase or visit the official Greenworks website. Keep your purchase receipt as proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

If you have any questions, require technical assistance, or need to order replacement parts, please contact Greenworks customer support:

- **Website:** Visit the official Greenworks website for FAQs, product registration, and support resources.
- **Phone:** Refer to your pressure washer manual or the Greenworks website for customer service contact numbers.
- **Online Resources:** Explore online tutorials and guides available on the Greenworks support pages.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question