

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [myTouchSmart](#) /

› [myTouchSmart Outlet Timer, Dual Plug-in Digital Timer Outlet, Simple Programmable Outlet Timer, Indoor/Outdoor Countdown Timer, Weather Resistant, Seasonal Light Timer, Black, 1 Pack, 26898-P2 1 Pack Dual Outlet - Programmable User Manual](#)

## myTouchSmart 26898-P1

# myTouchSmart Outlet Timer

Model: 26898-P1

## INTRODUCTION

The myTouchSmart Plug-In Indoor/Outdoor Digital Timer is designed to simplify the automation of your lighting and appliances. This weather-resistant timer features two grounded outlets, offering versatile control for landscape, patio, and seasonal lighting. It provides both customizable "My On/Off Time" settings and convenient daily preset options, along with a 24-hour countdown feature. The large LCD screen and blue LED indicators ensure easy programming and monitoring of active programs. Compatible with various light sources including CFL, LED, incandescent, and halogen, this UL listed product is built for convenience and energy efficiency.

## PRODUCT FEATURES

- Easy-to-set digital timer with two grounded outlets for landscape, patio, and seasonal lights and appliances.
- Features simple daily preset options, fully customizable "My On/Off Time" settings, and a custom, up to 24-hour countdown feature.
- Weather resistant for both outdoor and indoor use. Includes an attached bracket for easy mounting and installation.
- Compatible with CFL, LED, incandescent, and halogen light sources.
- Large LCD screen and blue LED indicators to show active programs.
- Electrical Rating: 125V/60Hz, 15A/1875W General purpose/resistive.
- CSA listed for safety.



## Control outdoor or indoor lights



Outdoor  
or Indoor



Small Pumps



Seasonal

Figure 1: Control outdoor or indoor lights with the myTouchSmart timer.



Figure 2: The timer is weather resistant and suitable for outdoor use.

## SETUP INSTRUCTIONS

---

1. **Initial Power-Up:** Plug the timer into a standard 125V AC outlet. The LCD screen will illuminate. If the screen is blank or not reading, plug it in for at least one hour to charge the internal battery.
2. **Set Current Time:**
  - Press the **CLOCK** button.
  - Use the **UP (▲)** and **DOWN (▼)** arrows to adjust the hour.
  - Press **CLOCK** again to move to minutes, then use the arrows to adjust.
  - Press **CLOCK** a third time to confirm and exit time setting.
3. **Mounting:** Use the integrated mounting bracket to securely attach the timer near your desired outlet. Ensure the timer is positioned to prevent water accumulation.





Figure 3: Simple setup involves setting the current time and custom ON/OFF times.

Your browser does not support the video tag.

Video 1: An instructional video demonstrating how to set the current time and program ON/OFF times on the myTouchSmart timer.

## OPERATING INSTRUCTIONS

### Setting Custom ON/OFF Times ("My On/Off Time")

#### 1. Set ON Time:

- Press the **MY ON TIME** button. The display will show the current ON time setting.
- Use the **UP (▲)** and **DOWN (▼)** arrows to adjust the desired ON hour.
- Press **MY ON TIME** again to move to minutes, then use the arrows to adjust.
- Press **MY ON TIME** a third time to confirm and save the ON time. The blue LED indicator next to "my on time" will illuminate when active.

#### 2. Set OFF Time:

- Press the **MY OFF TIME** button. The display will show the current OFF time setting.

- Use the **UP (▲)** and **DOWN (▼)** arrows to adjust the desired OFF hour.
- Press **MY OFF TIME** again to move to minutes, then use the arrows to adjust.
- Press **MY OFF TIME** a third time to confirm and save the OFF time. The blue LED indicator next to "my off time" will illuminate when active.

## Using Preset Schedules

The timer offers three convenient preset schedules:

- **Evening (5pm-12am):** Press the **EVENING** button.
- **Morning (5am-8am):** Press the **MORNING** button.
- **All Night (6pm-6am):** Press the **ALL NIGHT** button.

To activate a preset, simply press the corresponding button. The blue LED indicator next to the selected preset will light up.

## 24-Hour Countdown

To use the countdown feature:

1. Press the **MY COUNTDOWN** button.
2. Use the **UP (▲)** and **DOWN (▼)** arrows to set the desired countdown duration (up to 24 hours).
3. Press **MY COUNTDOWN** again to start the countdown. The timer will turn ON for the set duration and then turn OFF.

# Custom ON/OFF Times myTOUCH SMART

will run everyday

## Program 1

ON at 10:10 P.M.  
OFF at 2:10 P.M.



Custom ON



Custom OFF

 
## Preset Schedules



Evening  
(5 P.M. - 12 A.M.)

 


Morning  
(5 A.M. - 8 A.M.)

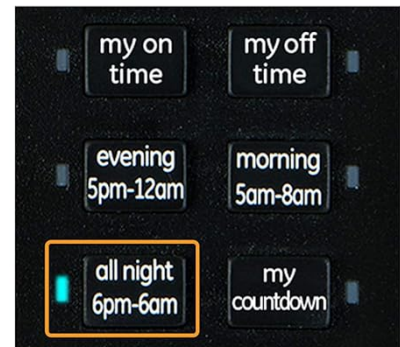

All Night  
(6 P.M. - 6 A.M.)

Figure 4: Program custom ON/OFF times or select from convenient preset schedules.

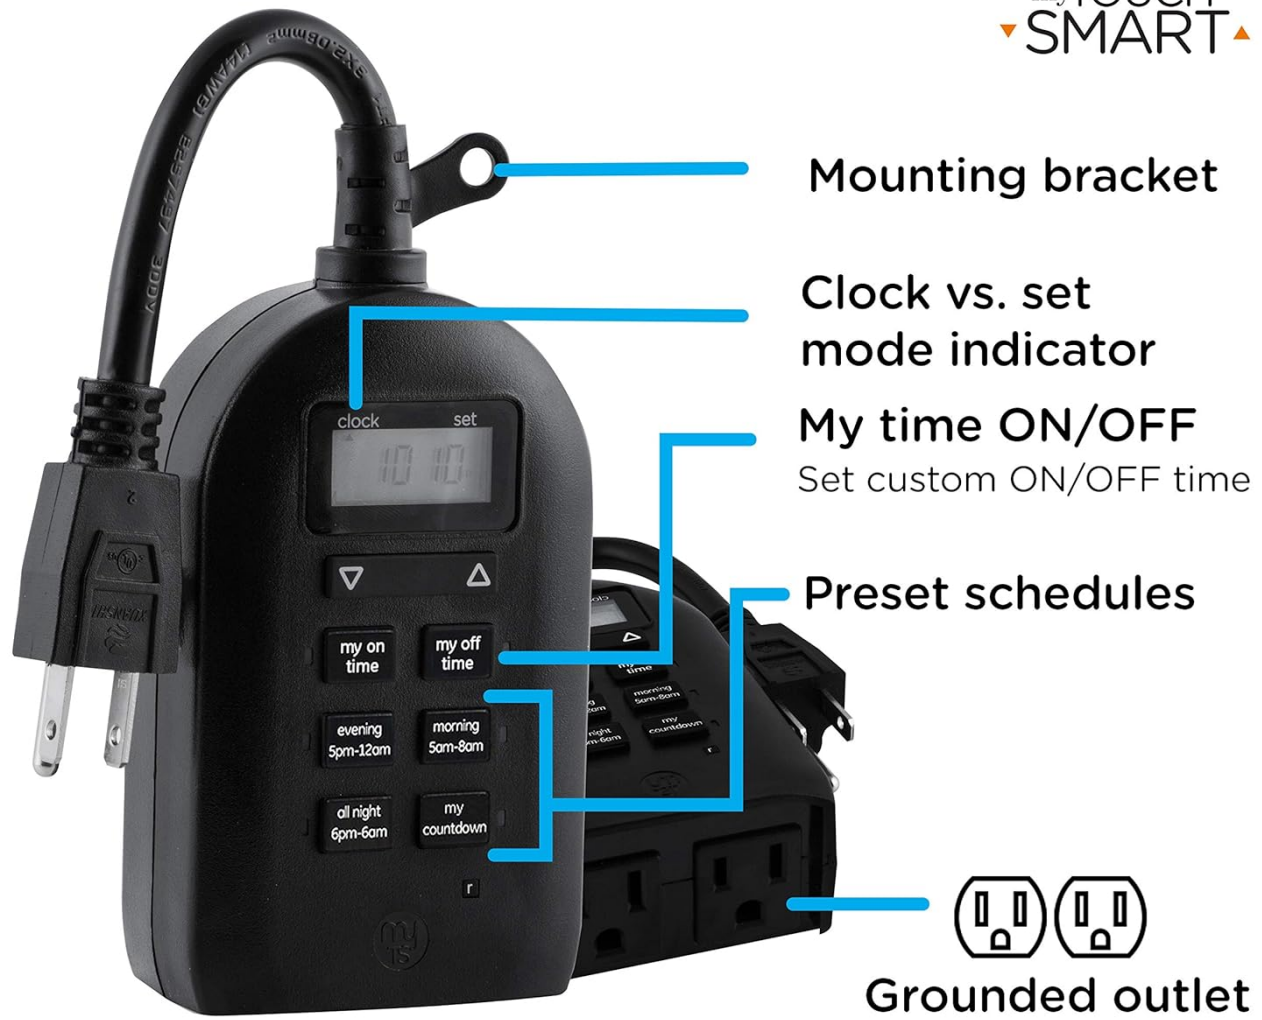

SAVE ENERGY  SAVE MONEY

Figure 5: Key features and controls of the myTouchSmart timer.

## MAINTENANCE

- **Cleaning:** Disconnect the timer from the power outlet before cleaning. Wipe the exterior with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use for extended periods, store the timer in a cool, dry place away from direct sunlight and extreme temperatures.
- **Internal Battery:** The timer contains an internal battery to maintain settings during power outages. If the display is dim or blank, plug the timer into an outlet for at least one hour to recharge the battery.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Timer display is blank or dim.	Internal battery is low or depleted.	Plug the timer into a live outlet for at least one hour to charge the internal battery.
Connected device does not turn ON/OFF.	Timer is not programmed correctly. Device is not properly plugged into the timer. Device is faulty or turned OFF. Power outage.	Review "Operating Instructions" to ensure correct programming. Ensure the device's plug is fully inserted into the timer's outlet. Check the device by plugging it directly into a wall outlet. Ensure the device's power switch is ON. Verify power to the outlet. The timer's internal battery will maintain settings during outages, but the device will not receive power.
Timer is not responding to button presses.	Temporary software glitch or low battery.	Unplug the timer from the outlet for a few minutes, then plug it back in. Allow the internal battery to charge if the display was dim.

## SPECIFICATIONS

Feature	Detail
Model Number	26898-P1
Electrical Rating	125V AC, 60Hz, 15A, 1875W (General Purpose/Resistive)
Outlets	2 Grounded Outlets
Dimensions	3.2"D x 7"W x 7.5"H (approximate)
Item Weight	9.92 ounces
Display Type	LCD
Mounting Type	Plug-In Mount
Certifications	UL Listed, CSA Listed
Internal Battery	Yes (for settings retention)





Figure 6: Product dimensions for the myTouchSmart timer.



Figure 7: Dual grounded outlets for connecting devices.

## WARRANTY AND SUPPORT

This myTouchSmart timer is backed by a **one-year limited warranty** from the date of purchase. For warranty claims or technical support, please refer to the contact information provided with your product packaging or visit the official myTouchSmart website.

 


 
For additional resources, you may also refer to the official [User Manual \(PDF\)](#) or [Installation Manual \(PDF\)](#) available online.

© 2025 myTouchSmart. All rights reserved.

Product Model: 26898-P1

## Related Documents - 26898-P1

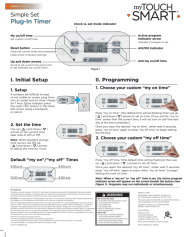	<p><a href="#">myTouchSmart Simple Set Indoor Plug-In Digital Timer - User Guide</a></p> <p>Learn how to set up and program your myTouchSmart Simple Set Indoor Plug-In Digital Timer for automated lighting control. Includes instructions for custom schedules, preset times, and countdown features.</p>
	<p><a href="#">myTouchSmart SunSmart Plug-In Timer User Manual</a></p> <p>User manual for the myTouchSmart SunSmart Plug-In Timer, detailing setup, programming options, and specifications for indoor digital timing. Learn how to automate your indoor lighting and appliances.</p>

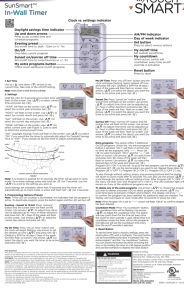	<p><a href="#">myTouchSmart Simple Set Plug-In Timer: Setup and Programming Guide</a></p> <p>A concise guide to setting up and programming the myTouchSmart Simple Set Plug-In Timer for automated control of lights and appliances. Learn how to set on/off times, understand features, and follow safety instructions.</p>
	<p><a href="#">myTouchSmart In-Wall Digital Timer 26893 User Manual &amp; Installation Guide</a></p> <p>Comprehensive user manual and installation guide for the myTouchSmart In-Wall Digital Timer (Model 26893). Learn how to safely install and use this programmable timer for indoor/outdoor lights and fans.</p>
	<p><a href="#">myTouchSmart Simple Set Plug-In Timer - User Guide</a></p> <p>Instructions and specifications for the myTouchSmart Simple Set Plug-In Timer, an outdoor/indoor digital timer for automating lights and appliances. Learn how to mount, set the time, program on/off times, and understand safety warnings.</p>
	<p><a href="#">myTouchSMART SunSmart In-Wall Digital Timer: Setup and Programming Guide</a></p> <p>Comprehensive guide to installing and programming the myTouchSMART SunSmart In-Wall Digital Timer, covering time setting, scheduling, presets, and advanced features.</p>