

## Skechers SR2011

# Skechers Artesia Digital Sports Watch SR2011 User Manual

Model: SR2011

## 1. INTRODUCTION

This manual provides instructions for the Skechers Artesia Digital Sports Watch, Model SR2011. This digital watch features a durable plastic case, a comfortable polyurethane strap, and a digital chronograph display. It is designed for everyday wear and light sports activities, offering essential timekeeping functions and water resistance.





Figure 1: Front view of the Skechers Artesia Digital Sports Watch SR2011. The display shows the time, date, and various mode icons, with 'MODE', 'RESET', 'ST/STP', and 'LIGHT' buttons visible around the rose gold-tone bezel.

## 2. WATCH OVERVIEW AND BUTTON FUNCTIONS

Your Skechers Artesia Digital Sports Watch features four control buttons. Familiarize yourself with their locations and primary functions:





Figure 2: Side view of the watch, showing the 'MODE' and 'RESET' buttons on the left, and 'ST/STP' and 'LIGHT' buttons on the right.

- **MODE Button (Top Left):** Cycles through different display modes (Time, Stopwatch, Alarm, Date).
- **RESET Button (Bottom Left):** Used to reset values (e.g., stopwatch, alarm) or exit setting mode.
- **ST/STP Button (Top Right):** Used to start/stop the stopwatch, or adjust values during setting.
- **LIGHT Button (Bottom Right):** Activates the backlight for improved visibility in low-light conditions.

### 3. SETUP: SETTING TIME AND DATE

Follow these steps to set the current time and date on your watch:

1. From the normal time display, press the **MODE** button repeatedly until the seconds begin to flash. This indicates you are in time setting mode.
2. Press the **RESET** button to cycle through the settings: seconds → hour → minute → month → date → day of the week.
3. While a value is flashing, use the **ST/STP** button to increase the value. Hold the **ST/STP** button to rapidly advance the value.
4. Once all settings are correct, press the **MODE** button to exit the setting mode and return to the normal time display.

### 4. OPERATING INSTRUCTIONS

#### 4.1. Time Display

In normal time mode, the watch displays the current time (hours, minutes, seconds) and the day of the week. Press the **LIGHT** button to illuminate the display for a few seconds.

#### 4.2. Stopwatch (Chronograph) Function

Your watch includes a stopwatch for measuring elapsed time:

1. From the normal time display, press the **MODE** button until 'ST' or 'CHRONO' appears on the display, indicating stopwatch mode.
2. Press the **ST/STP** button to start the stopwatch.
3. Press the **ST/STP** button again to stop the stopwatch.
4. To reset the stopwatch to zero, press the **RESET** button while the stopwatch is stopped.
5. Press the **MODE** button to return to the normal time display.

#### 4.3. Alarm Function

To set and activate the alarm:

1. From the normal time display, press the **MODE** button until 'AL' appears on the display, indicating alarm mode.
2. Press the **RESET** button to select the hour or minute setting. The selected value will flash.
3. Use the **ST/STP** button to adjust the flashing hour or minute.
4. Press the **MODE** button to confirm the alarm time and exit alarm setting mode.
5. To turn the alarm ON/OFF, press the **ST/STP** button while in alarm mode (without any digits flashing).

An alarm icon will appear/disappear to indicate its status.

---

## 5. MAINTENANCE

### 5.1. Cleaning

To maintain the appearance and longevity of your watch:

- Wipe the watch case and strap regularly with a soft, damp cloth.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the plastic and polyurethane materials.
- For stubborn dirt on the silicone strap, a mild soap solution can be used, followed by thorough rinsing and drying.

### 5.2. Water Resistance

This watch is water resistant to 50 meters (165 feet), or 5 ATM. This means it is suitable for short periods of recreational swimming and showering. It is **not** suitable for diving, snorkeling, or high-pressure water activities. Do not operate buttons while the watch is wet or submerged.

### 5.3. Battery Replacement

When the display becomes dim or the watch stops functioning, the battery may need replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and maintain water resistance. Refer to the specifications for battery type.

---

## 6. TROUBLESHOOTING

If you encounter issues with your watch, consider the following:

- **Display is blank or dim:** The battery may be low or depleted. Consider professional battery replacement.
- **Buttons are hard to press or unresponsive:** Ensure the watch is clean and free of debris around the buttons. If the issue persists, it may indicate a mechanical problem requiring professional inspection.
- **Time is inaccurate:** Re-set the time following the instructions in Section 3. If the watch consistently loses or gains significant time, the internal mechanism may require servicing.
- **Water inside the watch:** If moisture appears inside the watch, stop using it immediately and seek professional service to prevent further damage.

---

## 7. SPECIFICATIONS

Feature	Detail
Model Number	SR2011
Case Material	Plastic
Band Material	Polyurethane (Silicone)

Case Size	34mm
Band Size	14mm
Movement	Digital
Water Resistance	50m (165ft) / 5 ATM
Product Dimensions	2.99 x 4.02 x 3.07 inches; 5.11 ounces (packaging)
Battery Type	1 Lithium Ion battery (included)

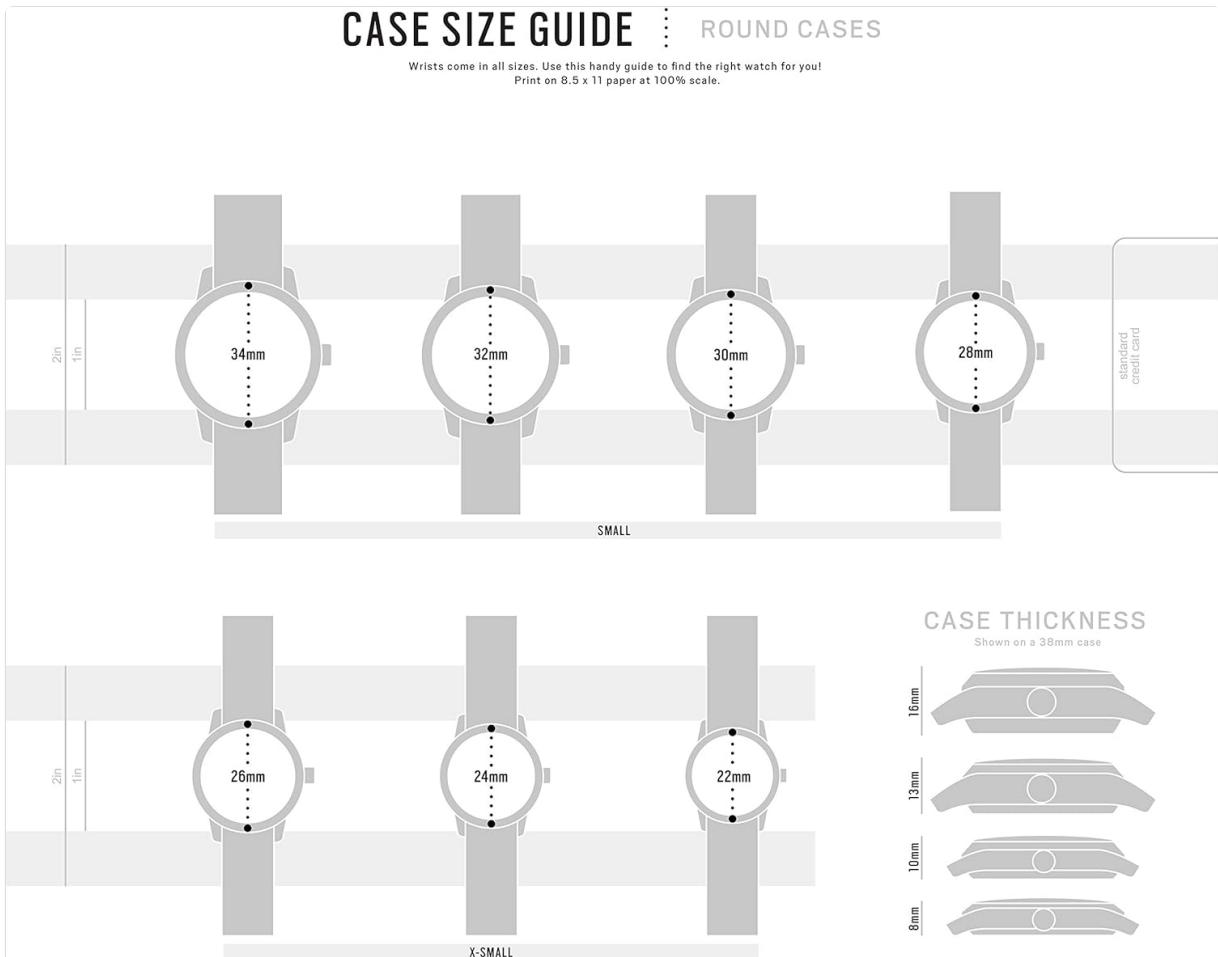


Figure 3: Watch Case Size Guide. This diagram illustrates different watch case diameters and thicknesses for reference.

## 8. WARRANTY AND SUPPORT

For warranty information, product support, or service inquiries, please refer to the official Skechers website or contact their customer service department. Keep your proof of purchase for any warranty claims.

You can visit the official Skechers store for more information: [Skechers Store on Amazon](#)

