

[Manuals.plus](#) /

› [Skechers](#) /

› Skechers Tennyson Digital Watch (Model SR2020) Instruction Manual

## Skechers SR2020

# Skechers Tennyson Digital Watch (Model SR2020) Instruction Manual

Your guide to setting up and operating your Skechers Tennyson Digital Watch.

### INTRODUCTION

This manual provides detailed instructions for the Skechers Tennyson Digital Watch, Model SR2020. This watch is designed for daily wear, featuring a digital display, chronograph, alarm, and backlight functions. It is water-resistant to 50 meters (5 ATM), making it suitable for recreational swimming and showering.





*Image: Front view of the Skechers Tennyson Digital Watch, Model SR2020, displaying the time and date.*

## **WATCH OVERVIEW AND BUTTON FUNCTIONS**

The Skechers Tennyson Digital Watch features four primary buttons for navigation and function control. Refer to the diagram below for button identification and their general functions.



Image: Diagram illustrating the button layout and key features of the Skechers Tennyson Digital Watch, including Reset, Mode, ST/STP, and Light buttons, along with display indicators for Calendar, Dual Time, Alarm, Hourly Chime, Chronograph, and 12/24 Hour Format.

- **MODE Button:** Cycles through different modes: Time Display, Chronograph (Stopwatch), and Alarm.
- **RESET Button:** Used to reset values during setting, or to reset the chronograph.
- **ST/STP Button:** Starts and stops the chronograph, or adjusts settings in various modes.
- **LIGHT Button:** Activates the backlight for improved visibility in low-light conditions.

## SETUP INSTRUCTIONS

### Setting Time and Date

1. From the normal time display, press the **MODE** button three times to enter Time Setting Mode. The seconds will begin to flash.
2. Press the **RESET** button to cycle through the settings: Seconds → Hours → Minutes → Month → Date → Day of Week.
3. While the desired value is flashing, use the **ST/STP** button to adjust the value.
4. Once all settings are correct, press the **MODE** button to exit Time Setting Mode and return to the normal time display.

### Setting 12/24 Hour Format

In the normal time display, press the **ST/STP** button to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

## OPERATING INSTRUCTIONS

### Using the Chronograph (Stopwatch)

1. From the normal time display, press the **MODE** button once to enter Chronograph Mode. The display will show "00:00:00".
2. Press the **ST/STP** button to start the chronograph.
3. Press the **ST/STP** button again to stop the chronograph.
4. Press the **RESET** button to clear the chronograph to "00:00:00".
5. To return to the normal time display, press the **MODE** button.

### Setting and Using the Alarm

1. From the normal time display, press the **MODE** button twice to enter Alarm Setting Mode. The alarm hours will begin to flash.
2. Press the **ST/STP** button to adjust the alarm hour.
3. Press the **RESET** button to switch to alarm minutes.
4. Press the **ST/STP** button to adjust the alarm minutes.
5. Press the **MODE** button to exit Alarm Setting Mode.
6. To turn the alarm ON/OFF, in Alarm Setting Mode, press the **ST/STP** and **RESET** buttons simultaneously. An alarm icon will appear/disappear on the display.

### Activating the Backlight

Press the **LIGHT** button at any time to illuminate the display for a few seconds.

## MAINTENANCE

### Water Resistance

This watch is water resistant to 50 meters (5 ATM). This rating means it is suitable for short periods of recreational swimming and showering. It is **not** suitable for diving, snorkeling, or high-pressure water activities. Avoid pressing buttons while the watch is wet or submerged to prevent water ingress.

### Cleaning

To clean your watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch case or strap.

### Battery Replacement

The watch uses one product-specific battery. When the display dims or functions become erratic, the battery may need replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure the water

resistance seal is properly maintained. Improper battery replacement can compromise the watch's water resistance.

TROUBLESHOOTING

- **Watch display is blank or dim:** The battery may be depleted. Refer to the "Battery Replacement" section.
- **Time is incorrect:** Re-set the time and date following the "Setting Time and Date" instructions. Ensure the 12/24 hour format is set correctly.
- **Water appears inside the watch:** Immediately cease use and consult a professional watch repair service. This indicates a breach in the water resistance seal.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though not a feature of this model). If the issue persists, a battery replacement or professional inspection may be required.

SPECIFICATIONS

|                    |                                       |
|--------------------|---------------------------------------|
| Model Number       | SR2020                                |
| Case Size          | 33mm                                  |
| Band Size          | 14mm                                  |
| Movement           | Digital                               |
| Water Resistance   | 50m (5 ATM)                           |
| Case Material      | Polycarbonate                         |
| Band Material      | Silicone                              |
| Battery            | 1 Product Specific battery (included) |
| Product Dimensions | 7.6 x 10 x 7.8 cm; 136 g              |

WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Skechers website. For technical support or service inquiries, please contact Skechers customer service directly.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

### Answered questions about this manual

**When I press the mode button three times on my Skechers SR2020 watch, the seconds do not flash and it switches to a second time zone; how do I set the time?**

According to the Skechers Tennyson SR2020 manual, pressing the MODE button three times from the normal time display should enter the Time Setting Mode, causing the seconds to flash. If your watch is instead...

[Read full answer](#)

**I just bought a Skechers Tennyson Digital Watch (Model SR2020/SR2063W) and the buttons are not working, so I cannot change the time. How can I fix this?**

If the buttons on your new Skechers Tennyson Digital Watch are unresponsive, please check the following troubleshooting steps based on the manual: Check for a Battery Issue: Even if the watch is new, the manual...

[Read full answer](#)