

[Manuals.plus](#) /

› [Jenga](#) /

› Jenga GIANT Hardwood Game (Model 01504-24-noAcc) Instruction Manual

Jenga 01504-24-noAcc

Jenga GIANT Hardwood Game Instruction Manual

Model: 01504-24-noAcc

INTRODUCTION

The Jenga GIANT Hardwood Game provides an enlarged version of the classic Jenga experience. This game is designed for players aged 8 and up, offering a challenging and engaging activity for individuals or groups. The game involves carefully removing blocks from a tower and placing them on top, aiming to maintain stability as the tower grows. This manual provides essential information for setting up, playing, and maintaining your Jenga GIANT game.

PRODUCT CONTENTS

Your Jenga GIANT Hardwood Game package should contain the following items:

- 54 Precision-Cut Hardwood Jenga Giant Blocks
- Official Rules Card

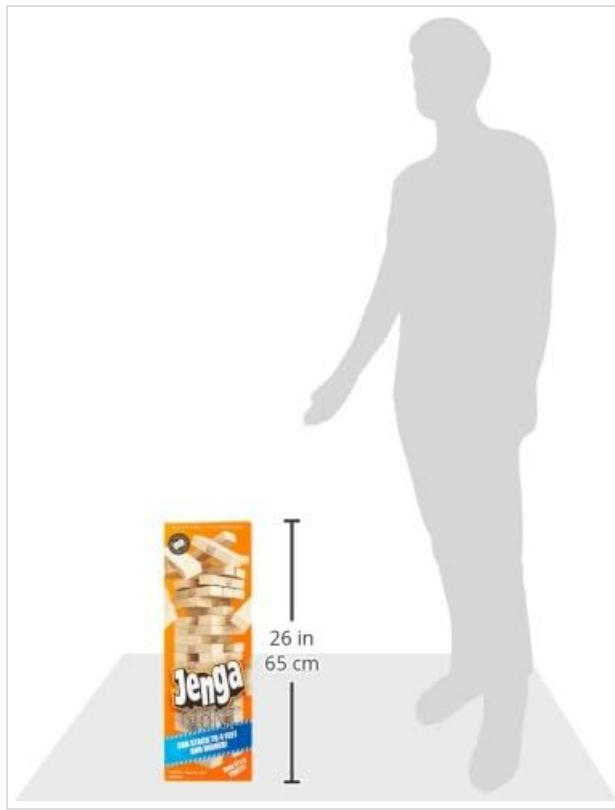


Image: The Jenga GIANT game box, illustrating the product's packaging and relative size compared to an adult.

SETUP INSTRUCTIONS

1. **Unpack the Blocks:** Carefully remove all 54 hardwood blocks from their packaging.
2. **Build the Starting Tower:** On a flat, stable surface, stack the blocks in layers of three. Each layer should be placed at a 90-degree angle to the layer below it. For example, if the first layer's blocks are oriented north-south, the second layer's blocks should be oriented east-west.
3. **Complete the Tower:** Continue stacking until all 18 layers (54 blocks total) are used. The starting tower will be approximately 22 inches (56 cm) high.
4. **Prepare the Play Area:** Ensure there is enough clear space around the tower for players to move and for the blocks to fall safely when the tower eventually collapses.

OPERATING INSTRUCTIONS: HOW TO PLAY JENGA GIANT

The objective of Jenga GIANT is to be the last player to remove and stack a block without causing the tower to fall. The game is played by 1 or more players.

Game Play Steps:

1. **Starting the Game:** The player who built the tower goes first, or players can decide on another method to determine the first player.
2. **Taking a Turn:** On your turn, carefully remove one block from any level below the highest complete level of the tower. You may use only one hand to remove the block. You can touch blocks to find a loose one, but if you move a

block, you must either remove it or return it to its original position before touching another block.

3. **Placing the Block:** Once a block is removed, place it on the topmost level of the tower. Blocks must be placed to complete a layer of three before starting a new layer. The new layer should be perpendicular to the layer below it.
4. **Ending Your Turn:** Your turn ends 10 seconds after you have successfully placed your block on top, or as soon as the next player touches the tower, whichever comes first.
5. **Losing the Game:** The player who causes the tower to fall, either by removing a block or by placing one, loses the game. If only one player is playing, the game ends when the tower falls.



Image: Players engaged in a game of Jenga GIANT, demonstrating the careful removal of a block from the tower.



Image: A close-up view of a hand extracting a Jenga GIANT block, highlighting the precision required.

Official Product Video:

Video: An official Jenga GIANT video demonstrating gameplay and the excitement of the game.

MAINTENANCE AND CARE

- **Cleaning:** Wipe blocks with a dry or slightly damp cloth if they become dirty. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store blocks in their original sturdy box in a dry environment to prevent warping or damage.
- **Natural Wear:** The hardwood blocks are designed to age gracefully. Minor nicks and dents are a normal part of wear and will not affect gameplay.
- **Avoid Moisture:** Do not expose blocks to excessive moisture or extreme temperature changes, as this can cause the wood to expand, contract, or warp.

TROUBLESHOOTING

Tower is unstable during setup:

Ensure the playing surface is completely flat and stable. Verify that each layer of three blocks is placed tightly together and at a perfect 90-degree angle to the layer below it.

Blocks feel too tight or too loose:

Variations in wood grain and humidity can affect how blocks slide. This is normal and part of the game's challenge. Over time, blocks will develop a natural "feel" as they are played with.

Missing blocks:

Refer to the Warranty and Support section for information on replacing missing blocks.

SPECIFICATIONS

Model Name	ART01504-24
Model Number	01504-24-noAcc
UPC / GTIN	856032003041
Material	Genuine Hardwood
Number of Blocks	54
Individual Block Dimensions	6" L x 2" W x 1.2" H (15.24 cm L x 5.08 cm W x 3.05 cm H)
Starting Tower Height	Approximately 22 inches (56 cm)
Maximum Play Height	Over 4 feet (1.2 meters)
Age Range	8 years to Adult
Number of Players	1 - 8

All the fun of the classic Jenga® game but **GIANT!**

We offer big fun for players of all ages, in a variety of giant sizes! Our games are made with the highest quality hardwood so you can play for years to come.

WHICH **JENGA® GIANT™** GAME IS FOR YOU?



Jenga GIANT™ CHALLENGE 3+ FEET

Jenga GIANT™ JS6™ 4+ FEET

Jenga GIANT™ JS7™ 5+ FEET

All of our games are precision-crafted with the highest quality genuine hardwood.

Image: A visual comparison of different Jenga GIANT game versions, including the JS6 model, illustrating their respective stack heights.



Image: A depiction of the Jenga GIANT JS6 tower, highlighting its ability to stack over 4 feet high.

WARRANTY AND SUPPORT

Warranty Information:

Missing blocks from newly purchased games will be replaced within 30 days of the date of purchase. To request a replacement, the request must be accompanied by the date and location of purchase, along with a copy of the sales receipt.

Please note that these hardwood Jenga Giant blocks are expected to age gracefully and gain character over time. Minor nicks and dents are considered a normal part of wear and tear and do not qualify for replacement under warranty.

Customer Support:

For further assistance or inquiries, please refer to the contact information provided with your product packaging or visit the official Jenga website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question