

Balluff BIS00W2

Balluff BIS00W2 RFID Read/Write Head Instruction Manual

Model: BIS00W2

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of the Balluff BIS00W2 RFID Read/Write Head. Please read this manual thoroughly before installation, operation, or maintenance to ensure proper use and to prevent damage to the device or injury to personnel. Keep this manual in a safe place for future reference.



Figure 1: Balluff BIS00W2 RFID Read/Write Head. This image shows the compact, rectangular black housing of the RFID read/write head, featuring a translucent indicator light on the top surface and a circular target marking on its front face, indicating the optimal read/write area. A mounting point is visible at the bottom.

2. SAFETY INSTRUCTIONS

Observe all local and national safety regulations, as well as the specific instructions provided in this manual. Failure to

comply with safety instructions may result in personal injury or equipment damage.

- Ensure power is disconnected before installation or maintenance.
- Only qualified personnel should install and service this device.
- Do not expose the device to extreme temperatures, moisture, or corrosive substances.
- Avoid strong electromagnetic fields near the device, as they may interfere with operation.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove the BIS00W2 RFID Read/Write Head from its packaging. Inspect the device for any signs of damage during transit. Report any damage to the supplier immediately.

3.2 Mounting

1. Select a suitable mounting location, ensuring sufficient clearance for cabling and optimal read/write performance.
2. Mount the device securely using appropriate fasteners through the designated mounting holes.
3. Ensure the read/write head is positioned correctly relative to the RFID tags for reliable detection.

3.3 Electrical Connection

The BIS00W2 features an RS-232 interface for communication. Connect the device to your control system according to the wiring diagram provided in the product datasheet (not included in this manual, refer to Balluff's official documentation). Ensure correct polarity and voltage supply.

- **Power Supply:** Refer to product specifications for required voltage.
- **Data Interface:** RS-232 serial communication.

4. OPERATING INSTRUCTIONS

4.1 Powering On

Once all electrical connections are secure, apply power to the device. The integrated LED indicator will illuminate to confirm power status and operational readiness.

4.2 Communication

The BIS00W2 communicates via RS-232. Configure your host system's serial port settings (baud rate, data bits, parity, stop bits) to match the device's specifications. Refer to the Balluff communication protocol documentation for detailed command structures and data formats.

4.3 Reading and Writing Tags

Position the RFID tag within the operational range of the read/write head. Use the appropriate commands via the RS-232 interface to initiate read or write operations. The LED indicator may change state to confirm successful tag interaction.

5. MAINTENANCE

5.1 Cleaning

Keep the device clean and free from dust and debris. Use a soft, dry cloth for cleaning. Do not use abrasive cleaners or solvents, as they may damage the housing or indicator lens.

5.2 Inspection

Periodically inspect the device and its cabling for any signs of wear, damage, or loose connections. Address any issues promptly to ensure continued reliable operation.

5.3 Firmware Updates

Check the Balluff website for any available firmware updates for the BIS00W2. Follow the provided instructions carefully when performing updates.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not powering on	No power supply; incorrect wiring	Check power connections and voltage supply. Verify wiring against datasheet.
Cannot read RFID tags	Tag out of range; incorrect tag type; communication error	Ensure tag is within operational range. Verify tag compatibility. Check RS-232 communication settings.
Communication errors	Incorrect serial port settings; faulty cable	Verify baud rate, data bits, parity, and stop bits. Replace RS-232 cable if suspected faulty.

If troubleshooting steps do not resolve the issue, contact Balluff technical support for further assistance.

7. SPECIFICATIONS

Feature	Detail
Model Number	BIS00W2
Type	RFID Read/Write Head
Dimensions	50x40x24 mm (approximate, based on product title)
Frequency	HF (High Frequency)
Interface	RS-232
Manufacturer	Balluff

8. WARRANTY AND SUPPORT


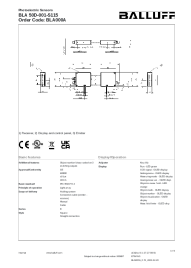

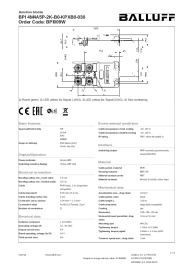

8.1 Warranty Information

Specific warranty terms and conditions for the Balluff BIS00W2 are provided at the time of purchase or can be found on the official Balluff website. Please retain your proof of purchase for warranty claims.

8.2 Technical Support

For technical assistance, product inquiries, or service requests, please contact Balluff customer support. Contact details can be found on the official Balluff website: www.balluff.com.

Related Documents - BIS00W2

	<p>Error Proofing Assembly Processes: Manufacturing with Ongoing Quality and Productivity</p> <p>Discover how Balluff's error-proofing solutions enhance manufacturing assembly processes. This guide details identifying trouble spots, implementing detection methods, and containing discrepancies to achieve continuous quality and productivity.</p>
	<p>Balluff BLA 50D-001-S115 Photoelectric Sensor - Technical Specifications and Operation</p> <p>Detailed technical specifications, features, and operational guidance for the Balluff BLA 50D-001-S115 photoelectric sensor. Includes electrical data, optical features, range, connectivity, and safety information.</p>
	<p>Balluff BTL7-B-DEX Series Analog Current Magnetostrictive Sensors - Technical Data</p> <p>Detailed technical specifications, features, and approvals for the Balluff BTL7-B-DEX Series of analog current magnetostrictive linear position sensors. Includes electrical, environmental, mechanical data, and dimensional diagrams.</p>
	<p>Balluff BPI 4M4A5P-2K-B0-KPXB0-030 Junction Block - Technical Specifications and Wiring</p> <p>Detailed technical specifications, electrical data, environmental conditions, material information, mechanical data, connector pinouts, and wiring diagrams for the Balluff BPI 4M4A5P-2K-B0-KPXB0-030 junction block (Order Code: BPI009W).</p>
	<p>Balluff BNI PG3-508-0C5-Z015 Profinet IO-Link Master Installation Guide</p> <p>This guide provides essential information for the installation and connection of the Balluff BNI PG3-508-0C5-Z015 Profinet IO-Link Master. It covers intended use, safety precautions, device structure, display elements, electrical connections, dimensions, and contact information for service centers.</p>

BALLUFF

BNI IOW-560-W01-K022



© IO-Link

Balluff - Manufacturing
Balluff - Assembly Instructions

[Balluff BNI IOW-560-W01-K022 IO-Link Wireless Bridge Assembly Instructions](#)

Assembly and installation guide for the Balluff BNI IOW-560-W01-K022 IO-Link Wireless Bridge, covering intended use, safety, electrical connections, and mounting.