

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Altec Lansing](#) /

› [Altec Lansing Mini LifeJacket 2 User Manual](#)

Altec Lansing AL-IMW477

Altec Lansing Mini LifeJacket 2 User Manual

Model: AL-IMW477

INTRODUCTION

The Altec Lansing Mini LifeJacket 2 is a compact, durable, and portable Bluetooth speaker designed for outdoor and travel use. It features IP67 waterproof, shockproof, and snowproof ratings, and is designed to float in water. This manual provides instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance of your speaker.



Figure 1: Front view of the Altec Lansing Mini LifeJacket 2 speaker.

WHAT'S IN THE BOX

Upon unboxing your Altec Lansing Mini LifeJacket 2, please ensure all components are present:

- Altec Lansing Mini LifeJacket 2 Bluetooth Speaker (Model: AL-IMW477)
- USB Charging Cable
- Quick Start Guide (separate document)

Note: A 3.5mm auxiliary cable may be included with some models.



Figure 2: Retail packaging of the Mini LifeJacket 2, showing the speaker and accessories.

SETUP

1. Charging the Speaker

Before first use, fully charge your Mini LifeJacket 2 speaker. A full charge provides up to 10 hours of playtime.

1. Locate the charging port on the back of the speaker. It is typically covered by a protective flap to ensure waterproofing.
2. Open the protective flap.
3. Connect the small end of the provided USB charging cable to the speaker's "DC IN 5V" port.
4. Connect the large end of the USB cable to a USB power adapter (not included) or a computer's USB port.
5. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off, depending on the model.
6. After charging, securely close the protective flap to maintain the speaker's waterproof integrity.



Figure 3: Rear view of the speaker, highlighting the DC IN 5V, AUX IN, and USB ports.

2. Bluetooth Pairing

Pair your speaker with a Bluetooth-enabled device (smartphone, tablet, computer) to stream audio wirelessly.

1. Press and hold the Power button on the speaker until you hear an audible prompt and the Bluetooth indicator light begins to flash, indicating it's in pairing mode.
2. On your device, navigate to the Bluetooth settings.
3. Select "Mini LifeJacket 2" from the list of available devices.
4. Once successfully paired, the speaker will provide an audible confirmation, and the Bluetooth indicator light will become solid.
5. The speaker can maintain a stable connection for up to 30 feet.

Note: Some users have reported a loud voice prompt during pairing. This is normal operation for the device.

3. Auxiliary Input

For devices without Bluetooth, use the 3.5mm auxiliary input.

1. Open the protective flap on the back of the speaker.
2. Connect one end of a 3.5mm audio cable (not included) to the speaker's "AUX IN" port.
3. Connect the other end of the cable to your audio device's headphone jack.
4. The speaker will automatically switch to auxiliary mode.
5. Adjust volume on both the speaker and your connected device.
6. Securely close the protective flap after use.

OPERATING THE SPEAKER

Basic Controls

- **Power On/Off:** Press and hold the Power button () located on the top of the speaker.
- **Volume Up:** Press the '+' button.
- **Volume Down:** Press the '-' button.
- **Play/Pause:** Press the Play/Pause button (usually a triangle or circle icon).
- **Skip Track:** Double-press the '+' button for next track, or '-' button for previous track (functionality may vary by device).



Figure 4: Top view of the speaker with power, volume, and play/pause controls.

Hands-Free Speakerphone

The Mini LifeJacket 2 features a built-in microphone for hands-free calling when connected via Bluetooth.

- **Answer Call:** Press the Play/Pause button once when a call comes in.
- **End Call:** Press the Play/Pause button once during a call.
- **Reject Call:** Press and hold the Play/Pause button.

Durability Features

The Mini LifeJacket 2 is designed for rugged use:

- **IP67 Waterproof:** The speaker can be submerged in water up to 1 meter (3.3 feet) for 30 minutes. Ensure all port covers are securely closed before exposure to water.
- **Shockproof:** Built to withstand drops and impacts.
- **Snowproof:** Operates reliably in snowy conditions.
- **Floats in Water:** Designed to float, making it ideal for pool or beach use.



EVERYTHINGPROOF

Listen to your favorite music anytime, anywhere.

Waterproof, snowproof, dirtproof and even floats in water, so you can safely take it with you on all your outdoor trips and travels.

Figure 5: The speaker demonstrating its ability to float in water.

MAINTENANCE

Proper care and maintenance will extend the life of your speaker.

- Cleaning:** Use a soft, damp cloth to clean the speaker. Do not use harsh chemicals or abrasive cleaners. For saltwater exposure, rinse with fresh water and dry thoroughly.
- Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. Ensure all port covers are sealed when not in use or during storage.
- Battery Care:** To preserve battery life, avoid fully discharging the battery frequently. Recharge the speaker regularly, even if not in constant use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is drained.	Charge the speaker using the provided USB cable.
Cannot pair via Bluetooth.	Speaker is not in pairing mode; device's Bluetooth is off; speaker is already paired to another device; interference.	Ensure speaker is in pairing mode (flashing light). Turn off and on your device's Bluetooth. Forget "Mini LifeJacket 2" from your device's Bluetooth list and try pairing again. Move closer to the speaker.
No sound or low volume.	Volume too low on speaker or device; incorrect input mode; audio cable not fully inserted (AUX).	Increase volume on both speaker and connected device. Ensure correct input mode (Bluetooth or AUX). For AUX, ensure cable is fully inserted.
Sound distortion at high volume.	Volume too high; audio source quality.	Reduce the volume on the speaker or your connected device. Ensure the audio source is of good quality.

Problem	Possible Cause	Solution
Bluetooth connection drops frequently.	Device is out of range; interference; low battery.	Keep the device within 30 feet of the speaker. Avoid obstacles between the speaker and device. Ensure speaker is charged.
Charging port not working.	Cable issue; port damage.	Try a different USB charging cable. Ensure the port is clean and free of debris. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Name	Mini LifeJacket 2
Model Number	AL-IMW477
Connectivity	Bluetooth, Auxiliary (3.5mm), USB (for charging)
Wireless Range	Up to 30 feet (9 meters)
Battery Life	Up to 10 hours (rechargeable Lithium Ion)
Water Resistance	IP67 Waterproof, Shockproof, Snowproof, Floatable
Speaker Type	Outdoor Portable Bluetooth Speaker
Special Features	Built-in microphone (hands-free speakerphone)
Dimensions (L x W x H)	7.2" x 3.1" x 4.2" (18.3 cm x 7.9 cm x 10.7 cm)
Weight	1.7 Pounds (0.77 kg)
Power Output	5 Watts

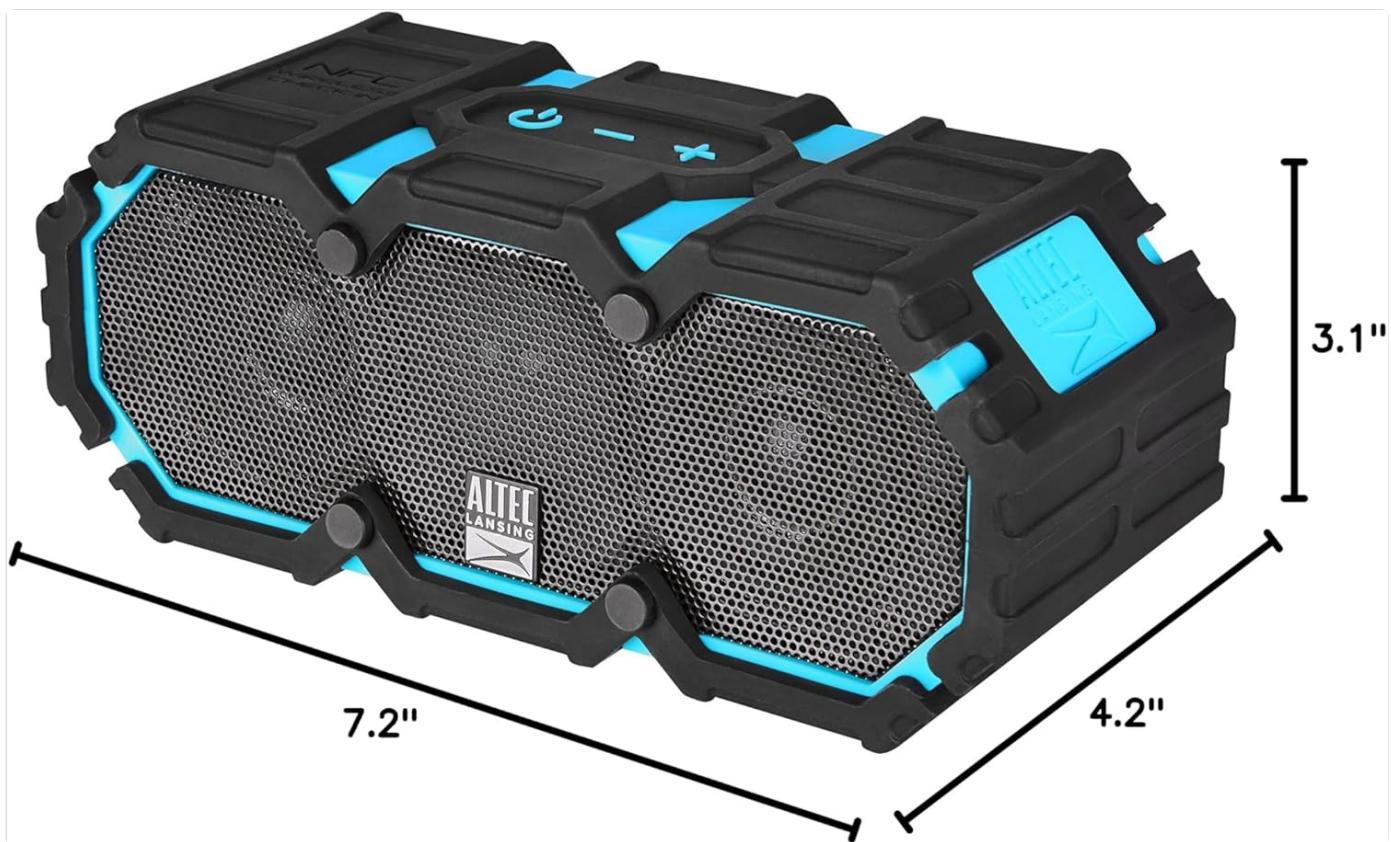


Figure 6: Speaker dimensions for reference.

WARRANTY AND SUPPORT

Your Altec Lansing Mini LifeJacket 2 comes with a limited warranty. Please refer to the official warranty documentation included with your product for specific terms and conditions.

 
 
 
For further assistance, you may refer to the official user manual PDF or contact Altec Lansing customer support.

- **Official User Manual (PDF):** [Download PDF](#)
- **Altec Lansing Brand Store:** [Visit Store](#)

© 2024 Altec Lansing. All rights reserved.

Related Documents - AL-IMW477

	<p>Altec Lansing Mini LifeJacket 2 Rugged Bluetooth Speaker Quick Start Guide IMW477</p> <p>This quick start guide provides essential information for the Altec Lansing Mini LifeJacket 2 Rugged Bluetooth Speaker (IMW477), covering package contents, speaker controls, charging instructions, Bluetooth pairing, music playback, wired audio input, IP67 rating, mounting bracket usage, Siri activation, and detailed warranty and FCC compliance information.</p>
	<p>Altec Lansing Mini LifeJacket 2 Rugged Bluetooth Speaker Quick Start Guide</p> <p>A comprehensive quick start guide for the Altec Lansing Mini LifeJacket 2 rugged Bluetooth speaker (Model IMW477), covering setup, charging, Bluetooth pairing, music playback, wired audio input, and warranty information.</p>

	<p>Altec Lansing Mini Lifejacket 2 Rugged Bluetooth Speaker Quick Start Guide</p> <p>A quick start guide for the Altec Lansing Mini Lifejacket 2 Rugged Bluetooth Speaker (Item # IMW477), covering package contents, speaker buttons, charging, Bluetooth pairing, music playback, and wired audio input.</p>
	<p>Altec Lansing Mini LifeJacket IMW475 Rugged Bluetooth Speaker Quick Start Guide</p> <p>Quick start guide for the Altec Lansing Mini LifeJacket IMW475 rugged Bluetooth speaker. Learn how to charge, pair, listen to music, use wired input, and activate Siri. Includes warranty information and technical support details.</p>
	<p>Altec Lansing Jacket H2O III Rugged Bluetooth Speaker Quick Start Guide and Warranty</p> <p>Quick start guide and warranty information for the Altec Lansing Jacket H2O III rugged Bluetooth speaker. Learn about setup, pairing, features like waterproofing and stereo pairing, and understand the one-year limited warranty terms.</p>
	<p>Altec Lansing LifeJacket XL Jolt IMW790 Quick Start Guide</p> <p>Concise guide to setting up and using the Altec Lansing LifeJacket XL Jolt IMW790 rugged Bluetooth speaker, covering pairing, charging, house party mode, and music controls.</p>

Documents - Altec Lansing – AL-IMW477

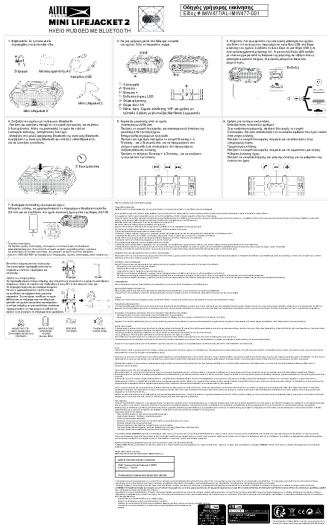
D-NTP Preisliste 2016 Altec Lansing v4						
ART	EAN	PRODUCT NAME	PHOTO	DESCRIPTION	NET	UVP
AL-IMW477	9041331518569	CHARGE		200W SPEAKER (10W RMS X 2) 100W RMS X 2 TOTAL POWER 200W. ACCESSORIES: CHARGE CABLE	140,00	198,00
AL-IMW477	9041331518569	CHARGE		200W SPEAKER (10W RMS X 2) 100W RMS X 2 TOTAL POWER 200W. ACCESSORIES: CHARGE CABLE	70,00	108,00
AL-IMW477	9041331518569	CHARGE		200W SPEAKER (10W RMS X 2) 100W RMS X 2 TOTAL POWER 200W. ACCESSORIES: CHARGE CABLE	40,00	68,00
AL-IMW477	9041331518569	CLAMP		200W SPEAKER (10W RMS X 2) 100W RMS X 2 TOTAL POWER 200W. ACCESSORIES: CLAMP	40,00	68,00
AL-IMW477	9041331518569	CLAMP		200W SPEAKER (10W RMS X 2) 100W RMS X 2 TOTAL POWER 200W. ACCESSORIES: CLAMP	70,00	108,00
AL-IMW477	9041331518569	PHYSICAL		200W SPEAKER (10W RMS X 2) 100W RMS X 2 TOTAL POWER 200W. ACCESSORIES: PHYSICAL	50,00	78,00
AL-IMW477	9041331518569	PHYSICAL		200W SPEAKER (10W RMS X 2) 100W RMS X 2 TOTAL POWER 200W. ACCESSORIES: PHYSICAL	160,00	198,00
AL-IMW477	9041331518569	PHYSICAL		200W SPEAKER (10W RMS X 2) 100W RMS X 2 TOTAL POWER 200W. ACCESSORIES: PHYSICAL	160,00	198,00
AL-IMW477	9041331518569	PHYSICAL		200W SPEAKER (10W RMS X 2) 100W RMS X 2 TOTAL POWER 200W. ACCESSORIES: PHYSICAL	210,00	278,00
AL-IMW477	9041331518569	PHYSICAL		200W SPEAKER (10W RMS X 2) 100W RMS X 2 TOTAL POWER 200W. ACCESSORIES: PHYSICAL	300,00	418,00

[\[pdf\] User Manual Accessories](#)

D NTP Preisliste 2016 Altec Lansing v4 Daniel new tech products support |||

NTP New-Tech-Products Handels GmbH Tel:49 0 7308-81100-0 Fax:49 0 7308-81100-19 E-Mail: info ntp-gm133 0021331518569 JACKET H2O IMW457-AB AL-IMW457-001.144 0021331696267 JACKET H2O IMW477-BLK **AL-IMW477-001.133 0021331753953 MINI LIFE JACKET IMW477-DR AL-IMW477-001.196 0021331354303 MINI...**

lang:en score:39 filesize: 759.22 K page_count: 4 document date: 2016-03-04



[\[pdf\]](#) Quick Start Guide

QSG IMW477 6languages FINAL REVISED P 1 DTP 78232 524525trs M 378789 s3 praktiker gr

myPraktiker Images Products 78154 2 25149 Attachments |||

IMW477/AL-IMW477-001 RUGGED BLUETOOTH 1. . 2. . . AC USB Mini Lifejacket

2 Mini Lifejacket 2 4. Bluetooth - 3 . , . - Bluetooth Bluetooth. Bluetooth Mini lifejacket

2 . 3 LED AUX IN : 1/4 5. ...

lang:tl score:26 filesize: 4.38 M page_count: 1 document date: 2017-02-23