



Manuals.plus /

› **Bachmann** /

› Bachmann Twist 931.021 Embedded Power Strip Instruction Manual

Bachmann 931.021

Bachmann Twist 931.021 Embedded Power Strip Instruction Manual

Model: 931.021

INTRODUCTION

The Bachmann Twist 931.021 is an innovative embedded power strip designed for seamless integration into various tabletops, such as kitchen counters or office desks. This manual provides essential information for the safe installation, proper operation, and effective maintenance of your Bachmann Twist device. Please read these instructions thoroughly before beginning installation or use.

SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, observe the following safety guidelines:

- Read all instructions completely before installing or using the device.
- Do not expose the unit to excessive moisture or liquids. The integrated water drainage is for minor spills, not submersion.
- Ensure the electrical installation provides proper grounding.
- Do not attempt to disassemble, modify, or repair the unit yourself. Refer all servicing to qualified personnel.
- Keep the device out of reach of children.
- This product is designed for indoor use only.
- Do not exceed the maximum load capacity of 16A at 250V.
- Ensure the power cable is not pinched or damaged during installation or use.

PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x Bachmann Twist 931.021 unit (with 2 power sockets)
- 1 x 2-meter connection cable with Type C/EF plug
- Mounting system components (pre-installed or separate)

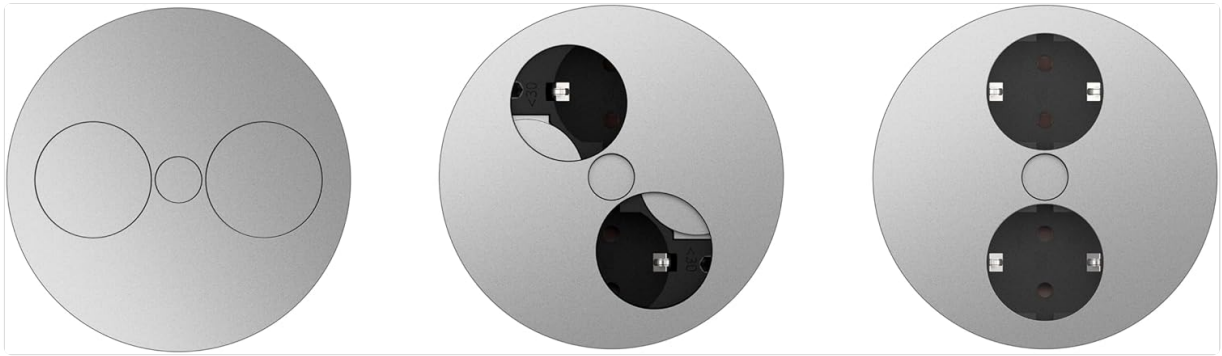


Image: The Bachmann Twist 931.021 unit, showing the main body, the attached 2-meter power cable, and the Type C/EF plug. This image displays all primary components included for installation.

SETUP AND INSTALLATION

The Bachmann Twist 931.021 is designed for flush mounting into tabletops. Professional installation is recommended.

1. **Prepare the Surface:** Choose a suitable location on your tabletop. Ensure there is sufficient space below the surface for the unit and its cable, considering the minimum installation depth of 40 mm.
2. **Create the Cutout:** Using appropriate tools, create a circular cutout in the tabletop. Refer to the product's technical drawings for the exact diameter required.
3. **Insert the Unit:** Carefully place the Bachmann Twist unit into the prepared cutout from above.
4. **Secure the Unit:** From below the tabletop, use the integrated mounting system to secure the unit firmly in place. Tighten the fasteners until the unit is flush and stable.
5. **Connect Power:** Route the 2-meter connection cable to a suitable, grounded power outlet and plug it in. Ensure the cable is not strained or exposed to damage.



Image: The Bachmann Twist 931.021 unit seamlessly integrated and closed within a modern kitchen countertop, demonstrating its flush-mount design.



Image: The Bachmann Twist 931.021 unit integrated into a kitchen countertop, shown in its open position, revealing the two power sockets ready for use.

OPERATING INSTRUCTIONS

The Bachmann Twist 931.021 features a unique rotating mechanism for accessing its power sockets.

1. **To Open:** Gently press down on the center of the unit's top cover. While pressed, twist the cover clockwise or counter-clockwise until the two power sockets are fully exposed.
2. **To Use:** Insert your electrical plugs into the available sockets. The unit provides two Type C/EF sockets with child protection.
3. **To Close:** Remove all plugs from the sockets. Gently press down on the center of the unit and twist the cover back until it is flush with the tabletop surface. Ensure it clicks into its closed position.



Image: A sequence of three top-down views illustrating the Bachmann Twist 931.021's opening mechanism: from fully closed, to partially rotated, to fully open with sockets exposed.



Image: The Bachmann Twist 931.021 in an open state on a kitchen counter, actively providing power to a tablet via a charging cable, demonstrating its practical application.

MAINTENANCE

Regular maintenance helps ensure the longevity and proper function of your Bachmann Twist unit.

- **Cleaning:** Clean the visible surfaces of the unit with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the chrome mat finish.
- **Mechanism Check:** Periodically check the opening and closing mechanism for smooth operation. If it feels stiff, ensure there are no obstructions. Do not apply lubricants unless specifically recommended by the manufacturer.
- **Water Drainage:** The unit features integrated water drainage. Ensure the drainage channels are not blocked by debris to allow for proper water evacuation in case of minor spills.

TROUBLESHOOTING

If you encounter issues with your Bachmann Twist 931.021, refer to the following common problems and solutions:

- **No Power to Sockets:**
 - Check if the main power supply to the unit is active.
 - Ensure the 2-meter connection cable is securely plugged into a functional wall outlet.
 - Verify that the wall outlet itself is receiving power (test with another device).
- **Unit Not Opening/Closing Smoothly:**
 - Check for any physical obstructions (e.g., food particles, debris) around the rotating mechanism.
 - Clean the edges and the central pivot point with a soft, dry cloth.
- **Loose Fit in Tabletop:**
 - Access the underside of the tabletop and re-tighten the mounting system components.

If these steps do not resolve the issue, please contact customer support or a qualified electrician.

SPECIFICATIONS

Feature	Specification
Model Number	931.021
Number of Sockets	2
Socket Type	Type C/EF (European/Hybrid FR-DE) with child protection
Voltage	250 Volts
Current Rating	16 A
Cable Length	2 meters
Housing Material	Aluminum / Plastic
Color	Chrome mat
Minimum Installation Depth	40 mm
Special Features	Flush mountable, Integrated water drainage, Child protection
Recommended Use	Indoor, Technical (Kitchen, Office)

WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or spare parts availability, please refer to the documentation provided at the point of purchase or contact your retailer. You may also visit the official Bachmann website for further assistance.