

[Manuals.plus](#) /

- › [WEofferwhatYOUwant](#) /
- › WEofferwhatYOUwant Baby Drum (Model IB-T8WL-TQK9) Instruction Manual

WEofferwhatYOUwant IB-T8WL-TQK9

WEofferwhatYOUwant Baby Drum (Model IB-T8WL-TQK9) Instruction Manual

1. INTRODUCTION

Thank you for choosing the WEofferwhatYOUwant Baby Drum. This portable musical toy is designed to provide engaging sensory experiences for infants aged 6 months and older. It features interactive LED lights, various sound modes, and a compact design for easy handling and travel.



Figure 1: WEofferwhatYOUwant Baby Drum

2. SAFETY INFORMATION

Your child's safety is our top priority. This product is crafted from BPA-free and lead-free plastic with smooth edges to ensure safe play. It is certified by ASTM, CPSIA, and EN71 standards.

- Always supervise children during play.
- Inspect the toy regularly for any damage or loose parts. Discontinue use if any damage is found.
- Keep batteries out of reach of children.

3. PACKAGE CONTENTS

The WEofferwhatYOUwant Baby Drum package includes:

- 1 x WEofferwhatYOUwant Baby Drum
- 2 x AAA batteries (pre-installed)

4. PRODUCT FEATURES

The Baby Drum offers a variety of features designed to stimulate and entertain:

- **Interactive LED Light Show:** The drum lights up in sync with beats and melodies, providing visual stimulation.
- **Five Engaging Modes:** Explore free-play drum, music mode, lullabies, ocean sounds, and mixed sound effects.
- **Soft Volume Output:** Designed with a soft sound output for sensitive ears.
- **Portable Design:** Compact and lightweight, making it easy for little hands to hold and ideal for travel.
- **Auto Shut-Off:** Conserves battery life by automatically turning off after a period of inactivity.



Figure 2: Baby Drum Features Overview

5. SETUP

The WEofferwhatYOUwant Baby Drum comes with 2 AAA batteries pre-installed. To begin use, simply turn on the device.

5.1. Battery Replacement

If battery replacement is needed:

1. Locate the battery compartment on the bottom of the toy.
2. Using a small screwdriver, open the battery compartment.
3. Remove the old AAA batteries and insert two new AAA batteries, ensuring correct polarity (+/-).
4. Close the compartment securely with the screwdriver.

6. OPERATING INSTRUCTIONS

The Baby Drum features multiple buttons on its top surface, each offering a unique interactive experience:

- **Red On/Off Button:** This button controls the power. Press it to turn the toy on or off. It plays two different tones for power on and power off. The toy will automatically turn off after approximately 60 seconds of inactivity to conserve battery life.
- **Pink Lullaby Button:** Press this button to play a continuous sequence of 7 different lullabies. The lullabies will play through twice (approximately 8 minutes total) and will not turn off until another button is pressed, making it suitable for bedtime.
- **Orange Tempo Riffs Button:** Activates 4 different tempo riffs. Each press plays a new riff.
- **Green Sound Effect Button:** Triggers 9 different sound effects. Each press plays a new sound effect.
- **Fuchsia Drumming Tempos Button:** Initiates 5 different drumming tempos with accompanying music. Each press plays a new sequence.
- **Large Center Drum Button:** Tapping this central button produces a single drumming sound per press, allowing for free-play drumming.

The LED lights inside the drum will illuminate and change colors in sync with the sounds and music, enhancing the sensory experience.

Your browser does not support the video tag. Please update your browser to view this content.

Video 1: Demonstration of the Portable Set of Music Instruments, including the Baby Drum.

7. MAINTENANCE

To ensure the longevity and hygiene of your Baby Drum:

- Wipe the toy with a soft, damp cloth.
- Do not immerse the toy in water.
- Avoid using harsh chemicals or abrasive cleaners.
- Store in a cool, dry place away from direct sunlight.

8. TROUBLESHOOTING

Issue	Possible Cause	Solution
Toy turns off too quickly.	Automatic shut-off feature activated.	The toy is designed to turn off after approximately 60 seconds of inactivity to save battery life. Press any button to reactivate.
Sound is muffled.	Speaker is located on the bottom of the toy.	Ensure the toy is placed on a hard, flat surface or held in a way that does not obstruct the bottom speaker.
Lullabies stop unexpectedly.	Another button was pressed.	The lullaby mode will continue until any other button is pressed. To restart, press the Pink Lullaby Button again.
Lights are not working.	Low batteries or toy is off.	Ensure the toy is turned on. Replace batteries if necessary.

9. SPECIFICATIONS

Feature	Detail
Product Dimensions	3.62 x 3.5 x 3.5 inches
Item Weight	4.3 ounces
Model Number	IB-T8WL-TQK9
Recommended Age	6 months - 5 years
Batteries	2 AAA batteries (included)
Certifications	ASTM, CPSIA, EN71



Figure 3: Baby Drum Dimensions

10. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your WEofferwhatYOUwant Baby Drum, please contact WEofferwhatYOUwant customer service. Refer to your purchase documentation for specific warranty details.