

[Manuals.plus](#) /

› [Citizen](#) /

› Citizen Eco-Drive AT8113-12H Analog Bracelet Watch User Manual

Citizen AT8113-12H

Citizen Eco-Drive AT8113-12H Analog Bracelet Watch User Manual

Model: AT8113-12H

INTRODUCTION

Thank you for choosing the Citizen Eco-Drive AT8113-12H Analog Bracelet Watch. This timepiece combines elegant design with advanced technology, featuring Citizen's proprietary Eco-Drive (solar-powered) movement and radio-controlled timekeeping for exceptional accuracy. This manual provides essential information to help you set up, operate, and maintain your watch, ensuring its longevity and optimal performance.

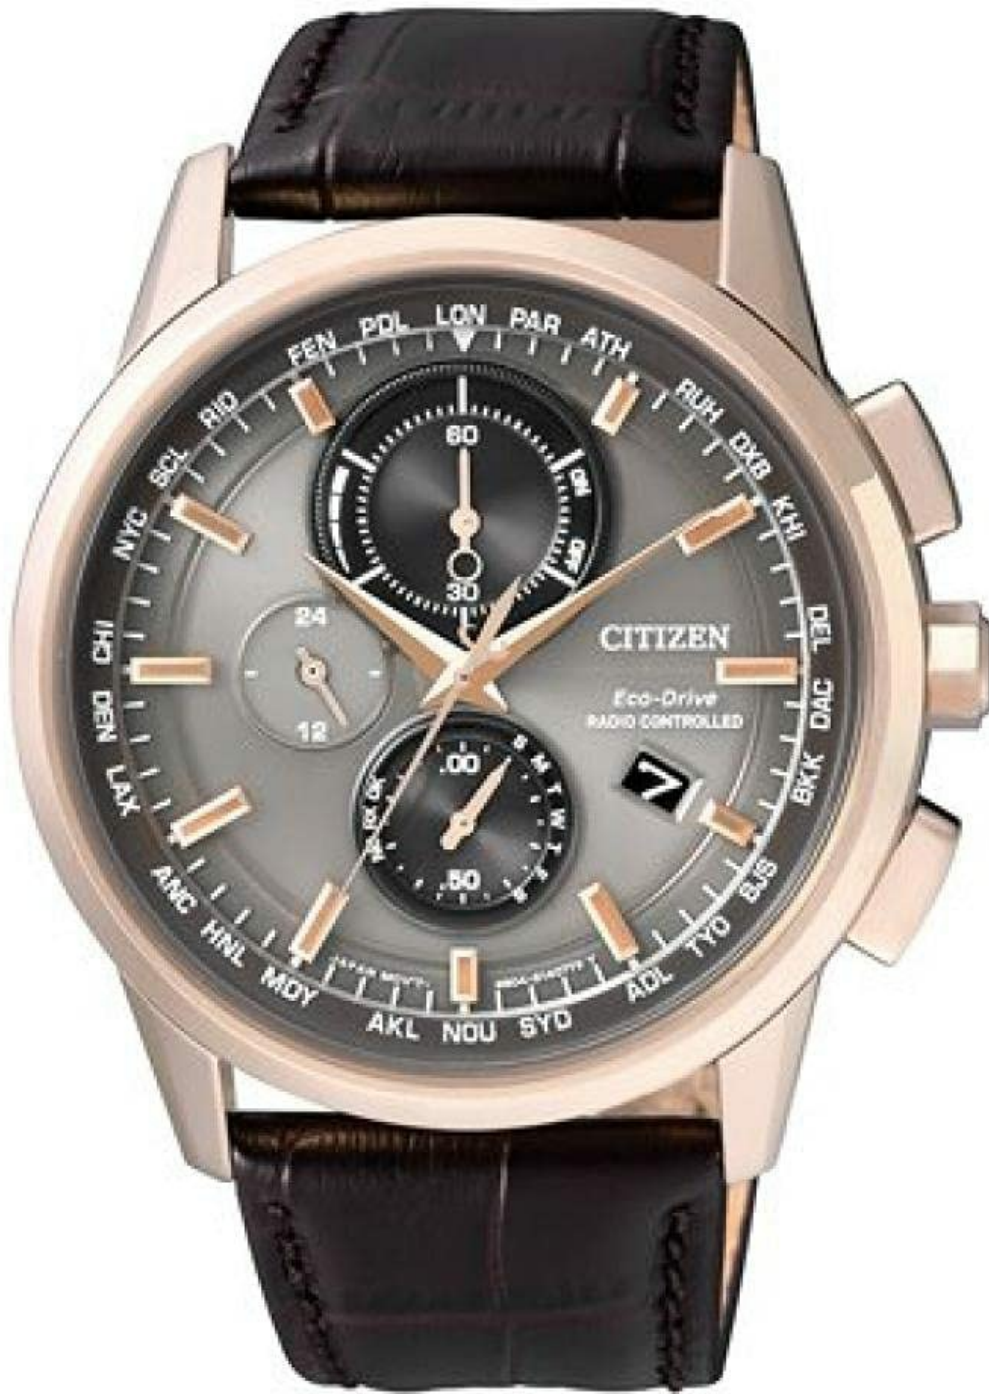


Figure 1: Front view of the Citizen Eco-Drive AT8113-12H watch, showcasing its grey dial, rose gold-tone case, and brown leather strap.

SETUP

1. Initial Charging (Eco-Drive)

Your Citizen Eco-Drive watch is powered by light. Before initial use, or if the watch has stopped, expose the dial to bright light (natural sunlight is ideal) for several hours. A full charge can take up to 11 hours in direct sunlight or significantly longer under artificial light. Ensure the dial is not covered.

2. Setting the Time Zone and Receiving Radio Signal

The AT8113-12H is a radio-controlled watch, meaning it automatically receives time signals to maintain accurate time. To set your home city/time zone:

1. **Pull the crown out to position 2**(the furthest position). The second hand will point to the current time zone setting.
2. **Rotate the crown** to select your desired city code (e.g., LON for London, PAR for Paris, NYC for New York). Refer to the city code ring on the dial.
3. **Push the crown back to position 0**(normal position). The watch will attempt to receive the time signal for the selected city.
4. For manual signal reception, press and hold the lower pusher (B) for approximately 2 seconds until the second hand points to 'RX' (Receive). The watch will then attempt to receive the signal.



Figure 2: Side view illustrating the crown and pushers used for setting and operating the watch functions.

3. Adjusting the Leather Strap

The watch comes with a brown calf leather strap. To adjust the fit, simply use the tang buckle to select the appropriate

hole that provides a comfortable and secure fit on your wrist. Ensure it is not too tight to allow for air circulation and prevent discomfort.



Figure 3: Rear view of the watch, highlighting the brown calf leather strap and the tang clasp mechanism.

OPERATING THE WATCH

1. Basic Timekeeping

The main hands (hour, minute, second) display the current time for your selected home city. The small sub-dial at the 9 o'clock position indicates the 24-hour time.

2. Chronograph Function

The watch features a chronograph (stopwatch) function:

- **Start/Stop:** Press the upper pusher (A) to start and stop the chronograph.
- **Reset:** While the chronograph is stopped, press the lower pusher (B) to reset all chronograph hands to their zero positions.

The sub-dial at 12 o'clock measures chronograph minutes, and the sub-dial at 6 o'clock measures chronograph seconds.

3. Date Display

The date is displayed in an aperture at the 3 o'clock position. The date automatically adjusts for months with 30 or 31 days. For months with fewer days (e.g., February), manual adjustment may be required at the beginning of the next month.

4. World Time Function

To check the time in another city:

1. **Pull the crown out to position 1** (first click).
2. **Rotate the crown** to align the second hand with the desired city code on the dial's outer ring. The hour and minute hands will then display the time for that city.
3. **Push the crown back to position 0** to return to normal timekeeping.



Figure 4: Close-up of the watch dial, highlighting the world city codes around the bezel for the world time function.

MAINTENANCE

1. Cleaning Your Watch

Wipe the case and crystal with a soft, dry cloth. For the leather strap, avoid excessive moisture. If it gets wet, allow it to air dry naturally, away from direct heat. Do not use chemical cleaners or abrasive materials.

2. Water Resistance

This watch is water resistant to 100 meters (10 ATM / 330 feet). This makes it suitable for swimming and snorkeling, but not for scuba diving. Always ensure the crown is fully pushed in before exposing the watch to water. Do not operate the crown or pushers while the watch is wet or submerged.

3. Eco-Drive Charging

To ensure continuous operation, expose your watch to light regularly. Avoid prolonged storage in dark places. If the watch stops, it indicates a low charge and requires exposure to light. The power reserve can last for several months on a full charge, even in darkness.

4. Storage

When storing the watch for extended periods, place it in an area where it can receive some light to maintain its charge. Avoid extreme temperatures, direct sunlight for prolonged periods (which can fade the strap), and strong magnetic fields.

TROUBLESHOOTING

- **Watch has stopped or is losing time:** This usually indicates insufficient charge. Expose the watch to bright light for an extended period.
- **Radio signal not received:** Ensure you are in an area with good signal reception (away from electronic interference, near a window). Try a manual signal reception (refer to Setup section). The watch may not receive signals in certain geographical locations or during specific times of day due to atmospheric conditions.
- **Hands are misaligned:** If the hands do not align correctly after a signal reception or impact, perform a manual zero-position correction. Refer to the detailed instruction manual available on the Citizen official website for specific steps for your movement (H804).
- **Date not changing correctly:** Manually adjust the date by pulling the crown out to position 1 and rotating it. Remember to adjust for months with fewer than 31 days.

SPECIFICATIONS

Feature	Specification
Model Number	AT8113-12H
Movement Type	Eco-Drive (Solar), Quartz, Radio-Controlled (H804)
Case Material	Rose Gold-tone Stainless Steel
Case Diameter	43 Millimetres
Case Thickness	12 Millimetres
Dial Color	Grey
Crystal	Scratch Resistant Sapphire
Band Material Type	Brown Calf Leather
Water Resistance	100 meters / 330 feet (10 ATM)
Item Weight	100 g (0.1 Kilograms)

Feature	Specification
Features	Chronograph, Date Display, World Time, Radio-Controlled Time

WARRANTY AND SUPPORT

Warranty information for your Citizen watch is typically provided with your purchase documentation. Please refer to the warranty card or booklet included in your watch packaging for details on coverage, terms, and conditions.

For further assistance, detailed operational guides, or to locate an authorized service center, please visit the official Citizen website or contact Citizen customer support in your region. Keep your proof of purchase for any warranty claims.

© 2024 Citizen Watch Co., Ltd. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0156EH2ZU>

More documents and user manuals: <https://manuals.plus/>