

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [TIMEX](#) /
- › [TIMEX Weekender Chronograph Watch TW2P78000 User Manual](#)

TIMEX TW2P78000

TIMEX Weekender Chronograph Watch TW2P78000 User Manual

Model: TW2P78000

INTRODUCTION

This manual provides comprehensive instructions for the proper use and care of your TIMEX Weekender Chronograph Watch, model TW2P78000. Please read this manual thoroughly to understand all features and ensure optimal performance and longevity of your timepiece.

PRODUCT OVERVIEW

The TIMEX Weekender Chronograph is a quartz movement watch featuring a chronograph function, Indiglo night-light, and a durable leather strap. It is designed for everyday wear with a water resistance rating suitable for splashes.



Figure 1: Front view of the TIMEX Weekender Chronograph watch on a wrist, showcasing the off-white dial, chronograph sub-dials, and brown leather strap.

Watch Components

- **Crown:** Used for setting time and date.
- **Pushers (A & B):** Used to operate the chronograph functions.
- **Dial:** Displays time, chronograph measurements, and date.
- **Hands:** Hour, minute, second, and chronograph hands.
- **Strap:** Brown leather strap with buckle closure.



Figure 2: Side view of the watch case, highlighting the crown in the center and the two chronograph pushers (A and B) above and below it.

SETUP

1. Setting the Time

1. Pull the crown out to position 2 (farthest out). The second hand will stop.
2. Rotate the crown to move the hour and minute hands clockwise until the desired time is set. Ensure AM/PM is correctly set if your watch has a 24-hour indicator or date changes at midnight.
3. Push the crown back into position 0 (normal operating position). The second hand will resume movement.

2. Setting the Date

1. Pull the crown out to position 1 (first click).
2. Rotate the crown clockwise or counter-clockwise (depending on the movement) until the correct date appears in the date window.
3. Push the crown back into position 0.
4. *Note:* Avoid setting the date between 9 PM and 3 AM, as this may interfere with the date change mechanism. If you need to set the date during this period, first set the time outside this range, then set the date, and finally reset the time.

3. Chronograph Hand Alignment (if necessary)

If the chronograph hands do not reset to the zero position, they may need alignment.

1. Pull the crown out to position 2.
2. Press pusher A (top pusher) repeatedly to advance the chronograph second hand to the 12 o'clock (zero) position.
3. Press pusher B (bottom pusher) repeatedly to advance the chronograph minute hand to the 12 o'clock (zero) position.
4. Once all chronograph hands are aligned, push the crown back into position 0.

OPERATING YOUR WATCH

1. Using the Chronograph

The chronograph measures elapsed time in seconds and minutes.

- **Start:** Press pusher A to start the chronograph. The chronograph second hand will begin to move.
- **Stop:** Press pusher A again to stop the chronograph. The elapsed time will be indicated by the chronograph second and minute hands.
- **Reset:** After stopping, press pusher B to reset the chronograph hands to the zero position.
- **Split Time (if applicable):** Some chronographs allow for split time measurement. Refer to specific model instructions if this feature is present. For this model, it primarily functions as a standard start/stop/reset chronograph.

2. Indiglo Night-Light

Your TIMEX Weekender Chronograph features the Indiglo night-light for illumination in low-light conditions.

- To activate the Indiglo night-light, press and hold the crown (in position 0). The entire dial will illuminate.
- Release the crown to turn off the light.

MAINTENANCE

1. Cleaning Your Watch

- Wipe the watch case and crystal with a soft, dry cloth.
- For the leather strap, avoid prolonged exposure to water and direct sunlight. Clean with a slightly damp cloth and allow to air dry. Do not use harsh chemicals.

2. Battery Replacement

When the watch battery needs replacement, the second hand may begin to jump in 2-second intervals (End-of-Life indicator). It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

3. Water Resistance

Your watch is water resistant to 30 meters (3 ATM). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, or diving. Always ensure the crown is fully pushed in before any contact with water.



Figure 3: Rear view of the watch case, showing the stainless steel back and the brown leather strap with its buckle closure.

TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Time or date not setting:** Ensure the crown is pulled out to the correct position (position 1 for date, position 2 for time).
- **Chronograph hands not resetting to zero:** Follow the "Chronograph Hand Alignment" instructions in the Setup section.
- **Indiglo not working:** Ensure the crown is fully pushed in (position 0) before pressing it to activate Indiglo. If it still doesn't work, the battery may be low.

If problems persist, please contact TIMEX customer support or an authorized service center.

SPECIFICATIONS

Model Number	TW2P78000
Brand	TIMEX
Movement Type	Quartz
Display Type	Chronograph
Case Diameter	40 Millimetres
Case Material	Brass
Crystal Material	Crystal
Band Material	Leather
Band Colour	Brown
Dial Colour	Off-White
Water Resistance Depth	30 Metres (3 ATM)
Closure Type	Buckle
Item Weight	160 g (0.35 Pounds)

WARRANTY AND SUPPORT

Warranty Information

Your TIMEX Weekender Chronograph Watch, model TW2P78000, comes with a **1 Year Manufacturer Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear of the strap or battery.

Customer Support

For warranty claims, service, or technical assistance, please contact TIMEX customer support or visit an authorized TIMEX service center. Keep your proof of purchase for warranty validation.



Figure 4: The TIMEX Weekender Chronograph watch presented in its black branded box.