

Rohl C7324/2MPN

Rohl C7324/2MPN Country Bath Pop-Up Drain Center Plug Instruction Manual

1. INTRODUCTION

This instruction manual provides detailed guidance for the installation, operation, maintenance, and troubleshooting of the Rohl C7324/2MPN Country Bath Pop-Up Drain Center Plug. Please read this manual thoroughly before installation and use to ensure proper function and longevity of your product. This component is designed to work with compatible Rohl bath drain assemblies.

2. PRODUCT OVERVIEW

The Rohl C7324/2MPN is a replacement or upgrade center plug for Country Bath Pop-Up Drains. It features a polished nickel finish and includes a height adjuster for precise fit and function. This component is essential for controlling water drainage in your bath.

Sorry
IMAGE
NOT AVAILABLE

Figure 2.1: Rohl C7324/2MPN Country Bath Pop-Up Drain Center Plug. This image shows the polished nickel finish and the overall design of the drain plug, including the top cap and the stem with height adjustment mechanism.

2.1 Key Features:

- **Material:** Durable Nickel construction.
- **Finish:** Polished Nickel for a sleek appearance.
- **Function:** Center plug for pop-up bath drains.
- **Adjustability:** Complete with height adjuster for optimal sealing.
- **Compatibility:** Designed for Rohl Country Bath Pop-Up Drain assemblies.

3. SETUP AND INSTALLATION

This section outlines the general steps for installing or replacing the pop-up drain center plug. Ensure the main drain assembly is already correctly installed in your bathtub.

3.1 Required Tools (Not Included):

- Adjustable wrench or pliers (if adjusting existing linkage)
- Soft cloth

3.2 Installation Steps:

1. **Prepare the Drain:** Ensure the existing drain opening is clean and free of debris. If replacing an old plug, remove it completely.
2. **Insert the Plug:** Carefully insert the new Rohl C7324/2MPN center plug into the drain opening. The stem of the plug should align with the internal linkage of your pop-up drain assembly.
3. **Adjust Height:** The plug includes a height adjuster. Gently push down on the plug to ensure it seats properly and creates a seal. If the plug sits too high or too low, adjust the height mechanism on the stem until it sits flush with the drain opening when closed, and lifts sufficiently when open. This

adjustment typically involves rotating the bottom portion of the stem.

- 4. **Test Functionality:** Fill the tub with a small amount of water. Close the drain plug and observe if it holds water without leaking. Then, open the drain plug and ensure water drains freely. Make further height adjustments if necessary.
- 5. **Final Check:** Confirm the plug operates smoothly and provides a secure seal when closed.

4. OPERATING INSTRUCTIONS

The Rohl C7324/2MPN Pop-Up Drain Center Plug operates in conjunction with your bath's pop-up drain control (e.g., a lever or knob on the overflow plate).

- **To Close the Drain:** Activate your bath's pop-up drain control (e.g., push down on the lever or turn the knob) to lower the drain plug into the closed position, sealing the drain opening.
- **To Open the Drain:** Activate your bath's pop-up drain control (e.g., pull up on the lever or turn the knob) to lift the drain plug, allowing water to drain from the tub.

Ensure the plug moves freely and fully engages in both open and closed positions for optimal performance.

5. CARE AND MAINTENANCE

Proper care and maintenance will help preserve the finish and functionality of your Rohl Pop-Up Drain Center Plug.

- **Cleaning:** Clean the polished nickel finish regularly with a soft, damp cloth. For stubborn spots, use a mild soap and water solution. Rinse thoroughly and dry immediately with a soft cloth to prevent water spots.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, scouring pads, ammonia-based cleaners, or cleaners containing bleach, acids, or alcohol. These can damage the finish.
- **Hair and Debris Removal:** Periodically remove the plug and clear any accumulated hair or debris from the drain opening and the plug stem to ensure proper drainage and prevent clogs.
- **Check for Wear:** Inspect the rubber seal (if applicable) on the plug periodically for signs of wear or cracking. A worn seal can lead to leaks.

6. TROUBLESHOOTING

If you encounter issues with your Rohl Pop-Up Drain Center Plug, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Drain plug does not hold water (leaks).	Plug height is incorrect; debris under the plug; worn or damaged seal.	Adjust the plug's height adjuster. Clean any debris from around the drain opening and under the plug. Inspect and replace the seal if damaged.
Drain plug does not open or close smoothly.	Debris around the stem; misaligned linkage (not part of this product, but related); plug height incorrect.	Remove the plug and clean the stem and drain opening. Re-adjust the plug height. If the issue persists, inspect the main pop-up drain linkage.

Problem	Possible Cause	Solution
Slow draining.	Hair or debris accumulation in the drain pipe; plug not lifting high enough.	Remove the plug and clear any clogs from the drain pipe. Adjust the plug height to ensure it lifts fully when open.

If these solutions do not resolve the issue, please contact Rohl customer support or a qualified plumber.

7. SPECIFICATIONS

Attribute	Detail
Model Number	C7324/2MPN
Brand	Rohl
Material	Nickel
Color/Finish	Polished Nickel
Item Weight	1 Pounds
Product Dimensions	3 x 13 x 3 inches
UPC	824438256989
Manufacturer	Trumbull Industries
First Available Date	September 9, 2015

8. WARRANTY AND SUPPORT

For specific warranty information regarding your Rohl C7324/2MPN Country Bath Pop-Up Drain Center Plug, please refer to the documentation included with your original purchase or visit the official Rohl website. Warranty terms may vary.

8.1 Customer Support:

If you require further assistance, have questions about installation, or need to report a defect, please contact Rohl customer support directly. Contact information can typically be found on the Rohl website or on your product packaging.

- **Rohl Official Website:** www.rohlhome.com (Please note: This is a placeholder URL, refer to actual product documentation for precise contact details.)