

Bosch MCM3501M

Bosch MultiTalent 3 MCM3501M Food Processor Instruction Manual

Model: MCM3501M

1. INTRODUCTION

This instruction manual provides essential information for the safe and effective operation of your Bosch MultiTalent 3 MCM3501M Food Processor. Please read these instructions carefully before first use and keep them for future reference. Proper use ensures optimal performance and extends the lifespan of your appliance.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent injury or damage to the appliance:

- Before connecting the appliance, check that the voltage indicated on the rating plate corresponds to your mains voltage.
- Never immerse the motor unit in water or other liquids. Clean it with a damp cloth only.
- Keep hands and utensils away from moving parts and sharp blades during operation. Always use the pusher when feeding ingredients into the chute.
- Unplug the appliance from the mains supply before assembling, disassembling, cleaning, or when not in use.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged in any way.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use accessories not recommended by the manufacturer, as this may cause injury or damage.

3. PRODUCT OVERVIEW AND COMPONENTS

Your Bosch MultiTalent 3 MCM3501M Food Processor is a versatile kitchen appliance designed to assist with various food preparation tasks. It comes with a range of accessories to perform over 50 functions.

Main Components:

- Motor Unit with speed control dial
- Processing Bowl (2.3 L capacity)
- Lid with filling chute and pusher
- Blender Attachment (1 L plastic)

Included Accessories:

- MultiLevel6 multifunction knife with 3 double blades
- Reversible slicing disc (fine/thick)
- Reversible grating disc (fine/thick)
- Dough hook (Pétrin)
- Whisk
- Mini-chopper with 4 stainless steel blades
- Coffee grinder function attachment



Image 1: The Bosch MultiTalent 3 MCM3501M Food Processor displayed with all its standard accessories, including the main processing bowl, blender, various blades, and discs.

4. SETUP AND ASSEMBLY

Follow these steps for initial setup and assembly:

1. Place the motor unit on a clean, stable, and dry surface.
2. Attach the desired accessory (e.g., processing bowl or blender) to the motor unit. Ensure it clicks securely into place. The appliance features an accessory detection system for correct placement.
3. Insert the appropriate tool (e.g., MultiLevel6 knife, slicing disc, dough hook) into the accessory.

4. Secure the lid onto the processing bowl or blender. Ensure the lid is correctly aligned and locked. The appliance will not operate if the lid is not properly secured.
5. Plug the appliance into a suitable power outlet.

5. OPERATING INSTRUCTIONS

The MultiTalent 3 MCM3501M offers various functions. Always ensure the appliance is correctly assembled before operation.

General Operation:

- Add ingredients to the processing bowl or blender.
- Turn the speed control dial to the desired setting. The appliance has 2 speed settings and a pulse function.
- For continuous operation, select speed 1 or 2. For short bursts of power, use the pulse function (P).
- To stop the appliance, turn the dial to the '0' position.

Specific Functions:

Chopping, Slicing, and Grating:

Use the MultiLevel6 knife for chopping herbs, nuts, or mixing ingredients. For slicing and grating vegetables, insert the reversible slicing or grating disc. Feed ingredients through the filling chute using the pusher.

Blending:

Attach the 1 L plastic blender for preparing smoothies, soups, or sauces. Ensure the blender lid is securely closed before operating.



Image 2: A user operating the blender attachment of the Bosch MultiTalent 3, blending strawberries and banana to create a smoothie.

Kneading Dough:

Use the dough hook accessory for kneading various types of dough. The 2.3 L bowl can handle up to 0.8 kg of dough.



Image 3: The Bosch MultiTalent 3 food processor actively kneading dough within its main processing bowl, demonstrating its capacity for baking preparations.

Grinding Coffee and Spices:

The dedicated coffee grinder function attachment allows for grinding coffee beans and spices efficiently.

Mini-Chopper:

Utilize the mini-chopper with its 4 stainless steel blades for processing smaller quantities of ingredients, such as meat or herbs.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure the longevity and hygiene of your food processor.

Cleaning Instructions:

- Always unplug the appliance before cleaning.
- The motor unit should only be wiped clean with a damp cloth. Never immerse it in water.
- All detachable parts, including the processing bowl, blender, lids, discs, and blades, are dishwasher safe. Alternatively, they can be washed by hand using warm soapy water.
- Exercise extreme caution when handling sharp blades. Use a brush for cleaning if necessary.

- Ensure all parts are thoroughly dry before reassembling or storing the appliance.

7. TROUBLESHOOTING

If you encounter issues with your food processor, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not start	Not plugged in; Lid or accessory not correctly assembled; Power outage.	Check power connection; Ensure lid and accessory are securely locked; Check household fuse/circuit breaker.
Motor stops during operation	Overload; Overheating.	Reduce quantity of ingredients; Unplug and let cool for 30 minutes before restarting.
Poor processing results	Incorrect speed setting; Too much or too little ingredient; Dull blade/disc.	Adjust speed; Adjust ingredient quantity; Replace worn blades/discs.

If the problem persists after attempting these solutions, please contact Bosch customer service.

8. SPECIFICATIONS

Detailed technical specifications for the Bosch MultiTalent 3 MCM3501M Food Processor:

Brand: Bosch

Model Number: MCM3501M

Power: 800 W

Processing Bowl Capacity: 2.3 Litres (for up to 0.8 kg dough)

Blender Capacity: 1 Litre

Dimensions (L x W x H): 26 x 22 x 37.5 cm

Weight: 3.7 Kilograms

Speed Settings: 2 speeds + Pulse function

Special Features: Interchangeable blade, integrated chopper, ice crusher function (via blender)

Care Instructions: Dishwasher safe parts (except motor unit), hand wash if necessary

Noise Level: 50 dB

Energy Class: A



Image 4: A visual representation of the Bosch MultiTalent 3 food processor's dimensions, indicating a height of 375mm, width of 222mm, depth of 260mm, and a bowl capacity of 2.3 liters.

9. WARRANTY AND SUPPORT

Your Bosch MultiTalent 3 MCM3501M Food Processor is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

Customer Support:

For technical assistance, spare parts, or warranty claims, please contact Bosch customer service. Contact details can typically be found on the Bosch official website or in the documentation provided with your appliance.