

[Manuals.plus](#) /

› [Comfort Zone](#) /

› Comfort Zone Indoor Space Heater, 20 inch, 1,500 watt, Cabinet Heater with Remote, Infrared, Quartz, USB Charging Ports, Timer, Tip Over Switch & Overheat Protection, Ideal for Home & Office, CZ2062C Cherry User Manual

Comfort Zone CZ2062C

Comfort Zone CZ2062C Infrared Cabinet Heater User Manual


Model: CZ2062C

IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before using this heater. Failure to follow these instructions may result in electric shock, fire, or serious injury.

WARNINGS & SAFETY INFORMATION

HEATER IS NOT MEANT TO BE USED AS A MAIN HEATING SOURCE

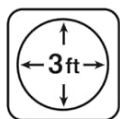

Keep heater at least 3FT (.9M) away from all combustible things like furniture, bedding and curtains....




Do not use heater if it was dropped, has a damaged cord or malfunctions in any way.




For indoor use only, and only use in dry environments. Do not use in bathrooms, laundry rooms, or near sinks or pools...



Do not put heater on an uneven or unstable surface.

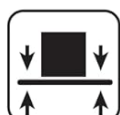

Place heater on a stable, non-combustible surface. Do not use on carpets, vinyl flooring, plastic or wet surfaces.

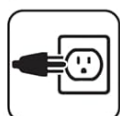

Always plug directly into an outlet and do not plug into an extension cord or powerstrip. Always unplug when not in use.

PET OWNERS!:

During initial use of heater, keep all birds and small pets away as the corrosion coatings burn off. These are not harmful to humans but can be to certain sensitive birds and small pets.



Visual guide to important safety warnings and precautions.

- **Placement:** Keep the heater at least 3 feet (0.9m) away from all combustible materials like furniture, bedding, and curtains.
- **Condition:** Do not use the heater if it was dropped, has a damaged cord, or malfunctions in any way.
- **Environment:** For indoor use only, and only use in dry environments. Do not use in bathrooms, laundry rooms, or near sinks or pools.
- **Surface:** Do not place the heater on an uneven or unstable surface. Place it on a stable, non-combustible surface. Do not use on carpets, vinyl flooring, plastic, or wet surfaces.
- **Power Connection:** Always plug directly into an outlet and do not plug into an extension cord or power strip. Always unplug when not in use.
- **Pet Owners:** During initial use, keep all birds and small pets away as the corrosion coatings burn off. This is not harmful to humans but can be to certain sensitive birds and small pets.
- **Tip-Over Safety:** The heater automatically powers down upon being tipped over. It resets once returned to an upright position, requiring reactivation.

- **Overheat Protection:** The heater proactively shuts off if internal components approach a temperature that may lead to overheating or fire risk. To reset, turn off the heater, switch the master power switch off, unplug it, and allow a 20-minute cooldown.

PRODUCT OVERVIEW

The Comfort Zone CZ2062C Infrared Cabinet Heater is designed to provide efficient and customizable warmth for your indoor spaces. Featuring six high-power quartz infrared heating elements, it ensures even, room-wide comfort. This model includes a digital thermostat, a full-function remote, and convenient built-in USB charging ports.



The Comfort Zone CZ2062C heater in cherry finish, showcasing its design and included remote control.

Key Features:

- **Customizable Temperature Control:** Adjustable thermostat from 59°F to 86°F (15°C to 30°C).
- **Versatile Heat Options:** High (1500W), Low (750W), and ECO modes for energy efficiency.
- **Built-in USB Charging Ports:** Dual DCP USB ports providing up to 2.1 amps for charging devices.
- **Convenient Timer & Remote Control:** 12-hour on/off timer and full-function remote for easy operation.
- **Enhanced Safety Measures:** Includes tip-over switch and overheat protection system.

Digital Display with Onboard Controls



Mode Select



12-Hour
Timer



ECO Mode



Adjustable
Thermostat



USB



Close-up of the heater's digital display and control panel, showing mode select, timer, ECO mode, adjustable thermostat, and USB ports.

Intelligent Safety Features



OVERHEAT
SENSOR



TIP-OVER
AUTO OFF SWITCH



STAY COOL
HOUSING



Diagram illustrating the intelligent safety features: Overheat Sensor, Tip-Over Auto Off Switch, and Stay Cool Housing.

 
Instant & Powerful Heat

Choose from three convenient outputs: 750W/ 1500W/ ECO



Visual representation of the heater's three convenient output options: 750W, 1500W, and ECO mode.

Remote Control Functions

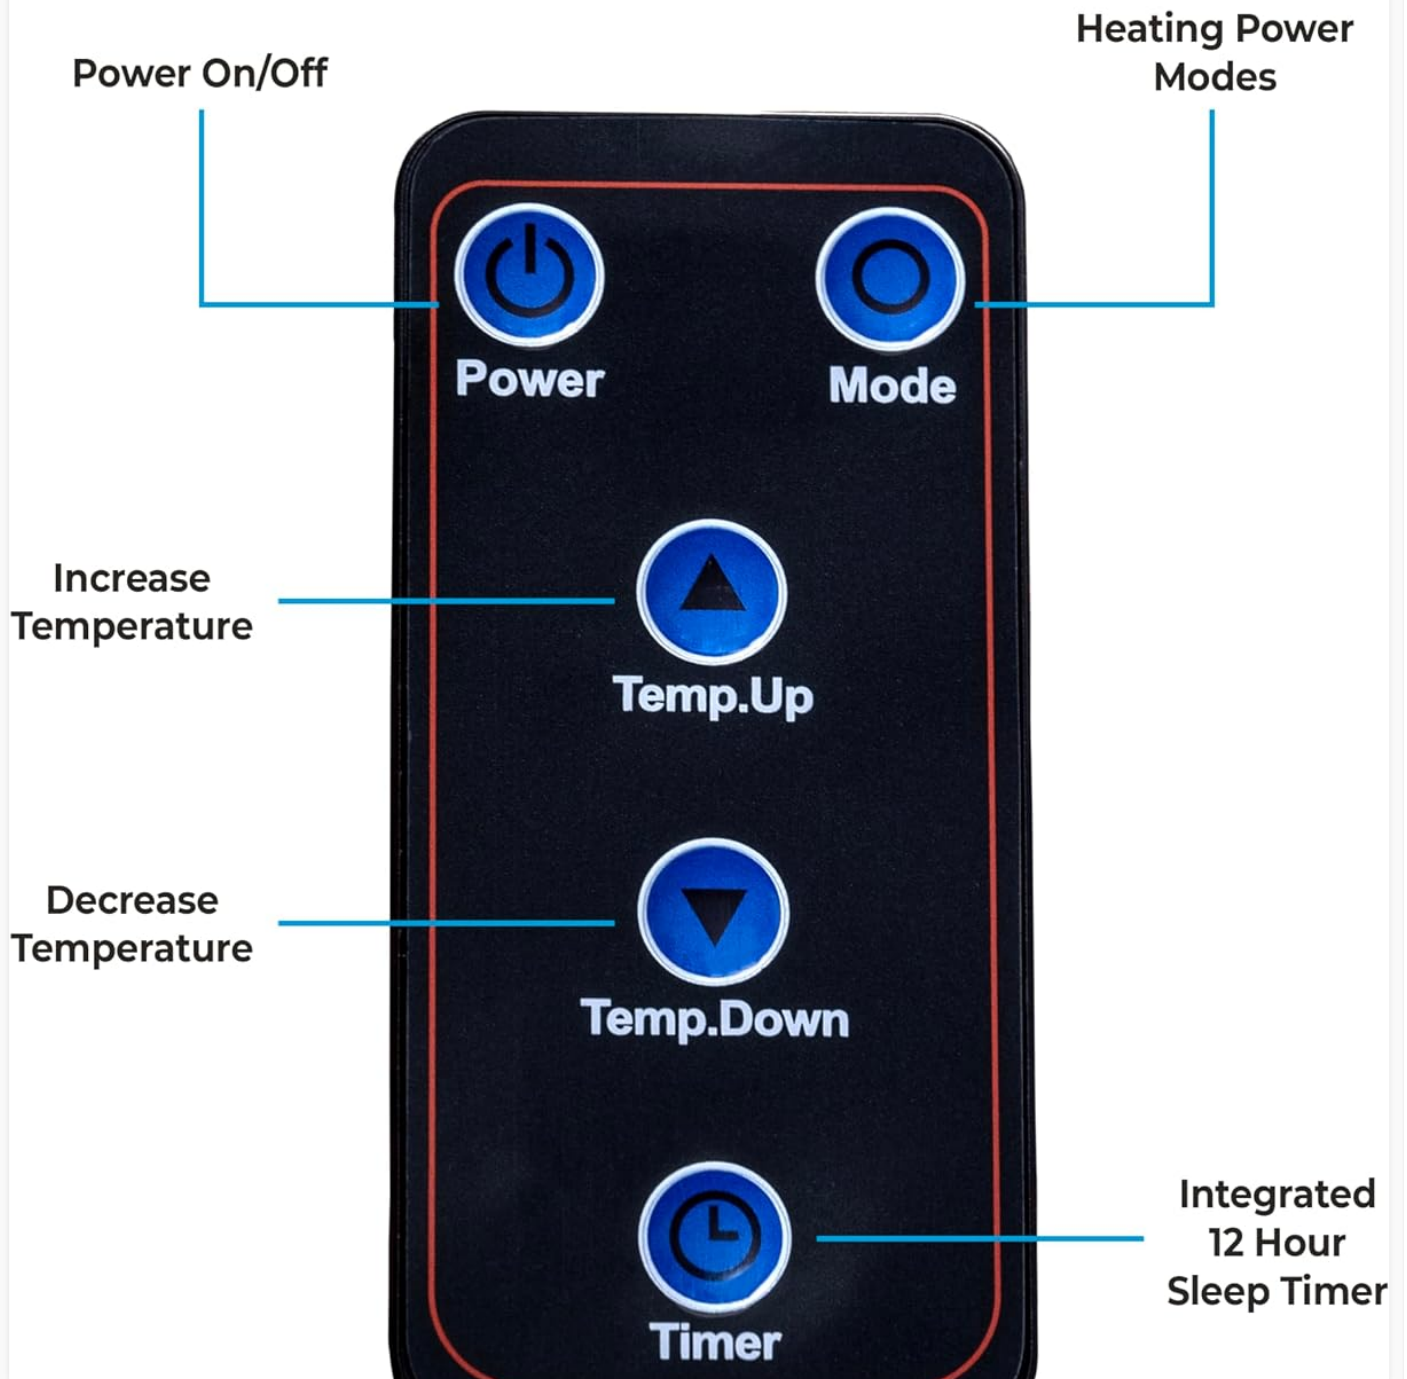

The heater is ideal for various small to medium rooms, including living rooms, bedrooms, offices, and kitchens.



Ready to use - no assembly required.

Dimensions of the Comfort Zone CZ2062C heater: 17.5 inches high, 13.1 inches deep, and 16.3 inches wide.

SETUP

The Comfort Zone CZ2062C heater is designed for immediate use with no assembly required. Simply follow these steps to get started:

1. **Unpack:** Carefully remove the heater from its packaging. Retain packaging for future storage or transport.

2. **Placement:** Place the heater on a firm, level surface, ensuring it is at least 3 feet (0.9m) away from walls, furniture, and other combustible materials. Ensure proper ventilation around the unit.
3. **Power Connection:** Plug the heater directly into a 120V AC, 60Hz electrical outlet. Do not use extension cords, power strips, or surge protectors.
4. **Initial Power On:** Turn the master power switch on the back of the unit to the 'ON' position. The digital display will illuminate.

OPERATING INSTRUCTIONS

Your Comfort Zone CZ2062C heater can be operated using the control panel on the unit or the included remote control.

Control Panel and Remote Functions:

Ideal for Small to Medium Rooms



LIVING
ROOM



BEDROOM



OFFICE



KITCHEN



Diagram of the remote control, showing buttons for Power On/Off, Heating Power Modes, Increase/Decrease Temperature, and Integrated

- **Power On/Off:** Press the Power button () on the control panel or remote to turn the unit on or off.
- **Temperature Control:** Use the Up (▲) and Down (▼) arrows on the control panel or remote to set your desired temperature between 59°F (15°C) and 86°F (30°C). The heater will cycle on and off to maintain the set temperature.
- **Heat Settings (Mode Button):** Press the Mode button to cycle through the heat settings:
 - **High Mode:** 1500W for maximum warmth.
 - **Low Mode:** 750W for energy-conscious heating.
 - **ECO Mode:** Automatically adjusts temperature to an efficient 68°F (20°C) to optimize energy consumption.
- **Timer Function:** After starting the unit, press the Timer button () on the control panel or remote. Each press increases the timer length by 1 hour, up to 12 hours. To cancel, cycle through the lengths until the value is “00”. The timer light illuminates when the power-off timer is set.
- **USB Charging Ports:** The dual USB charging ports are active when the heater is plugged in and the master power switch is on. They provide up to 2.1 amps of power for charging various USB devices.

MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your Comfort Zone CZ2062C heater. Always unplug the heater and allow it to cool completely before performing any maintenance.

- **Cleaning:** For general cleaning, wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents. The manufacturer specifies "Hand Wash" for care instructions, which generally implies wiping down the exterior.
- **Dust Removal:** Periodically vacuum the air intake and exhaust grilles to remove dust and lint buildup.
- **Storage:** When not in use, store the heater in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

TROUBLESHOOTING

If your Comfort Zone CZ2062C heater is not operating correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in; Master power switch off; Power outlet issue; Tip-over switch activated.	Ensure unit is securely plugged into a working outlet. Turn master power switch to 'ON'. Check circuit breaker. Ensure heater is on a stable, level surface.
Heater turns off unexpectedly.	Overheat protection activated; Tip-over switch activated; Timer set.	Unplug, turn off master switch, and allow 20 minutes to cool before restarting. Ensure heater is upright and stable. Check if the timer is set to turn off.

Problem	Possible Cause	Solution
No heat output.	Temperature setting too low; ECO mode active; Fan only mode.	Increase the set temperature above the current room temperature. Switch to High or Low heat mode if ECO mode is not desired. Ensure a heat mode is selected, not just fan.
Remote control not working.	Dead battery; Obstruction between remote and heater.	Replace the CR2 battery (included). Ensure no objects are blocking the signal path.

If the problem persists after attempting these solutions, contact customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	Comfort Zone
Model Number	CZ2062C
Color	Cherry
Form Factor	Cabinet
Indoor/Outdoor Usage	Indoor
Product Dimensions	17.5"D x 14.5"W x 19.25"H
Item Weight	22.2 pounds
Recommended Uses	Heating (Living Room, Bedroom, Home Office)
Fuel Type	Electric
Voltage	120 Volts
Amperage	12.5 Amps
Min Temperature Setting	59 Degrees Fahrenheit (15 Degrees Celsius)
Max Temperature Setting	86 Degrees Fahrenheit (30 Degrees Celsius)
UPC	075877252586
Included Components	Remote Control, CZ2062C Space Heater, Product Manual, Cord
Batteries Required	Yes (1 CR2 battery included)

WARRANTY AND SUPPORT

This Comfort Zone CZ2062C Infrared Cabinet Heater comes with a **1-year manufacturer's warranty**.

For warranty claims, technical support, or any inquiries regarding your product, please contact the manufacturer, Mr. Brands, LLC., directly. Refer to the contact information provided in your product packaging or on the official Comfort Zone website.

Please have your model number (CZ2062C) and proof of purchase ready when contacting support.

© 2025 Comfort Zone. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question