

Gemmy B015GH8L9I

Gemmy Lightshow White Snow Flurry Snowflake LED Projection Light User Manual

Model: B015GH8L9I

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Gemmy Lightshow White Snow Flurry Snowflake LED Projection Light. Please read these instructions thoroughly before installation and operation, and retain them for future reference.

The Gemmy Lightshow projector is designed to display a dynamic white snowflake pattern, creating a festive atmosphere for various occasions. Its durable, IP65 waterproof construction allows for both indoor and outdoor use.

2. SAFETY INFORMATION

- Always ensure the product is unplugged from the power source before any installation, maintenance, or cleaning.
- Do not look directly into the light source. The LED lights are bright and may cause temporary visual discomfort.
- Ensure the power cord is not damaged, pinched, or placed under heavy objects.
- For outdoor use, connect the product to a Ground Fault Circuit Interrupter (GFCI) protected outlet.
- Do not operate the product if any part is damaged. Contact customer support for assistance.
- Keep the product away from heat sources, open flames, and flammable materials.
- This product is not a toy. Keep out of reach of children and pets.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x Gemmy Lightshow LED Projection Light Unit
- 1 x Ground Stake

- 1 x Power Adapter (Corded Electric)
- 1 x Remote Control



4. SETUP

4.1 Assembly

1. Attach the ground stake to the bottom of the projector unit. Ensure it is securely fastened.
2. Connect the power adapter to the projector unit's power input. Twist the connection collar to ensure a watertight seal for outdoor use.

4.2 Placement

The projector offers flexible placement options:

- **Outdoor Ground Installation:** Insert the ground stake firmly into soft ground in your yard. Position the projector at a distance that allows for the desired coverage and clarity of the snowflake pattern.
- **Indoor/Outdoor Tabletop Placement:** The projector can be placed on a flat, stable surface. Ensure it is positioned where it will not be easily knocked over.

Adjust the angle of the projector head to direct the snowflake pattern onto your desired surface (e.g., house wall, ceiling, or landscape). The ball joint allows for precise aiming.



Figure 2: Example of projected snowflake pattern.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Plug the power adapter into a standard electrical outlet. The projector will automatically turn on and begin displaying the snowflake pattern. To turn off, unplug the power adapter from the outlet.

5.2 Using the Remote Control

The included remote control allows for convenient operation. Point the remote directly at the projector unit for optimal response.

- **Power Button:** Press to turn the projector on or off.
- **Speed Control:** Adjust the rotation speed of the snowflakes.
- **Pattern Selection:** Cycle through available snowflake patterns or modes.
- **Timer Function:** Set the projector to operate for a specific duration (e.g., 2H, 4H, 6H).

5.3 Projection Tips

- For best results, operate the projector in a dark environment.
- The optimal projection distance is typically between 10-30 feet from the surface, depending on desired coverage and clarity.
- The projected area can cover approximately 300 square feet at an appropriate distance.

Your browser does not support the video tag.

Video 1: Demonstration of outdoor snowflake projection. This video illustrates general snowflake projector functionality and may not represent the exact model or features.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the projector lens and housing. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the power cord and connections for any signs of wear or damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Projector does not turn on.	No power, loose connection, faulty outlet.	Check power connection, try a different outlet, ensure remote control batteries are functional.
Projection is dim or unclear.	Too much ambient light, projector too far from surface, dirty lens.	Operate in darker conditions, adjust projector distance, clean the lens.
Remote control not working.	Dead batteries, obstruction, out of range.	Replace remote batteries, ensure clear line of sight to projector, move closer to projector.

8. SPECIFICATIONS

- **Brand:** Gemmy
- **Model:** B015GH8L9I
- **Light Source Type:** LED
- **Number of Light Sources:** 40
- **Light Color:** Bright White
- **Finish Type:** Projector
- **Material:** Plastic
- **Power Source:** Corded Electric
- **Control Method:** Remote
- **Special Feature:** Waterproof (IP65 rated)
- **Indoor/Outdoor Usage:** Outdoor
- **Mounting Type:** Ground Stake / Tabletop
- **Item Weight:** 16 ounces

- **Package Dimensions:** 7.4 x 4.2 x 3.8 inches
- **UPC:** 634304968843, 787732222879

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Gemmy customer service directly. Keep your purchase receipt as proof of purchase.