

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [SVAKOM](#) /

> [SVAKOM Echo Clitoral Vibrator User Manual](#)

SVAKOM 699

SVAKOM Echo Clitoral Vibrator User Manual

Model: 699 | Brand: SVAKOM

1. INTRODUCTION

The SVAKOM Echo is a compact, tongue-shaped clitoral vibrator designed for external stimulation. This manual provides essential information for the safe and effective use, maintenance, and care of your device.



Image 1: SVAKOM Echo Clitoral Vibrator. This image displays the compact, ergonomic design of the device.

2. SAFETY INFORMATION

Legal Disclaimer: This item is intended for adults aged 18 years and older.

- Do not use if the device appears damaged.
- Consult a healthcare professional if you experience any discomfort or adverse reactions.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Your SVAKOM Echo package should contain the following items:

- 1 x SVAKOM Echo Clitoral Vibrator
- 1 x USB Charging Cable
- 1 x Storage Pouch
- 1 x User Manual

4. PRODUCT OVERVIEW

The SVAKOM Echo is crafted from high-quality Acrylonitrile Butadiene Styrene (ABS) material, providing a smooth touch and comfortable experience. Its ergonomic, tongue-shaped design is intended for targeted stimulation.

- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Dimensions:** 3.46 x 1.53 x 1.18 inches
- **Weight:** 1.44 ounces
- **Noise Level:** Less than 40 decibels (whisper quiet)
- **Water Resistance:** 100% splash resistant



Image 2: The SVAKOM Echo is made from safe ABS material, ensuring a smooth and comfortable feel.



Image 3: The device is 100% splash resistant, allowing for easy cleaning and use in various environments.

5. SETUP

Charging the Device

Before first use, fully charge your SVAKOM Echo. The device uses a magnetic USB charging cable.

1. Connect the magnetic end of the USB charging cable to the charging port on the device.
2. Plug the USB-A end of the cable into a compatible USB power source (e.g., wall adapter, computer, power bank).
3. The indicator light will illuminate during charging.
4. A full charge takes approximately 1 hour and provides up to 1 hour of continuous use.



Image 4: The device charges via a magnetic USB cable, compatible with various USB power sources.

6. OPERATING INSTRUCTIONS

The SVAKOM Echo features 5 distinct vibration modes and 5 intensity levels, offering a total of 25 unique pleasure combinations.

Power On/Off

 
- To turn on: Press and hold the power button (usually the '+' or main button) for approximately 2 seconds until the device activates.
- To turn off: Press and hold the power button for approximately 2 seconds until the device deactivates.

Changing Modes and Intensity

- To cycle through the 5 vibration modes: Double-click the mode button (often the '-' or secondary button).
- To adjust intensity (5 levels): Single-click the '+' button to increase intensity or the '-' button to decrease intensity within the current mode.

5 VIBRATION MODES


Multiple pleasure
Low noise, good privacy



Normal Mode



 Caressing Mode



Joyous Mode



Passionate Mode



Climax Mode



Image 5: Visual representation of the 5 distinct vibration modes available on the SVAKOM Echo.

Your browser does not support the video tag.

Video 1: An official product video demonstrating the SVAKOM Echo Clitoral Vibrator, showcasing its features and operation.

7. MAINTENANCE

Cleaning

To ensure hygiene and longevity of your device:

- Clean the device thoroughly with mild soap and warm water after each use.
- Rinse completely and pat dry with a lint-free cloth.
- Avoid using harsh chemicals, alcohol-based cleaners, or petroleum-based lubricants, as these can damage the material.

Storage

Store your SVAKOM Echo in a clean, dry place, away from direct sunlight and extreme temperatures. Use the provided storage pouch to protect it from dust and damage.

8. TROUBLESHOOTING

Device Not Turning On or Responding

- Ensure the device is fully charged. Connect it to the charger and allow at least 1 hour for a full charge.
- Verify that the charging cable is securely connected to both the device and the power source.
- Try holding down the power button for a longer duration (up to 5 seconds) to ensure it registers.
- If the issue persists after charging, contact customer support.

9. SPECIFICATIONS

Feature	Detail
Item Model Number	699
Product Dimensions	3.46 x 1.53 x 1.18 inches
Item Weight	1.44 ounces
Batteries	1 Lithium Metal battery (included)
Material	Acrylonitrile Butadiene Styrene (ABS)
Color	Violet
Water Resistance	Splash Resistant
Charging Time	1 hour
Continuous Use Time	1 hour

10. WARRANTY AND SUPPORT

1-Year Protection

The SVAKOM Echo comes with a 1-year protection plan starting from the date of purchase. This warranty covers issues caused by material flaws, manufacturing flaws, and parts that influence normal functioning. If any covered issue arises during this period, you may be eligible for a free replacement.

Customer Support

For further assistance, troubleshooting, or warranty claims, please visit the official SVAKOM website or contact their customer support directly.