

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm Instax Mini Instant Film User Manual (Model FBA_MAIN-567889)

Fujifilm FBA_MAIN-567889

Fujifilm Instax Mini Instant Film User Manual

Model: FBA_MAIN-567889

1. INTRODUCTION

This manual provides essential instructions for the proper use and care of your Fujifilm Instax Mini Instant Film. Designed for use with Fujifilm Instax Mini series cameras, this film produces vibrant, credit card-sized instant prints. Please read this manual thoroughly to ensure optimal performance and longevity of your film.



Figure 1.1: Fujifilm Instax Mini Instant Film 50 Sheets packaging. This image displays the outer box containing five packs of 10-sheet Instax Mini film.

2. SETUP: LOADING THE FILM

Proper film loading is crucial for successful instant photography. Always load film in a dimly lit area, avoiding direct sunlight.

1. **Unpack the Film:** Remove the film cartridge from its foil packaging. Do not open the black plastic film cartridge itself.
2. **Open Camera Back:** Open the film compartment cover on your Instax Mini camera.
3. **Align and Insert:** Align the yellow mark on the film cartridge with the yellow mark inside the camera's film compartment. Gently push the cartridge straight in until it clicks into place. Do not force it.
4. **Close Camera Back:** Close the film compartment cover securely.
5. **Eject Dark Slide:** Turn on your camera. Press the shutter button once. The camera will automatically

eject the black protective dark slide. This slide protects the film from light before use. Do not use this slide for photography.

6. **Film Counter:** The film counter on your camera should now display '10' (or the number of sheets in the pack). Your camera is now ready to take photos.



Figure 2.1: A single pack of Fujifilm Instax Mini Instant Film (10 sheets). This is the individual unit you will load into your camera.



Figure 2.2: The Fujifilm Instax Mini film cartridge. This black plastic cartridge contains the unexposed film sheets and should be handled carefully during loading.

3. OPERATING: TAKING AND HANDLING PHOTOS

Once the film is loaded, you can begin taking photos. Remember that Instax Mini film is designed for specific cameras.

3.1 Compatible Cameras

This film is exclusively designed for use with Fujifilm Instax Mini series cameras and printers. Ensure your device is compatible before use.

 


Figure 3.1: Examples of compatible Fujifilm Instax Mini cameras and printers, including Mini 12, Mini 40, Mini Link 2, Mini Liplay, and Mini EVO.

3.2 Taking a Photo

Refer to your specific Instax Mini camera's manual for detailed instructions on taking photos. Generally, after composing your shot, press the shutter button. The exposed film will automatically eject from the

camera.

3.3 Handling Exposed Film

- **Do Not Bend:** Once ejected, avoid bending, folding, or shaking the film. This can interfere with the development process.
- **Protect from Light:** Keep the developing photo away from strong light, especially direct sunlight, immediately after ejection. Place it face down or in a pocket for the first few minutes.
- **Development Time:** Photos typically begin to develop within 90 seconds and fully develop within 5-10 minutes, depending on ambient temperature.



Figure 3.2: A hand holding several developed Fujifilm Instax Mini photos, showcasing their credit card size and vibrant colors.



Figure 3.3: Multiple developed Fujifilm Instax Mini photos fanned out, illustrating their compact and collectible nature.

4. MAINTENANCE AND STORAGE

Proper storage of both unexposed and developed film ensures the best quality and longevity.

4.1 Unexposed Film Storage

- **Temperature:** Store unexposed film in a cool, dry place, ideally between 5°C and 40°C (41°F and 104°F). Avoid extreme temperatures.
- **Light:** Keep film away from direct sunlight and strong artificial light.
- **X-rays:** Protect film from X-ray exposure, such as airport security scanners. If traveling, consider hand-carrying film or requesting a manual inspection.
- **Expiration Date:** Always check the expiration date printed on the film packaging. Using expired film may result in reduced image quality.

4.2 Developed Photo Storage

- **Environment:** Store developed photos in an album, photo box, or frame to protect them from dust, moisture, and light.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight or strong UV light can cause photos to fade over time.



Figure 4.1: Developed Instax Mini photos displayed, illustrating a common method for showcasing and drying prints.

5. TROUBLESHOOTING

If you encounter issues with your Instax Mini film, consider the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Photo is completely white or black.	Overexposure (too much light) or underexposure (too little light).	Check camera's exposure settings. Ensure flash is used in dark conditions. Avoid shooting directly into bright light sources.
Photo does not eject.	Film not loaded correctly, camera battery low, or film compartment jammed.	Re-seat film pack. Replace camera batteries. Do not force film out; consult camera manual.
Colors appear faded or incorrect.	Expired film, improper storage, or extreme temperatures during development.	Use fresh film. Store film in a cool, dry place. Allow photos to develop at room temperature.
Streaks or marks on photo.	Pressure applied to film during development, dirty rollers in camera.	Avoid bending or pressing on ejected film. Refer to camera manual for roller cleaning instructions.

6. SPECIFICATIONS

Key specifications for Fujifilm Instax Mini Instant Film:

- **Film Type:** Fujifilm Instax Mini Instant Film
- **Film Size:** 86 mm x 54 mm (3.4 in x 2.1 in)
- **Image Size:** 62 mm x 46 mm (2.4 in x 1.8 in)
- **Film Speed:** ISO 800
- **Exposures per Pack:** 10
- **Film Color:** Color
- **Product Dimensions:** 4.6 x 4.2 x 4.4 inches (for 50 sheets pack)
- **Item Weight:** 1 ounces (for 50 sheets pack)
- **Model Number:** FBA_MAIN-567889
- **Date First Available:** September 18, 2015



Figure 6.1: Rear view of multiple Fujifilm Instax Mini film packs, showing product information and barcode (4547410364859).

7. WARRANTY AND SUPPORT

For warranty information, product support, or further assistance, please refer to the official Fujifilm website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

- **Official Fujifilm Website:** www.fujifilm.com
- **Customer Support:** Refer to the support section on the Fujifilm website for contact details specific to your region.

