

[Manuals.plus](#) /

› [Indesit](#) /

› Genuine Indesit IDL40 Dishwasher Lower Basket Wheels and Axles (Set of 8) User Manual

Indesit IDL40

Genuine Indesit IDL40 Dishwasher Lower Basket Wheels and Axles User Manual

Model: IDL40 | Brand: Indesit

PRODUCT OVERVIEW

This manual provides instructions for the installation, operation, and maintenance of the genuine Indesit dishwasher lower basket wheels and axles. This set of 8 replacement wheels is designed to restore the smooth movement of your dishwasher's lower basket.



Image: A complete set of eight genuine Indesit dishwasher lower basket wheels and axles.

Key features:

- Genuine Indesit replacement part for dishwasher basket wheels and axles.
- Diameter: 25 mm, Width: 10 mm.
- Compatible with Indesit IDL40 models.
- Quantity: Set of 8 wheels.
- Note: Wheels may come in white or grey.

SETUP AND INSTALLATION

Before beginning installation, ensure your dishwasher is turned off and unplugged from the power outlet for safety. Remove the lower basket from the dishwasher.

1. **Prepare the Basket:** Carefully inspect the lower basket. Identify the locations where the old wheels were attached or where new wheels need to be installed.
2. **Remove Old Wheels (if applicable):** If old, broken wheels are still present, gently pry them off. Be careful not to damage the basket structure.
3. **Install New Wheels:** Align the axle of the new wheel with the designated slot on the dishwasher basket. Apply gentle, even pressure to snap the wheel into place. Ensure it is securely fastened and can rotate freely.
4. **Repeat:** Install all necessary wheels, typically four on each side of the basket, for a total of eight wheels.
5. **Test Movement:** Once all wheels are installed, place the lower basket back into the dishwasher. Gently slide it in and out to ensure smooth movement and proper alignment on the dishwasher rails.



Image: Side view of a single wheel, showing its profile and axle.



Image: Top view of a single wheel, highlighting the axle connection point.

OPERATING INSTRUCTIONS

Once properly installed, the lower basket wheels facilitate the smooth and effortless movement of the dishwasher's lower basket. No specific operational steps are required for the wheels themselves beyond ensuring they are correctly fitted.

- Ensure the basket slides freely on the rails without catching or resistance.
- Avoid overloading the basket, as excessive weight can put undue stress on the wheels and rails.
- Always push and pull the basket gently to prevent damage to the wheels or the dishwasher mechanism.

MAINTENANCE

Regular maintenance helps prolong the life of your dishwasher basket wheels and ensures continued smooth operation.

- **Cleaning:** Periodically remove the lower basket and inspect the wheels for any food debris, grease, or mineral deposits. Clean them with a soft cloth and mild detergent. Rinse thoroughly.
- **Inspection:** Check the wheels regularly for signs of wear, cracks, or damage. Ensure they are securely attached to

the basket.

- **Rail Cleaning:** Also clean the dishwasher rails themselves, as accumulated grime can impede the wheels' movement.

TROUBLESHOOTING

If you experience issues with your dishwasher's lower basket movement, consider the following:

Problem	Possible Cause	Solution
Basket not sliding smoothly	Wheels are dirty or have debris. Dishwasher rails are dirty. Wheel is damaged or loose.	Clean wheels and rails. Inspect wheels for damage; replace if necessary. Ensure wheels are securely snapped into place.
Wheel falls off frequently	Improper installation. Basket overloaded. Wheel or basket slot is worn.	Re-install wheel, ensuring it clicks into place. Reduce basket load. If persistent, the wheel or basket slot may need replacement.

SPECIFICATIONS

Attribute	Detail
Product Type	Dishwasher Lower Basket Wheels and Axles
Brand	Indesit
Model Compatibility	Indesit IDL40
Quantity	Set of 8
Wheel Diameter	25 mm
Wheel Width	10 mm
Item Weight	Approximately 9.07 grams (total for the set)
Material	Durable plastic (color may vary: white or grey)

WARRANTY AND SUPPORT

Information regarding specific warranty coverage for this replacement part is not provided in the product details. For warranty inquiries or further technical support, please contact Indesit customer service directly or refer to the original dishwasher's user manual.

You may find contact information for Indesit on their official website or through your product retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B015JDDBVY>

More documents and user manuals: <https://manuals.plus/>