

[Manuals.plus](#) /

› [Metaltex](#) /

› Metaltex 250658 Lady Cerise Cherry Pitter Instruction Manual

Metaltex 250658

Metaltex 250658 Lady Cerise Cherry Pitter Instruction Manual

Model: 250658

INTRODUCTION

Thank you for choosing the Metaltex Lady Cerise Cherry Pitter. This tool is designed to efficiently remove pits from cherries, making fruit preparation easier and safer. Please read this manual carefully before first use to ensure proper operation and maintenance.

PRODUCT OVERVIEW

The Metaltex Lady Cerise Cherry Pitter is a compact and effective kitchen utensil crafted from durable stainless steel and high-quality plastic components. Its ergonomic design allows for comfortable and quick pitting of cherries.



Image: Side view of the Metaltex Lady Cerise Cherry Pitter, showcasing its design and pitting mechanism.

SETUP

1. **Unpack:** Carefully remove the cherry pitter from its packaging.
2. **Inspect:** Check the pitter for any signs of damage or manufacturing defects. Do not use if damaged.
3. **Initial Cleaning:** Before first use, wash the cherry pitter with warm soapy water and rinse thoroughly. Dry completely.

OPERATING INSTRUCTIONS

Follow these steps for effective cherry pitting:

1. **Prepare Cherries:** Wash fresh cherries thoroughly.
2. **Position Cherry:** Place a single cherry into the designated cup of the pitter. Ensure the cherry is positioned correctly, usually with the stem end facing upwards or downwards, depending on the pitter's design, to align with the pitting mechanism.
3. **Activate Pitter:** Hold the pitter firmly in one hand. Squeeze the handles together like pliers. The stainless steel plunger

will push the pit out of the cherry and into the collection area (if applicable) or through the bottom.

4. **Remove Pitted Cherry:** Release the handles and remove the pitted cherry. Discard the pit.
5. **Repeat:** Continue with the remaining cherries.



Image: A hand demonstrating the use of the Metaltex Lady Cerise Cherry Pitter, showing a cherry being pitted and removed pits.

Tip: Pitting can sometimes cause juice to splatter. It is recommended to perform this task over a sink or a waste bin to minimize mess.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your cherry pitter.

- **Immediate Cleaning:** Clean the pitter immediately after each use to prevent cherry juice from drying and staining.
- **Hand Wash Only:** This cherry pitter is **NOT dishwasher safe**. Wash by hand with warm soapy water.
- **Rinse and Dry:** Rinse thoroughly under running water to remove all soap residue and cherry particles. Dry completely

- with a soft cloth to prevent water spots and corrosion on the stainless steel components.
- **Storage:** Store in a dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pit not fully removed or cherry damaged.	Cherry not positioned correctly; pitter not squeezed firmly enough; very soft or overripe cherries.	Ensure the cherry is centered in the cup. Apply firm, consistent pressure. Use fresh, firm cherries for best results.
Pitter feels stiff or difficult to operate.	Residue build-up; lack of lubrication (not required for this product, but indicates need for cleaning).	Clean the pitter thoroughly, especially around the hinge and plunger mechanism. Ensure it is completely dry before storage.
Staining or discoloration on the pitter.	Cherry juice left to dry; improper cleaning.	Clean immediately after use. For stubborn stains, use a mild abrasive cleaner suitable for stainless steel, then rinse and dry thoroughly.

SPECIFICATIONS

- **Model Number:** 250658
- **Brand:** Metaltex
- **Material:** Stainless Steel blade, Multicolored handle (likely plastic)
- **Dimensions (L x W x H):** Approximately 2.79 x 22.71 x 9.5 cm (1.1 x 8.94 x 3.74 inches)
- **Weight:** 70 grams (approximately 2.47 ounces)
- **Dishwasher Safe:** No

WARRANTY AND SUPPORT

Metaltex products are manufactured to high-quality standards. For any questions regarding your product, please refer to the retailer where it was purchased or visit the official Metaltex website for customer support information. Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B015JG1RK6>

More documents and user manuals: <https://manuals.plus/>