

[Manuals.plus](#) /

› [Plumeet](#) /

› Plumeet Kids Digital LCD Travel Alarm Clock (Model EMAU-8002-PI) Instruction Manual

Plumeet EMAU-8002-PI

Plumeet Kids Digital LCD Travel Alarm Clock (Model EMAU-8002-PI) Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Plumeet Kids Digital LCD Travel Alarm Clock, Model EMAU-8002-PI. Please read this manual thoroughly before using the product to ensure proper function and longevity.

PRODUCT OVERVIEW

Features

- Large LCD display for easy readability.
- Soft backlight that activates for 6 seconds when the snooze/light button is pressed.
- Ascending alarm sound that gradually increases in volume.
- 8-minute snooze function.
- Compact, handheld size suitable for travel.
- Protective and shock-proof silicone cover.
- Battery-powered (requires 3 AAA 1.5V batteries, not included).

Package Contents

- Plumeet Kids Digital LCD Travel Alarm Clock (Model EMAU-8002-PI)
- Instruction Manual

Controls and Display

The alarm clock features a simple interface for ease of use. Refer to the image below for button identification.

EASY TO OPERATE THE BASIC CLOCK



Image: Front and back view of the Plumeet alarm clock, highlighting the various control buttons and the battery compartment.

- **SNOOZE-LIGHT Button:** Located on top. Press to activate backlight for 6 seconds or to snooze a sounding alarm.
- **H Button:** Used for setting hours.
- **M Button:** Used for setting minutes.
- **TIME SET Button:** Located on the back. Press and hold to enter time setting mode.
- **ALARM SET Button:** Located on the left side. Press and hold to enter alarm setting mode.
- **ALARM ON/OFF Switch:** Located on the right side. Slides to enable or disable the alarm.
- **Battery Compartment:** Located on the back, requires 3 AAA batteries.

SETUP

1. Battery Installation

1. Gently remove the silicone protective cover from the clock.

2. Locate the battery compartment on the back of the clock.
3. Open the battery compartment cover.
4. Insert 3 new AAA 1.5V batteries, ensuring correct polarity (+/-).
5. Close the battery compartment cover securely.
6. Replace the silicone protective cover.

Your browser does not support the video tag.

Video: This video demonstrates how to install batteries and set the time and alarm on the Plumeet Kids Digital LCD Travel Alarm Clock.

2. Setting the Time

1. Press and hold the **TIME SET** button on the back of the clock. The hour digits will begin to flash.
2. While holding **TIME SET**, press the **H** button (on top) to adjust the hour. Note the AM/PM indicator for 12-hour format.
3. Release the **H** button when the correct hour is set.
4. While still holding **TIME SET**, press the **M** button (on top) to adjust the minutes.
5. Release the **M** button when the correct minutes are set.
6. Release the **TIME SET** button to save the time.

3. Setting the Alarm

1. Press and hold the **ALARM SET** button on the left side of the clock. The alarm hour digits will begin to flash.
2. While holding **ALARM SET**, press the **H** button (on top) to adjust the alarm hour. Observe the AM/PM indicator.
3. Release the **H** button when the desired alarm hour is set.
4. While still holding **ALARM SET**, press the **M** button (on top) to adjust the alarm minutes.
5. Release the **M** button when the desired alarm minutes are set.
6. Release the **ALARM SET** button to save the alarm time.

OPERATING INSTRUCTIONS

Turning the Alarm On/Off

- To activate the alarm, slide the **ALARM ON/OFF** switch on the right side of the clock to the "ON" position. An alarm icon will appear on the display.
- To deactivate the alarm, slide the **ALARM ON/OFF** switch to the "OFF" position. The alarm icon will disappear.

Using the Snooze Function

When the alarm sounds, press the large **SNOOZE-LIGHT** button on top of the clock. The alarm will pause for 8 minutes and then sound again. This can be repeated.



Image: The large snooze button on top of the Plumeet alarm clock, demonstrating its use for an 8-minute snooze.

Activating the Night Light

To temporarily illuminate the display in low light conditions, press the **SNOOZE-LIGHT** button on top of the clock. The backlight will activate for 6 seconds and then automatically turn off.

SOFT LIGHT LASTS 5 SECONDS

only comes on when you hit the snooze light button



Image: The alarm clock with its soft backlight illuminated, showing the time 12:19.

Ascending Alarm Sound

The alarm features an ascending sound. When the alarm triggers, the beeping sound starts softly and gradually increases in volume and speed over several seconds to ensure effective waking without being jarring.

WAKE UP WITH BEEP SOUNDS

Gradually Increases In Volume
A Happy Wake-up, A Lovely New Day



Press down to
turn off the alarm



Image: A child being gently woken by the ascending alarm sound from the Plumeet clock.

MAINTENANCE

Cleaning

- Wipe the clock with a soft, dry cloth.
- For stubborn marks on the silicone cover, a slightly damp cloth can be used, then dry thoroughly.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the clock's finish or internal components.

Battery Replacement

- Replace batteries when the display becomes dim or the alarm sound weakens.
- Always replace all three AAA batteries at the same time with new ones.
- Do not mix old and new batteries, or different types of batteries.

- Remove batteries if the clock will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Solution
Clock display is blank or dim.	Check battery polarity. Replace all three AAA batteries with new ones.
Alarm does not sound.	Ensure the ALARM ON/OFF switch is in the "ON" position (alarm icon visible). Verify alarm time is set correctly. Replace batteries if they are low.
Alarm is too quiet.	The alarm volume is designed to be ascending. Ensure the clock is placed in an open area, not muffled. The volume is not adjustable.
Backlight does not work.	Press the SNOOZE-LIGHT button firmly. If it still doesn't work, replace batteries.
Time or alarm cannot be set.	Ensure you are pressing and holding the correct SET button (TIME SET or ALARM SET) while adjusting with H/M buttons. Replace batteries.

SPECIFICATIONS

- **Brand:** Plumeet
- **Model:** EMAU-8002-PI
- **Display Type:** LCD Digital
- **Power Source:** 3 x AAA 1.5V Batteries (not included)
- **Product Dimensions:** 5.5" (W) x 2.7" (H) x 1.8" (D) (approximate)
- **Item Weight:** 5.3 ounces
- **Special Features:** Snooze, Night Light, Ascending Alarm Sound
- **Material:** Plastic with Silicone Protective Cover
- **Color:** Pink (for this specific model variant)



Image: Dimensions of the Plumeet alarm clock, showing 5.5 inches in width and 2.7 inches in height.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Plumeet Direct, the manufacturer, through their official channels or the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.

Manufacturer: EleMall

Seller: Plumeet Direct

© 2024 Plumeet. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question