

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NIXON](#) /

› [NIXON October Tide A4741258 Watch User Manual](#)

NIXON A4741258

NIXON October Tide A4741258 Watch User Manual

Model: A4741258

[Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#) [Support](#)

INTRODUCTION

This manual provides comprehensive instructions for the NIXON October Tide A4741258 Swiss Quartz Dress Watch. Please read this manual carefully before using your watch to ensure proper operation and longevity. Keep this manual for future reference.



Image: NIXON October Tide A4741258 Watch. This image displays the watch's silver stainless steel case, bracelet, and dial.

SETUP

1. Initial Battery Activation (if applicable)

Your NIXON October Tide A4741258 watch comes with a pre-installed battery. In some cases, a plastic stopper may be present under the crown to preserve battery life during shipping. Remove this stopper before setting the time.

2. Setting the Time

- Pull out the crown:** Gently pull the crown (the knob on the side of the watch) to the outermost position. You may feel a click.
- Adjust the hands:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time.
- Push in the crown:** Once the time is set, push the crown back into its original position. Ensure it is fully pushed in to maintain water resistance.

3. Adjusting the Bracelet

The stainless steel bracelet may require adjustment for a comfortable fit. This typically involves removing or adding links. It is recommended to have this procedure performed by a professional jeweler or watch repair service to avoid damage to the bracelet or watch.

OPERATION

Reading the Time

The NIXON October Tide A4741258 watch displays time using traditional hour, minute, and second hands on an analog dial. Read the time by observing the position of these hands relative to the hour markers.

Water Resistance

Refer to the watch's case back or specifications for its specific water resistance rating. Generally, dress watches are designed for everyday use and may withstand splashes or brief immersion, but are not suitable for swimming or diving unless explicitly stated otherwise. Always ensure the crown is fully pushed in to maintain water resistance.

MAINTENANCE

Cleaning Your Watch

- Wipe the watch case and bracelet with a soft, dry cloth regularly to remove dust and fingerprints.
- For more thorough cleaning, a slightly damp cloth can be used, followed by immediate drying.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish.

Battery Replacement

The NIXON October Tide A4741258 is powered by a Swiss Quartz movement, requiring a battery. When the watch stops or the second hand begins to jump erratically (End-of-Life indicator), the battery needs replacement. It is recommended to have the battery replaced by an authorized NIXON service center or a qualified watchmaker to ensure proper sealing and water resistance.

Storage

When not wearing your watch, store it in a cool, dry place, away from direct sunlight, extreme temperatures, and strong magnetic fields. The original watch box is ideal for storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Battery depleted; Crown pulled out	Push crown in fully; Replace battery (professional service recommended)
Incorrect time display	Time not set correctly; Crown accidentally pulled out	Reset the time as per "Setting the Time" instructions; Ensure crown is fully pushed in
Condensation under crystal	Exposure to extreme temperature changes; Water ingress	Avoid extreme temperature changes; Have the watch inspected by a professional immediately to prevent damage.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact NIXON customer support or an authorized service center.

SPECIFICATIONS

- Model Number:** A4741258
- Movement:** Swiss Quartz
- Case Material:** Stainless Steel
- Bracelet Material:** Stainless Steel
- Display Type:** Analog
- Power Source:** 1 x Product Specific Battery (included)
- Dimensions:** Approximately 11.8 x 9.8 x 8 cm (Package Dimensions)
- Weight:** Approximately 400 g (Package Weight)
- Water Resistance:** Refer to case back for specific rating. Generally suitable for splashes, not swimming.

WARRANTY INFORMATION

NIXON watches are covered by a limited warranty against defects in materials and workmanship. The duration and terms of the warranty may vary by region. Please refer to the official NIXON website or the warranty card included with your purchase for detailed information regarding warranty coverage, exclusions, and how to make a claim.

Note: The warranty typically does not cover normal wear and tear, battery life, damage resulting from improper use, accidents, or unauthorized repairs.

CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries regarding your NIXON October Tide A4741258 watch, please contact NIXON customer service through their official website or the contact information provided in your watch's packaging.

- NIXON Official Website:** www.nixon.com (Please check for regional websites)
- Service Centers:** Information on authorized service centers can be found on the NIXON website.

When contacting support, please have your watch model number (A4741258) and purchase details readily available.

© 2024 NIXON. All rights reserved. This manual is for informational purposes only.