

Aigostar AIG-8433325500351

Aigostar Electric Coffee and Spice Grinder

Model: AIG-8433325500351

[Safety Instructions](#) [Product](#)

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. GENERAL SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Incorrect operation may cause damage to the appliance and injury to the user.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the motor unit, cord, or plug in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts. Blades are sharp. Handle with care.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- Do not use outdoors. This appliance is for household use only.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Always ensure the lid is securely in place before operating the grinder.
- Avoid continuous operation for more than 30 seconds. Allow a 1-minute cooling period between two operations. For prolonged use, allow at least 15 minutes of cooling time.

2. PRODUCT OVERVIEW

The Aigostar Electric Coffee and Spice Grinder is a versatile appliance designed for grinding various dry

ingredients such as coffee beans, spices, nuts, and grains. It features a powerful motor and durable stainless steel blades for efficient grinding.

Components:

- Transparent Lid
- Grinding Chamber with Stainless Steel Blades
- Motor Unit/Base
- Power Cord
- Cleaning Brush (included)



Image 2.1: The Aigostar Electric Coffee and Spice Grinder in black, showing its compact design.

MULTI-PURPOSE GRINDER



Image 2.2: Product dimensions (188mm height, 113mm width) and power rating (200W).

3. SETUP

Before first use, ensure all packaging materials are removed. Wipe the exterior of the motor unit with a damp cloth. The grinding chamber and lid can be cleaned as described in the 'Maintenance and Cleaning' section.

First Use Preparation:

1. Unpack the grinder and all its components.
2. Clean the grinding chamber and lid thoroughly.
3. Place the grinder on a stable, flat, and dry surface.

4. Ensure the power cord is not tangled and is within reach of a suitable power outlet.

4. OPERATING INSTRUCTIONS

This grinder features a simple one-touch operation for ease of use.

Grinding Process:

1. **Fill the Grinding Chamber:** Remove the transparent lid. Add your desired dry ingredients (e.g., coffee beans, spices) into the grinding chamber. Do not exceed the maximum capacity of 60g. Ensure the ingredients are dry.
2. **Secure the Lid:** Place the transparent lid back onto the grinder and ensure it is securely locked in place. The grinder will not operate if the lid is not properly secured.
3. **Start Grinding:** Plug the appliance into a power outlet. Press and hold the button on the lid to start the grinding process.
4. **Monitor Grinding:** The transparent lid allows you to observe the grinding process in real-time. Release the button to stop grinding once the desired consistency is achieved.
5. **Empty the Chamber:** Unplug the grinder. Carefully remove the lid and pour out the ground ingredients. Use the included cleaning brush to help remove any remaining grounds.

Grinding Time Guidelines:

The grinding time determines the fineness of the grind. Adjust based on your preference and the type of ingredient.

- **Coarse Grind (e.g., French Press):** Approximately 5-10 seconds.
- **Medium Grind (e.g., Drip Coffee):** Approximately 10-20 seconds.
- **Fine Grind (e.g., Espresso):** Approximately 20-30 seconds.

Important: Do not operate continuously for more than 30 seconds. Allow a 1-minute cooling period between operations. For extended use, allow at least 15 minutes of cooling time to prevent overheating.

One Button Design

Adjustable Coarse to Fine



Image 4.1: Illustrates the one-button operation and suggested grinding times for different consistencies.

Versatile Grinding:

This grinder is suitable for a variety of dry ingredients beyond coffee beans, including:

- Spices (e.g., peppercorns, cumin seeds, star anise)
- Herbs (dried)
- Nuts (small quantities, ensure they are dry)
- Grains (e.g., flax seeds, small amounts of wheat)

Not Just Coffee Beans

Any dry ingredients can be ground



Image 4.2: Demonstrates the grinder's versatility for different dry ingredients.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your grinder.

Cleaning Instructions:

1. **Unplug the Appliance:** Always ensure the grinder is unplugged from the power outlet before cleaning.
2. **Remove Grounds:** After each use, remove the lid and carefully empty the grinding chamber. Use the provided cleaning brush to sweep out any remaining coffee grounds or spice residue.
3. **Clean Grinding Chamber and Blades:** The stainless steel blades and interior walls of the grinding

chamber can be wiped clean with a dry or slightly damp cloth. For stubborn residue, a small amount of mild detergent can be used on a cloth, followed by wiping with a clean, damp cloth, and then drying thoroughly. **Do not immerse the motor unit in water.**

4. **Clean Lid:** The transparent lid can be washed with warm, soapy water and rinsed thoroughly. Ensure it is completely dry before reattaching.
5. **Clean Exterior:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
6. **Storage:** Store the clean and dry grinder in a cool, dry place.



Image 5.1: Steps for cleaning the grinding chamber and exterior of the grinder.



Image 5.2: Detail of the durable stainless steel blades, which are easy to clean.

6. TROUBLESHOOTING

If you encounter any issues with your grinder, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Grinder does not start.	<ol style="list-style-type: none"> 1. Not plugged in. 2. Lid not securely closed. 3. Overheating protection activated. 	<ol style="list-style-type: none"> 1. Ensure the power cord is firmly plugged into an outlet. 2. Make sure the transparent lid is correctly aligned and locked. 3. Unplug the grinder and let it cool down for at least 15 minutes before attempting to use it again.
Ingredients are not grinding evenly.	<ol style="list-style-type: none"> 1. Too many ingredients in the chamber. 2. Insufficient grinding time. 	<ol style="list-style-type: none"> 1. Reduce the amount of ingredients to below the maximum fill line (60g). 2. Increase grinding time slightly, ensuring not to exceed 30 seconds of continuous operation. Pulse grinding can also help.
Grinder stops during operation.	<ol style="list-style-type: none"> 1. Overheating protection. 2. Lid became loose. 	<ol style="list-style-type: none"> 1. Unplug and allow to cool for 15 minutes. Avoid continuous operation for more than 30 seconds. 2. Ensure the lid is securely fastened.
Unusual noise or smell.	<ol style="list-style-type: none"> 1. Foreign object in chamber. 2. Motor issue. 	<ol style="list-style-type: none"> 1. Unplug immediately and check for any foreign objects. Remove if found. 2. Discontinue use and contact customer support.

7. PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	AIG-8433325500351
Brand	Aigostar
Power	200W
Voltage	230 Volts
Capacity	60 Grams
Dimensions (L x W x H)	10.2 x 10.2 x 17.2 cm
Weight	760 Grams
Blade Material	Stainless Steel
Color	Black
Noise Level	Approximately 60 dB
Recommended Use	Grinding coffee beans, spices, nuts, grains



Image 7.1: Illustrates the quiet operation of the grinder, rated at approximately 60 dB.

8. WARRANTY AND SUPPORT

Aigostar products are manufactured to the highest quality standards. In the unlikely event of a defect arising from faulty materials or workmanship, your product is covered by a warranty from the date of purchase.

Please retain your proof of purchase for any warranty claims. The warranty does not cover damage caused by misuse, neglect, accidental damage, or unauthorized modifications.

Customer Support:

For technical assistance, warranty claims, or any questions regarding your Aigostar Electric Coffee and Spice Grinder, please contact our customer support team through the retailer where you purchased the

product or visit the official Aigostar website for contact information.