

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Severin](#) /

› [Severin AT 2234 Automatic Double Long Slot Toaster Instruction Manual](#)

Severin AT 2234

Severin AT 2234 Automatic Double Long Slot Toaster Instruction Manual

Model: AT 2234

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Always observe all safety notes.

- This appliance is intended for domestic use only.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Always unplug the toaster from the outlet when not in use and before cleaning. Allow it to cool down completely before handling.
- Do not touch hot surfaces. Use handles or knobs.
- Do not place the toaster near hot gas or electric burners, or in a heated oven.
- Do not toast oversized foods, metal foil packages, or utensils in the toaster as they may cause a fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- The crumb tray must always be in place during operation.
- Do not attempt to dislodge food when the toaster is plugged in.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

2. PRODUCT OVERVIEW

The Severin AT 2234 is an automatic double long slot toaster designed for efficient and even toasting. It features a robust stainless steel construction and a powerful 1400W heating element.



Figure 2.1: The Severin AT 2234 Toaster, showcasing its double long slots capable of toasting up to four standard slices of bread simultaneously.

Key features include:

- **Double Long Slots:** Accommodates up to four standard slices of bread or two long slices.
- **1400W Power:** Ensures quick and efficient toasting.
- **Integrated Warming Rack:** Ideal for warming rolls, croissants, and pastries.
- **Variable Browning Control:** Adjustable settings for desired toast shade.
- **Defrost, Reheat, and Cancel Functions:** For versatile toasting options.
- **Removable Crumb Tray:** For easy cleaning.



Figure 2.2: A top-down view illustrating the toaster's two long slots, each holding two standard slices of toast.



Figure 2.3: The toaster with its integrated warming rack in use, holding two bread rolls for gentle warming.



Figure 2.4: A detailed view of the control panel, showing the browning control dial (settings 1-7), defrost, reheat, and cancel buttons.



Figure 2.5: The removable crumb tray, designed for easy cleaning and maintenance of the toaster.

3. SETUP

- 1. Unpacking:** Carefully remove the toaster and all packaging materials. Retain packaging for future storage or transport if needed.
- 2. Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure there is adequate ventilation around the appliance.
- 3. First Use:** Before toasting food for the first time, operate the toaster without bread for two or three cycles at the highest browning setting. This will burn off any manufacturing residues and eliminate initial odors. Ensure the area is well-ventilated during this process.
- 4. Crumb Tray:** Ensure the crumb tray is fully inserted before plugging in the toaster.

4. OPERATING INSTRUCTIONS

- 1. Insert Bread:** Place up to four standard slices of bread or two long slices into the toaster slots.

2. **Select Browning Level:** Turn the browning control dial to your desired setting (1 for light toast, 7 for dark toast).
3. **Start Toasting:** Push the toast lever down until it locks into place. The toaster will begin toasting, and the lever will automatically pop up when the cycle is complete.
4. **Cancel Function:** To stop the toasting cycle at any time, press the **CANCEL** button (marked with a stop symbol).
5. **Defrost Function:** For toasting frozen bread, insert the bread, select your desired browning level, push the lever down, and then press the **DEFROST** button (marked with a snowflake symbol). The indicator light will illuminate.
6. **Reheat Function:** To warm up already toasted bread without further browning, insert the bread, push the lever down, and then press the **REHEAT** button (marked with wavy lines). The indicator light will illuminate.
7. **Using the Warming Rack:** To warm rolls or pastries, push the warming rack lever upwards until the rack is extended. Place the items on the rack. Do not place items directly into the toasting slots when using the warming rack.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Empty Crumb Tray:** Pull out the removable crumb tray from the bottom of the toaster. Discard collected crumbs. Wipe the tray with a damp cloth and dry thoroughly before reinserting.
3. **Clean Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the finish.
4. **Internal Cleaning:** Do not insert any objects into the toasting slots for cleaning. If food becomes lodged, unplug the toaster and carefully invert it to shake out the debris.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the plug is securely inserted into a working outlet. Check your home's circuit breaker.
Bread is unevenly toasted.	Bread slices are too thick or unevenly cut; browning setting too high/low.	Ensure bread slices are of uniform thickness. Adjust the browning control dial.
Smoke coming from toaster.	Crumbs accumulated in the tray; food stuck in slots; burning food.	Immediately press the CANCEL button and unplug. Allow to cool, then clean the crumb tray. Carefully remove any stuck food (only when unplugged).
Bread stuck in slots.	Oversized bread; mechanism malfunction.	Unplug the toaster. Carefully use non-metallic tongs to remove the bread. Do not force the lever.

7. SPECIFICATIONS

Feature	Detail
Brand	Severin
Model Number	AT 2234
Material	Stainless Steel
Wattage	1400 watts
Number of Slots	2 long slots (accommodates up to 4 standard slices)
Browning Settings	7 levels
Special Features	Cancel Function, Defrost Function, Reheat Function, Integrated Warming Rack
Item Weight	1.57 Kilograms (3.45 pounds)
Voltage	240 Volts
Product Dimensions	15.35 x 7.28 x 7.09 inches

8. WARRANTY AND SUPPORT

Your Severin AT 2234 Automatic Double Long Slot Toaster is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or warranty claims, please contact Severin customer service. Contact information can typically be found on the Severin official website or on the product packaging.

Always retain your proof of purchase for warranty purposes.