

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Replacement Remote Control for NESAs Vision DVD1002 Old Version

Redi-Remote RTDVD1002OLDV

Replacement Remote Control for NESAs Vision DVD1002 Old Version - User Manual

Model: RTDVD1002OLDV | Brand: Redi-Remote

INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote replacement remote control, specifically designed for the NESAs VISION DVD1002 OLD VERSION unit. This remote is a custom-built replacement and is not an original NESAs VISION product.

Key Features

- Redi-Remotes cannot be programmed to control any auxillary devices. They will do every function for the specific unit they are designed to control.
- Remote measures 7 1/2" x 2 1/4" x 3/4"
- Redi-Remotes are not equipped with laser pointers or LED lights.

SETUP

Battery Installation

The remote control requires 4 AAA batteries (included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote.
2. Slide open the battery cover.
3. Insert 4 AAA batteries, ensuring correct polarity (+ and - ends align with the markings inside the compartment).
4. Close the battery cover securely.

Initial Use


This Redi-Remote is designed for immediate use with compatible NESAs VISION DVD1002 OLD VERSION units and typically requires no programming. Simply install the batteries and point the remote towards your device.

OPERATING INSTRUCTIONS

The remote control features a primary set of buttons for common functions and a hidden panel for advanced controls.

Remote Control Layout



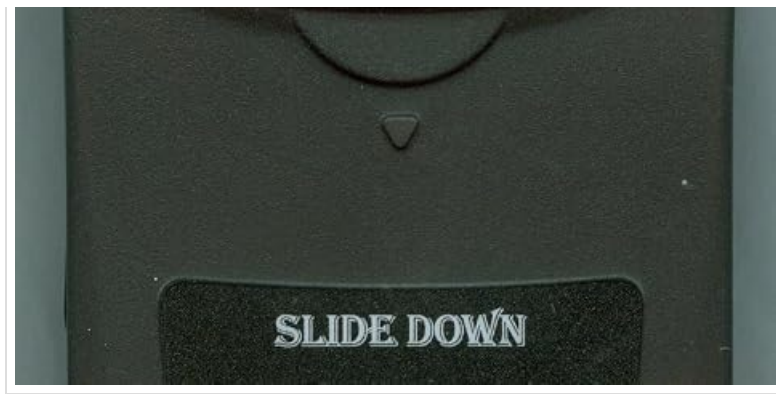

This image displays the complete layout of the Redi-Remote replacement control. The upper section contains primary TV/DVD functions, while the lower section, initially covered, reveals advanced DVD playback and menu controls.

Primary Controls (Upper Panel)

- **PWR (Power):** Turns the connected device on or off.
- **TV/VIDEO:** Switches between TV and Video input modes.
- **VOL+ / VOL- (Volume):** Adjusts the volume up or down.
- **MUTE:** Mutes or unmutes the audio.
- **CH+ / CH- (Channel):** Changes the channel up or down.
- **MENU:** Accesses the device's main menu.
- **DISP (Display):** Shows on-screen display information.
- **RECALL:** Recalls the previous channel.
- **Number Pad (0-9, 100):** Directly enters channel numbers or other numerical inputs.
- **ENT (Enter):** Confirms selections.
- **SLEEP:** Activates the sleep timer function.

Advanced Controls (Lower Panel - Slide Down)

To access the advanced controls, locate the 'SLIDE DOWN' indicator at the bottom of the remote and slide the lower cover downwards. This reveals additional buttons for DVD playback and setup.

- **PWR (Lower Panel):** An additional power button, often for specific DVD functions.
- **SOURCE:** Selects the input source.
- **EJECT:** Ejects the disc from the DVD player.
- **PROG (Program):** Used for programming functions.
- **MENU (ADD/DEL):** Accesses menu options, potentially for adding or deleting items.
- **GOTO:** Jumps to a specific time or chapter.
- **SLOW:** Activates slow-motion playback.
- **SETUP (A.MEMO):** Accesses system setup menus or memo functions.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Used to navigate menus and confirm selections.
- **Playback Controls (PREV, NEXT, Rewind, Fast Forward, Play, Pause, Stop):** Standard controls for media playback.
- **TITLE:** Returns to the DVD title menu.
- **DISP (Lower Panel):** Displays information related to DVD playback.
- **A-B:** Repeats a specific section of the disc.
- **ANGLE:** Changes the viewing angle (if supported by the disc).
- **SUB-T (Subtitle):** Toggles subtitles on/off or cycles through subtitle languages.

- **ZOOM:** Zooms in or out on the picture.
- **REPEAT:** Repeats the current track, chapter, or disc.
- **AUDIO:** Changes the audio track or language.
- **PBC (Playback Control):** Activates or deactivates Playback Control (for VCDs).

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace all 4 AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents. Avoid exposing the remote to excessive moisture.

TROUBLESHOOTING

Remote is unresponsive:

Check battery installation and ensure correct polarity. Replace batteries if they are old or depleted. Ensure there are no obstructions between the remote and the device's infrared sensor. Point the remote directly at the device.

Certain buttons do not work:

Ensure the remote is pointed correctly. If only specific buttons are unresponsive, the remote may be damaged. Verify the device supports the function you are trying to use.

If issues persist, please contact the seller directly for assistance.

SPECIFICATIONS

- **Model Number:** RTDVD1002OLDV
- **Dimensions:** 7 x 3 x 1 inches
- **Weight:** 5 ounces
- **Batteries:** 4 AAA batteries (included)
- **Connectivity Technology:** Infrared
- **Compatible Devices:** NESA VISION DVD1002 OLD VERSION DVD/Blu-ray Player
- **Special Feature:** No Programming Required
- **Max Number of Supported Devices:** 1

WARRANTY AND SUPPORT

This replacement remote control is provided by Redi-Remote. For any concerns with the remote after purchase, please contact the seller directly for support and troubleshooting assistance.

Please refer to your original product documentation for warranty information regarding your NESA VISION DVD1002 unit.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question