#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Homtime /
- > Homtime C12PRO Docking Station Speaker and Bluetooth Speaker, FM Radio, Alarm Clock, Dual USB Charger User Manual

#### **Homtime C12 Pro**

# Homtime C12PRO Docking Station Speaker User Manual

Model: C12 Pro

#### INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Homtime C12PRO Docking Station Speaker. The C12PRO integrates a Bluetooth speaker, FM radio, alarm clock, and dual USB charging capabilities, designed for convenient everyday use.

#### PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Homtime C12PRO Speaker Unit
- 1 x Power Adapter
- 1 x User Manual



Image: Contents of the Homtime C12PRO package, showing the main speaker unit, power adapter, and the user manual.

# PRODUCT OVERVIEW

Familiarize yourself with the various components and controls of your C12PRO unit.



Image: Front view of the Homtime C12PRO with an iPhone docked. The large digital display shows time and temperature, and the front features dual USB charging ports.



**Image:** Front view of the Homtime C12PRO without a phone docked. This image clearly shows the digital display, the docking connector, and the control buttons on the top surface.

## **Front Panel and Display**

- Large 4.2-inch LCD Display: Shows time, alarm status, and room temperature (Celsius or Fahrenheit). Brightness is adjustable.
- Dual USB Charging Ports: Located at the front base for convenient charging of external devices.

#### **Top Panel Controls**

- Docking Connector: Apple Certified Lightning connector for iPod/iPhone.
- Control Buttons/Knobs: For setting time, alarm, volume, mode selection, and FM radio tuning.

#### **Rear Panel Connections**



Image: Rear view of the Homtime C12PRO. This image displays the DC 9V power input, AUX-in port, 12H/24H time format button, and other rear controls.

- DC 9V Power Input: Connect the provided power adapter here.
- AUX-in Port: 3.5mm jack for connecting external audio sources.
- 12H/24H Button: Toggles between 12-hour and 24-hour time display formats.
- Other Controls: May include snooze/dimmer, alarm on/off, and FM antenna connection.

#### **SETUP**

- 1. Unpack the Unit: Carefully remove the C12PRO speaker and all accessories from the packaging.
- 2. **Connect Power:** Insert the DC plug of the power adapter into the DC 9V input port on the rear of the unit. Plug the power adapter into a standard wall outlet. The display will illuminate.
- 3. Initial Time Setting:
  - Press and hold the **TIME SET** button (location may vary, typically on top or rear).
  - Use the +/- buttons or rotary knob to adjust the hour. PressTIME SET again to confirm.
  - Adjust the minute using the+/- buttons or rotary knob. PressTIME SET to confirm and exit time setting mode.
  - To switch between 12-hour and 24-hour format, press the 12H/24H button on the rear panel.
- 4. **Adjust Display Brightness:** Press the **SNOOZE/DIMMER** button (often combined) repeatedly to cycle through brightness levels.
- 5. **Set Temperature Unit:** If applicable, press the °C/°F button to switch between Celsius and Fahrenheit display for room temperature.

#### **OPERATING INSTRUCTIONS**

#### Power On/Off

Press the POWER button to turn the unit on or off. When off, the clock display remains active.

#### **Setting the Alarm**

- 1. Press and hold the ALARM SET button. The alarm hour will flash.
- 2. Use the +/- buttons or rotary knob to adjust the alarm hour. PressALARM SET to confirm.
- 3. Adjust the alarm minute. Press **ALARM SET** to confirm.
- 4. Select the alarm source (Buzzer, FM Radio, or Docked Device). Use+/- or rotary knob and press **ALARM SET** to confirm.
- 5. To activate/deactivate the alarm, press the **ALARM ON/OFF** button. An alarm icon will appear on the display when active.
- 6. When the alarm sounds, press the **SNOOZE** button to temporarily silence it for a few minutes. Press **POWER** to turn off the alarm for the day.

#### **FM Radio Operation**

- 1. Press the **MODE** button until "FM" appears on the display.
- 2. For automatic station scanning, press and hold the PLAY/PAUSE button (or a dedicated SCAN button). The radio will scan and save available stations.
- 3. To manually tune, use the **PREV/NEXT** buttons or rotary knob to adjust the frequency.
- 4. To select a saved station, press the PRESET button and then use PREV/NEXT to navigate.
- 5. Adjust volume using the **VOLUME** knob or buttons.

#### **Bluetooth Pairing**

- 1. Press the **MODE** button until "BT" or "Bluetooth" appears on the display. The Bluetooth indicator will flash, indicating pairing mode.
- 2. On your mobile device, enable Bluetooth and search for new devices.
- 3. Select "Homtime C12PRO" from the list of available devices.
- 4. Once paired, the Bluetooth indicator on the C12PRO will stop flashing and remain solid. You can now play audio wirelessly from your device.
- 5. Adjust volume on both the C12PRO and your connected device.

#### **Using the Docking Station**

The C12PRO features an Apple Certified Lightning connector for compatible iPod/iPhone devices.

- 1. Carefully align your iPhone/iPod with the Lightning connector on the top of the unit.
- 2. Gently push down until the device is securely seated.
- 3. The C12PRO will automatically charge your device and can play audio from it.
- 4. Press the MODE button to select the docking station as the audio source.

#### **USB Charging**

The unit includes dual USB ports for charging other devices.

- Connect your USB charging cable to one of the USB ports on the front of the C12PRO.
- Connect the other end of the cable to your device (e.g., Android phone, tablet).
- The C12PRO will provide power to charge your device.

#### **AUX-in Connection**

Connect external audio players via the 3.5mm AUX-in port.

- Connect a 3.5mm audio cable (not included) from your external audio device's headphone jack to the AUX-in port on the rear of the C12PRO.
- Press the MODE button until "AUX" appears on the display.
- Play audio from your external device. Adjust volume on both the C12PRO and the external device.

#### MAINTENANCE

- Cleaning: Disconnect the power adapter before cleaning. Use a soft, dry cloth to wipe the exterior surfaces. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** If storing the unit for an extended period, disconnect it from power and store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** The unit contains a CR2 battery (included) for clock memory backup. This battery is not user-replaceable for general operation and should only be replaced by qualified service personnel if necessary.

#### **TROUBLESHOOTING**

Problem	Possible Cause	Solution		
No power/Display off	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely plugged into the unit and a working wall outlet.		
No sound from speaker	Volume too low; incorrect source selected; device not connected properly.	Increase volume. Press <b>MODE</b> to select the correct audio source (BT, FM, Dock, AUX). Reconnect Bluetooth device or docked phone.		
Bluetooth pairing fails	C12PRO not in pairing mode; device too far; interference.	Ensure C12PRO is in BT mode and flashing. Move device closer. Turn off other Bluetooth devices.		
FM radio static/poor reception	Weak signal; antenna not extended.	Extend the FM antenna fully. Reposition the unit for better reception. Perform auto-scan again.		
Alarm does not sound	Alarm not activated; alarm volume too low.	Ensure the alarm icon is visible on the display. Check alarm volume settings.		
Device not charging via USB/Dock	Cable issue; device not compatible; unit not powered.	Try a different USB cable. Ensure the C12PRO is powered on. Verify device compatibility with the Lightning dock.		

#### **SPECIFICATIONS**

# C12pro Specification

Driver Units: 2x40mm
S/N Ratio: >70dB
Bluetooth Version: 21+EDR
Bluetooth Range: 10M

Radio Frequency Range: 87.5MHz-108MHz

Compatible with iPad, iPhone, Android, Windows Phone and computer

Audio Source: Apple Lightning, USB, Bluetooth, Aux-in, Micro SD Card

Cable: 3.5mm audio cable Power Adaptor: AC100-240V, 50/60Hz, DC 5V 3A Size: 12.8x12.9x10.7cm Output Power: 3W+3W

**Image:** A table detailing the specifications of the Homtime C12PRO, including driver units, S/N ratio, Bluetooth version, range, radio frequency, power, and dimensions.

Model	C12 Pro		
Driver Units	2x40mm		
S/N Ratio	>70dB		
Bluetooth Version	2.1 + EDR		
Bluetooth Range	10M		
Radio Frequency Range	87.5MHz - 108MHz		
Compatible Devices	iPad, iPhone, Android, Windows Phone, Computer		
Power Adaptor	AC100-240V, 50/60Hz, DC 5V 3A		
Output Power	3W + 3W (6 Watts total)		
Dimensions (LxWxH)	12.8 x 12.9 x 10.7 cm		
Item Weight	800 g		
Audio Sources	Apple Lightning, USB, Bluetooth, Aux-in		
Display Type	Digital LCD (4.2 inches)		
Batteries	1 CR2 battery required (included for clock memory)		

### WARRANTY AND SUPPORT

#### **Warranty Information**

The Homtime C12PRO comes with a **1-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or external causes.

Please retain your proof of purchase for warranty claims.

#### **Customer Support**

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Homtime customer support. Refer to the contact information provided with your product packaging or visit the official Homtime website for the most up-to-date support details.

© 2023 Homtime. All rights reserved.

#### Related Documents - C12 Pro



#### Homtime C1 Digital Alarm Clock with Dual USB Charger - User Manual

User manual and specifications for the Homtime C1 Digital Alarm Clock, featuring a dimmable LCD display, dual USB charger, thermometer, and melody alarm. Learn how to set time, alarms, and use its functions.



#### Homtime C1 Pro Bluetooth Alarm Clock Speaker with Dual USB Charger User Manual

User manual for the Homtime C1 Pro, a Bluetooth alarm clock speaker with dual USB charger, detailing features, functions, setup, and operation. Includes instructions for time setting, alarm configuration, Bluetooth connectivity, and charging.



#### HC1pro Bluetooth Alarm Clock Speaker with Dual USB Charger - User Manual

Detailed user manual for the HC1pro Bluetooth Alarm Clock Speaker by Homtime, featuring dual USB charging, thermometer, and customizable alarm functions. Includes setup, operation, and FCC compliance information.



#### Homtime S1-AC Clock Radio with Bluetooth Speaker and Power Outlets User Manual

Comprehensive user manual for the Homtime S1-AC Clock Radio, featuring Bluetooth speaker, power outlets, FM radio, alarm clock, and USB charging. Learn how to set up and use all features.



Homtime D8-PD Bluetooth Speaker with Alarm Clock and Wireless Charging Function User Manual

Comprehensive user guide for the Homtime D8-PD, a Bluetooth speaker featuring an alarm clock and wireless charging. This manual provides detailed instructions on setup, operation, safety precautions, specifications, and troubleshooting.



#### Homtime MX Wooden Bluetooth Wireless Charging Speaker with Clock Function User Manual

Comprehensive user manual for the Homtime MX, a wooden Bluetooth wireless charging speaker with clock functionality. Learn about safety, features, specifications, operation, and troubleshooting.