

Tefal MB756G31

Tefal Fresh Express Plus MB756G31 Instruction Manual

Your guide to safe and efficient use

1. INTRODUCTION

Congratulations on your purchase of the Tefal Fresh Express Plus MB756G31 electric grater. This appliance is designed to simplify your food preparation by quickly and efficiently grating, slicing, and shredding various ingredients. To ensure safe operation and optimal performance, please read this instruction manual thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not immerse the motor unit in water or any other liquid. Clean only with a damp cloth.
- Always unplug the appliance from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- Ensure the appliance is properly assembled before connecting to power and operating.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is for household use only. Do not use outdoors.
- Supervise children closely when the appliance is in use.
- Use only attachments and accessories recommended by the manufacturer.
- Be careful when handling the sharp blades of the cones.

3. PRODUCT OVERVIEW

The Tefal Fresh Express Plus MB756G31 is an electric food slicer designed for versatile kitchen tasks. It comes with multiple interchangeable cones for different cutting results.



The Tefal Fresh Express Plus MB756G31 features a compact red and white motor base, a clear food chute, and a set of interchangeable grating and slicing cones.

Components:

1. **Motor Unit:** The main body containing the motor and controls.
2. **Food Chute:** Transparent tube where food is inserted.
3. **Pusher:** Used to press food down the chute.
4. **Cones:** Various colored cones for different functions (e.g., fine grating, coarse grating, slicing, shredding).
5. **Output Spout:** Where processed food exits.

4. SETUP

Before first use, wash all parts that will come into contact with food (cones, food chute, pusher) in warm soapy water, rinse, and dry thoroughly. The motor unit should only be wiped with a damp cloth.

1. Place the motor unit on a stable, flat, and dry surface.
2. Insert the desired cone into the output spout of the motor unit. Ensure it clicks securely into place.
3. Attach the food chute assembly to the motor unit, aligning the tabs and twisting until it locks.
4. Place a bowl or container under the output spout to collect the processed food.
5. Plug the appliance into a suitable power outlet.

5. OPERATING INSTRUCTIONS

The Tefal Fresh Express Plus is designed for quick and easy food preparation.

1. Ensure the appliance is correctly assembled and plugged in.

2. Prepare your ingredients: Cut food into pieces that fit easily into the food chute. For best results, ensure food is firm.
3. Turn on the appliance using the power button.
4. Carefully place the food into the food chute.
5. Use the pusher to gently guide the food down towards the rotating cone **Never use your fingers or other utensils to push food.**
6. Continue feeding food until all ingredients are processed.
7. Once finished, turn off the appliance and unplug it from the power outlet.

Tips for Best Results:

- For soft cheeses, chill them in the freezer for 30 minutes before grating.
- For vegetables like carrots or cucumbers, cut them into lengths that fit the chute without excessive force.
- Do not overload the appliance; process food in manageable quantities.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your appliance.

- **Always unplug the appliance before cleaning.**
- Disassemble all removable parts: cones, food chute, and pusher.
- Wash the cones, food chute, and pusher in warm soapy water. Rinse thoroughly and dry immediately. **Note: These parts are NOT dishwasher safe.**
- Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
- For stubborn food residue, use a soft brush. Avoid abrasive cleaners or scouring pads.
- Store the appliance and its accessories in a clean, dry place.

7. TROUBLESHOOTING

If you encounter issues with your Tefal Fresh Express Plus, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; improper assembly.	Check power cord connection; test outlet with another device; ensure all parts are correctly assembled and locked.
Food is not processing efficiently.	Wrong cone used; food too soft/hard; chute overloaded.	Select appropriate cone for food type; pre-chill soft foods; cut food into smaller pieces; do not force food.
Motor stops during operation.	Overload protection activated.	Turn off and unplug the appliance. Remove any jammed food. Let the motor cool down for 15-20 minutes before restarting. Reduce load.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Brand:	Tefal
Model:	MB756G31
Color:	Red, White
Material:	Metal
Item Weight:	2.2 Pounds
Product Dimensions:	23.62 x 23.62 x 33.46 inches
Dishwasher Safe Parts:	No (for removable parts)

9. WARRANTY AND SUPPORT

Tefal products are manufactured to high quality standards. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official Tefal website. For technical support, spare parts, or service inquiries, please contact Tefal customer service in your region. You can often find more information and support on the official Tefal website:www.tefal.com

© 2024 Tefal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question