

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [LGM](#) /

> LGM AC Adapter User Manual for Protron PDV-288 Portable DVD Player

LGM AC Adapter

LGM AC Adapter User Manual

For Protron PDV-288 Portable DVD Player

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your LGM AC Adapter. This adapter is specifically designed to provide power to and charge the Protron PDV-288 Portable DVD Player. Please read this manual thoroughly before using the product.

SAFETY INFORMATION

WARNING: To reduce the risk of fire or electric shock, carefully follow these instructions.

- Do not expose the adapter to rain or excessive moisture.
- Do not use the adapter if the cord or plug is damaged.
- Ensure the adapter is connected to a power outlet with the correct voltage (100V-240V AC).
- Do not disassemble the adapter. Refer all servicing to qualified service personnel.
- Keep the adapter away from heat sources and direct sunlight.
- Unplug the adapter from the power outlet when not in use for extended periods.

SETUP

Follow these steps to properly set up your LGM AC Adapter with your Protron PDV-288 Portable DVD Player.

1. **Inspect the Adapter:** Before use, visually inspect the AC adapter and its cord for any signs of damage.
2. **Connect to Device:** Locate the power input port on your Protron PDV-288 Portable DVD Player. Insert the barrel connector of the LGM AC Adapter firmly into this port.
3. **Connect to Power Outlet:** Plug the 2-pin AC plug of the adapter into a standard electrical wall outlet (100V-240V AC).



Image: The LGM AC Adapter connected to a power strip, demonstrating proper connection to a power source.

OPERATING INSTRUCTIONS

Once connected, the LGM AC Adapter will provide power to your Protron PDV-288 Portable DVD Player and charge its internal battery (if applicable).

- The adapter is designed for continuous use, providing stable power to your device.
- Charging status will typically be indicated by your DVD player's own indicators. Refer to your DVD player's manual for specific charging information.
- The adapter features built-in protection against overcharging, ensuring the safety of your device's battery.



Image: A close-up view of the LGM AC Adapter, showing its input and output specifications printed on the label.

MAINTENANCE

Proper care will extend the life of your LGM AC Adapter.

- **Cleaning:** Disconnect the adapter from the power outlet and the device before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly winding the cord to prevent damage.
- **Cord Care:** Do not pull on the cord to unplug the adapter. Always grasp the plug itself. Avoid placing heavy objects on the cord or bending it sharply.



Image: The LGM AC Adapter with its power cord extended, highlighting the cord length of 6.5 feet.

TROUBLESHOOTING

If you encounter issues with your LGM AC Adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not powering on or charging.	Adapter not properly plugged in. Power outlet is not active. Adapter or device cable is damaged. Device issue, not adapter.	Ensure both ends of the adapter are securely connected. Test the power outlet with another device. Inspect the adapter and cable for visible damage. If damaged, discontinue use. Test the DVD player with another compatible power source if available.

Problem	Possible Cause	Solution
Adapter feels unusually hot.	Overload or poor ventilation. Internal fault.	Ensure the adapter is in a well-ventilated area. Disconnect if excessively hot. Discontinue use and replace the adapter.

SPECIFICATIONS

Feature	Detail
Brand	LGM
Input Voltage	100V-240V AC, 50/60Hz, 0.3A
Output Voltage/Current	5V DC, 2A
Connector Type	Barrel Connector
Compatible Devices	Protron PDV-288 Portable DVD Player
Special Features	Portable, Travel-friendly, Overcharge Protection
Power Source	Corded Electric
Cord Length	Approximately 6.5 feet (2 meters)