

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal Snack Collection SW854D Multi-Function Snack Maker Instruction Manual

Tefal SW854D

Tefal Snack Collection SW854D Multi-Function Snack Maker Instruction Manual

Model: SW854D

1. INTRODUCTION

Thank you for choosing the Tefal Snack Collection SW854D Multi-Function Snack Maker. This versatile appliance is designed to help you prepare a variety of delicious snacks, including sandwiches, waffles, paninis, and more, with ease and convenience. Please read this instruction manual thoroughly before first use to ensure safe operation and optimal performance of your appliance. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions carefully before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'off', then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- The appliance features an insulated handle, operating and temperature indicators, and non-slip feet for safe

operation.

3. PRODUCT OVERVIEW

The Tefal Snack Collection SW854D is a versatile appliance designed for preparing a variety of snacks. It comes with multiple sets of interchangeable plates, allowing you to switch between different cooking functions easily.



Image: The Tefal Snack Collection SW854D appliance shown with four different interchangeable cooking plates: sandwich, grill/panini, waffle, and mini bites.

Key Features:

- **Multi-Functionality:** Prepare a wide range of snacks including sandwiches, waffles, paninis, and more.
- **Interchangeable Plates:** Comes with 4 sets of plates (sandwich, grill/panini, waffle, mini bites) and offers a collection of additional plates for various culinary creations. Each plate set includes a recipe book.
- **Non-Stick Coating:** Ensures easy food release and simplifies cleaning.
- **Removable and Dishwasher-Safe Plates:** For convenient cleaning.
- **Smart Storage:** Plates can be stored in their dedicated boxes, which also contain recipe booklets.
- **Temperature Indicator:** A light indicates when the plates have reached the optimal temperature for cooking.
- **Insulated Handle:** For safe handling during operation.
- **Non-Slip Feet:** Provides stability during use.

4. SETUP

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging. Retain packaging for storage or disposal according to local regulations.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Wash the removable cooking plates with warm, soapy water, rinse thoroughly, and dry completely.
3. **Plate Installation:** Ensure the appliance is unplugged and cool. Open the appliance. Insert the desired cooking plates by aligning them with the slots and pressing down until they click into place.

PLAQUES AMOVIBLES



Image: A user demonstrating the easy removal of a cooking plate from the appliance.

4. **Placement:** Place the appliance on a stable, heat-resistant, and dry surface, away from walls and flammable materials. Ensure adequate ventilation around the appliance.

5. OPERATING INSTRUCTIONS

The Tefal Snack Collection SW854D is designed for ease of use. Follow these steps for preparing your snacks:

1. **Prepare the Appliance:** Ensure the correct plates are installed and clean. Lightly grease the plates with cooking oil or butter if necessary, especially for the first use or for recipes that require it.
2. **Preheating:** Close the appliance and plug it into a suitable electrical outlet. The indicator light(s) will illuminate. Allow the appliance to preheat until the green indicator light signals that the optimal cooking temperature has been reached.
3. **Cooking:** Open the appliance and carefully place your ingredients onto the bottom plate. Close the lid. The cooking time will vary depending on the type of snack and your desired level of browning. Refer to the recipe booklets provided with your plate sets for specific cooking times.

POLYVALENT



Image: The appliance in use, preparing sandwiches and an egg, showcasing its multi-functional capabilities.

4. **Removing Food:** Once cooked, use a heat-resistant plastic or wooden utensil to carefully remove the food from the plates. Avoid using metal utensils, as they can damage the non-stick coating.
5. **Finishing:** Unplug the appliance from the outlet after use. Allow it to cool completely before cleaning or changing plates.

Plate Options and Recipes:

Your Snack Collection SW854D comes with several plate sets, each accompanied by a recipe booklet to inspire your culinary adventures. The available plate types include:

- **Sandwich Plates:** For classic toasted sandwiches.
- **Grill/Panini Plates:** Ideal for grilling paninis, vegetables, or small cuts of meat.
- **Waffle Plates:** For making traditional waffles.
- **Mini Bites Plates:** For small, bite-sized snacks.



Image: A display of various snacks such as waffles, pancakes, and sandwiches, all prepared with the Tefal Snack Collection appliance.

Product Video:

Your browser does not support the video tag.

Video: An official product video showcasing the versatility and various snack options available with the Tefal Snack Collection, including different plate types and their corresponding culinary results.

6. MAINTENANCE AND CLEANING

Proper maintenance and cleaning will extend the life of your appliance and ensure continued optimal performance.

1. **Cool Down:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Remove Plates:** Once cool, press the release buttons to remove the cooking plates.
3. **Cleaning Plates:** The non-stick plates are dishwasher-safe. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before storing or re-installing.

NETTOYAGE FACILE



Image: Removable cooking plates from the appliance being cleaned in a dishwasher, highlighting their dishwasher-safe feature.

4. **Cleaning the Main Unit:** Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
5. **Storage:** Store the appliance with the plates installed or in their dedicated storage boxes. The compact design allows for easy storage.

16 PLAQUES À COLLECTIONNER



Image: A collection of Tefal Snack Collection plate sets neatly stored in their individual boxes on a shelf, demonstrating the smart storage solution.

7. TROUBLESHOOTING

If you encounter any issues with your Tefal Snack Collection SW854D, please refer to the following common problems and solutions:

- **Appliance does not turn on:**
 - Check if the power cord is securely plugged into a working electrical outlet.
 - Ensure the outlet is functional by testing it with another appliance.
- **Food is not cooking evenly or taking too long:**
 - Ensure the appliance has fully preheated (green indicator light is on) before adding food.
 - Verify that the plates are correctly installed and seated.
 - Do not overload the plates with too much food.
- **Food sticks to the plates:**

- Ensure the plates were lightly greased before use, especially for the first time or with certain recipes.
- Avoid using metal utensils that can damage the non-stick coating.
- **Smoke or unusual odor during first use:**
 - A small amount of smoke or odor is normal during the first few uses as manufacturing residues burn off. Ensure good ventilation. If it persists, unplug and contact customer support.

If the problem persists after checking these points, please contact Tefal customer support.

8. SPECIFICATIONS

Specification	Detail
Brand	Tefal
Model Number	SW854D
Color	Black/Stainless Steel
Product Dimensions (L x W x H)	84 x 56 x 34 cm (33.1 x 22.0 x 13.4 inches)
Power	700 Watts
Voltage	240 Volts
Material	Stainless Steel
Item Weight	4.34 Kilograms (9.57 lbs)
Special Feature	Lightweight



Image: A visual representation of the appliance's dimensions, indicating a width of 28 cm and a height of 20.3 cm.

9. WARRANTY AND SUPPORT

Tefal is committed to providing high-quality products. Your Tefal Snack Collection SW854D is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your product for specific terms and conditions, including the warranty period and how to make a claim. For technical assistance, spare parts, or any questions regarding your appliance, please visit the official Tefal website or contact their customer service department. Keep your proof of purchase for warranty purposes. Tefal offers a 15-year repairability commitment at a fair price, supported by a global network of 6200 repairers, contributing to environmental protection and waste reduction.

© 2023 Tefal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B015SJQ7KY>

More documents and user manuals: **<https://manuals.plus/>**