

BLACK+DECKER MT300AT

BLACK+DECKER MT300AT 300W Multi-Tool Instruction Manual

Model: MT300AT

[Introduction](#)

[Safety](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Specifications](#)

1. INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your BLACK+DECKER MT300AT 300W Multi-Tool. Please read this manual thoroughly before operating the tool and retain it for future reference. Understanding the tool's functions and safety precautions will ensure optimal performance and user safety.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury when using power tools.

General Power Tool Safety

- **Work Area Safety:** Keep the work area clean and well-lit. Cluttered or dark areas invite accidents. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- **Electrical Safety:** Power tool plugs must match the outlet. Never modify the plug in any way. Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges, and refrigerators.
- **Personal Safety:** Always wear eye protection. Use personal protective equipment such as dust masks, non-skid safety shoes, hard hats, or hearing protection when appropriate. Stay alert, watch what you are doing, and use common sense when operating a power tool.
- **Tool Use and Care:** Do not force the power tool. Use the correct power tool for your application. Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools.

Specific Multi-Tool Safety

- Ensure accessories are securely attached before operation.

- Do not touch the accessory immediately after use as it may be hot.
- Always hold the tool firmly with both hands during operation.
- Be aware of hidden wiring or plumbing when cutting into walls or other surfaces.

3. PACKAGE CONTENTS

Your BLACK+DECKER MT300AT Multi-Tool kit includes the following items:

- 1 x BLACK+DECKER MT300AT 300W Multi-Tool
- 2 x Cutting Blades
- 2 x Scraper Blades
- 1 x Sanding Pad
- 6 x Abrasive Sheets
- 1 x Metal Storage Case



Figure 3.1: The BLACK+DECKER MT300AT Multi-Tool kit, including the tool and accessories, stored in its durable metal case.

4. PRODUCT OVERVIEW

The BLACK+DECKER MT300AT is a versatile 300W oscillating multi-tool designed for a wide range of applications including cutting, sanding, scraping, and grout removal. Its compact design and powerful motor make it suitable for various DIY and professional tasks.

- **Powerful 300W Motor:** Provides ample power for demanding tasks.
- **Variable Speed:** Offers 10,000-22,000 oscillations per minute for optimal control across different materials.
- **2.8° Oscillation Angle:** Delivers efficient material removal.
- **Slide Switch:** For easy power control.
- **Quick Accessory Change:** Designed for fast and tool-free accessory changes.

5. SETUP

5.1 Attaching Accessories

Before attaching or changing accessories, ensure the tool is disconnected from the power supply.

1. Locate the accessory release lever or mechanism on the tool head.
2. Open the lever or mechanism to unlock the accessory mount.
3. Align the desired accessory (blade, scraper, or sanding pad) with the mounting interface on the tool head. Ensure it sits flush and correctly oriented for your task.
4. Close the accessory release lever or mechanism firmly until it clicks into place, securing the accessory.
5. Gently pull on the accessory to confirm it is securely fastened before connecting to power.

5.2 Attaching Sanding Sheets

If using the sanding pad, attach the appropriate abrasive sheet:

1. Ensure the sanding pad is clean and free of debris.
2. Align the hook-and-loop backing of the abrasive sheet with the sanding pad.
3. Press the abrasive sheet firmly onto the sanding pad to ensure good adhesion.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off

- To turn the tool **ON**, slide the power switch forward to the 'I' position.
- To turn the tool **OFF**, slide the power switch backward to the 'O' position.
- Always ensure a firm grip on the tool before powering on.

6.2 Variable Speed Control

The MT300AT features variable speed control, allowing you to adjust the oscillation rate between 10,000 and 22,000 oscillations per minute. Use lower speeds for delicate work or softer materials, and higher speeds for faster material removal on harder surfaces. The speed is typically adjusted via a dial or switch, refer to the tool's markings for specific settings.

6.3 Applications

6.3.1 Cutting and Slicing

Attach the appropriate cutting blade for your material (wood, plastic, soft metal). Hold the tool firmly and guide the blade along the cutting line with steady pressure. Allow the tool to do the work; do not force it.



Figure 6.1: The multi-tool being used to precisely cut a PVC pipe, demonstrating its utility for plumbing or similar tasks.



Figure 6.2: The multi-tool cutting a precise opening in wood, ideal for creating access points for pipes or cables.

6.3.2 Sanding

Attach the sanding pad and an abrasive sheet of the desired grit. Use light, even pressure and move the tool in a consistent pattern over the surface. Avoid pressing too hard, as this can reduce sanding efficiency and damage the workpiece.



Figure 6.3: The multi-tool equipped with a sanding pad, smoothing a wooden surface, suitable for preparation before painting or finishing.

6.3.3 Scraping and Material Removal

Select the appropriate scraper blade for removing materials like old paint, adhesive, caulk, or grout. Position the scraper at a shallow angle to the surface and apply gentle pressure, allowing the oscillating action to lift and remove the material.



Figure 6.4: The multi-tool effectively removing old caulk or sealant from the edge of a floor, demonstrating its precision for detail work.



Figure 6.5: The multi-tool being used to scrape and remove old floor tiles or adhesive, showcasing its power for demolition and renovation tasks.

7. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your multi-tool. Always disconnect the tool from the power supply before performing any maintenance.

- **Cleaning:** After each use, wipe down the tool with a clean, damp cloth. Remove any dust or debris from the ventilation openings to prevent overheating. Do not use harsh chemicals or abrasive cleaners.
- **Accessory Inspection:** Regularly inspect blades, scrapers, and sanding pads for wear or damage. Replace worn accessories promptly to maintain performance and safety.
- **Cord Inspection:** Check the power cord for any cuts, fraying, or damage. If damaged, have it repaired by a qualified service technician.
- **Storage:** Store the tool and its accessories in the provided metal case in a dry, secure location, out of reach of children.

8. TROUBLESHOOTING

If you encounter issues with your multi-tool, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Tool does not start	No power supply; Faulty power cord; Power switch off.	Check power outlet and circuit breaker; Inspect power cord for damage; Ensure slide switch is in 'ON' position.
Reduced performance/vibration	Worn or dull accessory; Accessory not securely attached; Overheating.	Replace accessory; Re-secure accessory; Allow tool to cool down, clear ventilation.
Excessive noise or sparks	Internal motor issue; Damaged accessory.	Discontinue use immediately and contact customer support; Replace damaged accessory.

9. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	MT300AT
Power Input	300 Watts
Oscillation Speed	10,000 - 22,000 OPM (Oscillations Per Minute)
Oscillation Angle	2.8°
Power Source	Corded Electric
Tool Weight	1.02 kg (2.25 lbs)
Package Dimensions	32 x 24.2 x 11 cm
Included Accessories	2 Blades, 2 Scrapers, 1 Sanding Pad, 6 Abrasive Sheets

10. WARRANTY AND SUPPORT

BLACK+DECKER products are manufactured to high-quality standards and are guaranteed for professional use. For detailed warranty information, service, or technical support, please refer to the warranty card included with your product or visit the official BLACK+DECKER website. Do not attempt to repair the tool yourself; always contact authorized service personnel.