

Majestic RS-134

Majestic RS-134 Digital FM Dual Alarm Clock Radio

User Manual

INTRODUCTION

Thank you for choosing the Majestic RS-134 Digital FM Dual Alarm Clock Radio. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

PRODUCT OVERVIEW

The Majestic RS-134 is a compact digital alarm clock radio featuring an LED display, dual alarm functionality, and FM radio with PLL tuning. Below are images illustrating the product and its components.



Figure 1: Front view of the Majestic RS-134 Digital FM Dual Alarm Clock Radio, showing the large LED display and control buttons.



Figure 2: Side view of the Majestic RS-134, highlighting the compact design and accessible control buttons.



Figure 3: The Majestic RS-134 integrated into a home environment, demonstrating its sleek appearance.

SETUP

1. Power Connection

Connect the supplied AC adapter to the DC 5V input jack on the back of the unit, then plug the adapter into a standard wall outlet (AC 100-240V, 50/60Hz). The unit will power on and the display will illuminate.

2. Battery Backup Installation

For time and alarm settings backup during power outages, install one 3V battery (type not specified, typically CR2032) into the battery compartment located on the bottom of the unit. Ensure correct polarity (+/-). *Note: The display will not illuminate when operating solely on battery backup; it only preserves settings.*

3. Initial Time Setting

Upon first power-up or after a complete power loss without battery backup, the time display may flash. Refer to the "Setting the Time" section under Operating Instructions to set the current time.

OPERATING INSTRUCTIONS

Setting the Time

1. Press and hold the **TIME SET** button. The hour digits will flash.
2. Use the **HOUR** button to adjust the hour.
3. Press the **TIME SET** button again. The minute digits will flash.
4. Use the **MINUTE** button to adjust the minutes.
5. Press the **TIME SET** button once more to confirm and exit time setting mode.

Setting Alarms (Alarm 1 & Alarm 2)

The RS-134 features two independent alarms.

1. Press and hold the **ALARM 1** or **ALARM 2** button. The alarm hour digits will flash.
2. Use the **HOUR** button to set the desired alarm hour.
3. Press the respective **ALARM** button again. The alarm minute digits will flash.
4. Use the **MINUTE** button to set the desired alarm minutes.
5. Press the respective **ALARM** button once more to confirm.
6. To activate the alarm, press the **ALARM 1 ON/OFF** or **ALARM 2 ON/OFF** button until the alarm indicator appears on the display. Press repeatedly to cycle through alarm modes (e.g., Radio, Buzzer, Off).

Using the FM Radio

1. Press the **RADIO ON/OFF** button to turn on the radio.
2. Press the **TUNE +** or **TUNE -** buttons to manually tune to a desired FM frequency.
3. Press and hold **TUNE +** or **TUNE -** for automatic scanning to the next available station.
4. Adjust the volume using the **VOLUME +** or **VOLUME -** buttons.
5. To turn off the radio, press the **RADIO ON/OFF** button again.

Snooze Function

When an alarm sounds, press the **SNOOZE** button to temporarily silence it for a few minutes (default snooze time is usually 9 minutes, refer to product specifics for exact duration). The alarm will sound again after the snooze period.

Display Brightness Control

Press the **DIMMER** button (or similar, check unit for exact label) repeatedly to cycle through different display brightness levels (e.g., High, Medium, Low, Off). This allows adjustment for various lighting conditions.

Sleep Timer

To set the radio to turn off automatically after a set period, press the **SLEEP** button repeatedly to select the desired sleep timer duration (e.g., 10, 30, 60, 90 minutes). The radio will play for the selected duration and then turn off.

MAINTENANCE

Cleaning

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Ensure the unit is unplugged before cleaning.

Battery Replacement

If the battery backup function fails during a power outage, replace the 3V battery in the compartment on the bottom of the unit. Dispose of old batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Power adapter not connected or faulty.	Ensure AC adapter is securely plugged into the unit and a working wall outlet.
Display is dim or off.	Brightness setting is too low or off. Unit is running on battery backup.	Press the DIMMER button to adjust brightness. Connect to AC power for full display functionality.
Alarm does not sound.	Alarm not activated or volume too low.	Ensure alarm indicator is visible on display. Check alarm volume setting.
Poor FM radio reception.	Antenna not extended or interference.	Extend the FM wire antenna fully. Reposition the unit to reduce interference.
Time/alarm settings lost after power outage.	Battery backup not installed or depleted.	Install a fresh 3V battery for backup.

SPECIFICATIONS

Model: Majestic RS-134

Display Type: LED

Power Source: AC (100-240V, 50/60Hz), DC (5V input), Battery (3V for backup)

Functions: Digital FM Radio with PLL, Dual Alarm, Snooze, Sleep Timer, Display Brightness Control

Dimensions (L x W x H): 17.1 cm x 8.7 cm x 4 cm (approximately 6.73 x 3.43 x 1.57 inches)

Weight: Approximately 400 grams (0.88 lbs)

Material: Acrylonitrile Butadiene Styrene (ABS)

WARRANTY AND SUPPORT

Majestic products are designed for reliability and performance. For warranty information, technical support, or service inquiries, please refer to the warranty card included with your purchase or visit the official Majestic website. Please have your model number (RS-134) and purchase details ready when contacting support.