

Accutime PAW4016

Accutime Kids Paw Patrol Digital LCD Quartz Wrist Watch

USER MANUAL

Model: PAW4016 | Brand: Accutime

Introduction

This manual provides essential information for the proper use, setup, and maintenance of your Accutime Kids Paw Patrol Digital LCD Quartz Wrist Watch. Please read this manual thoroughly before using the watch to ensure optimal performance and longevity.

Key Features:

- Paw Patrol-themed digital watch featuring a 3D laser-cut dial with Marshall's head.
- Flashing LCD light-up function activated by a button press.
- Digital time display for easy time learning.
- Adjustable red plastic strap with printed artwork, fitting wrist sizes from 5.5" to 8".
- Comes in a collectible Paw Patrol tin.





Figure 1: Front view of the Accutime Kids Paw Patrol Digital LCD Quartz Wrist Watch.

Setup

Unboxing:

Your watch comes packaged in a collectible Paw Patrol tin. Carefully open the tin to retrieve the watch.



Figure 2: The Paw Patrol watch presented within its collectible tin.



Figure 3: The closed collectible Paw Patrol tin.

Battery Information:

The watch includes one product-specific battery, pre-installed and ready for immediate use. No initial battery installation is required.

Setting the Time:

To set the time on your digital watch, locate the small button on the side of the watch case. Use a small, pointed object (like a pen tip or a straightened paperclip) to press and hold this button. The digits will begin to flash, indicating that the watch is in time-setting mode. Press the button repeatedly to advance the hours, then minutes. Once the desired time is set, release the button and wait a few seconds for the display to stop flashing, saving the new time.

Operating Instructions

Reading the Digital Display:

The watch features a clear LCD digital display that shows the time in a standard hour:minute format. The large digits are designed for easy readability for young users.

Activating the Light-Up Function:

To activate the flashing LCD light-up function, press the designated button on the side of the watch. The display will illuminate with a flashing light, adding an exciting visual effect. The light will automatically turn off after a few seconds to conserve battery life.



Figure 4: The digital watch comfortably worn on a wrist, displaying the time.



Figure 5: A child demonstrating the wear of the Paw Patrol digital watch.

Adjusting the Strap:

The watch features an adjustable plastic strap with a buckle closure. To adjust the fit, simply select the appropriate hole

on the strap and secure the buckle. The strap is designed to fit wrist sizes ranging from 5.5 inches to 8 inches.

Official Product Video:

Your browser does not support the video tag.

Video 1: An official product video showcasing the Paw Patrol Kids' Digital Watch, highlighting its design and features.

Maintenance and Care

Cleaning:

To clean your watch, gently wipe the surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the watch's finish and digital display. Do not submerge the watch in water.

Storage:

When not in use, store the watch in its original collectible tin or a dry, safe place away from direct sunlight and extreme temperatures. This will help preserve the watch's appearance and functionality.

Battery Replacement:

The watch uses a product-specific battery (LR41). Battery replacement should ideally be performed by a qualified technician to ensure proper sealing and functionality. If the display becomes dim or unresponsive, it may be time to replace the battery.

Troubleshooting

Problem	Possible Cause	Solution
Watch display is blank or dim.	Low or depleted battery.	Replace the battery (LR41). Refer to the "Battery Replacement" section.
Time is incorrect.	Time needs to be reset.	Follow the instructions in the "Setting the Time" section.
Light-up function not working.	Low battery or button malfunction.	Ensure battery is sufficient. If problem persists after battery replacement, contact customer support.
Watch strap is too loose/tight.	Incorrect strap adjustment.	Adjust the strap to a comfortable fit using the available holes.

Specifications

Model Number: PAW4016

Brand: Accutime

Product Dimensions: 3.2 x 3.1 x 3.1 inches; 0.8 ounces

Material: Plastic

Battery: 1 Product Specific battery (LR41) (included)

Department: Boys

Manufacturer: Accutime Watch Corp.

Country of Origin: China

First Available Date: October 17, 2015

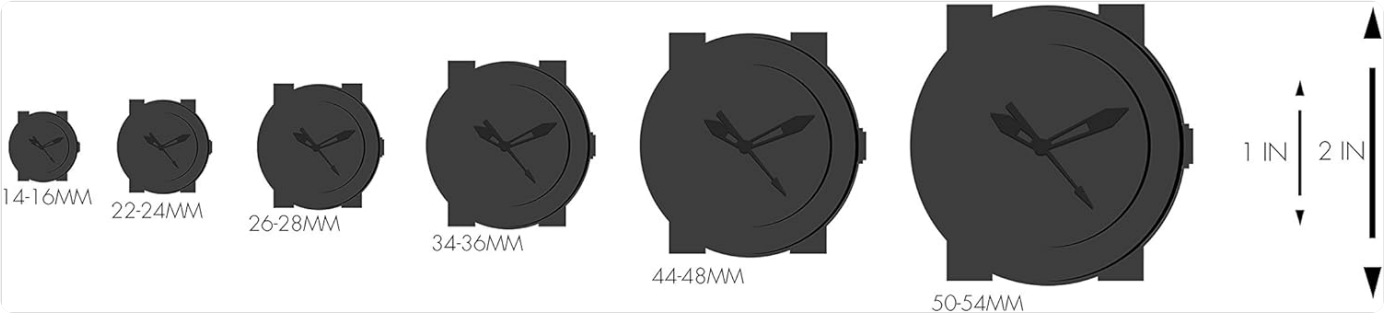


Figure 6: General watch size comparison chart for reference.

Warranty and Support

Warranty Information:

This Accutime product is covered by a standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your purchase or visit the official Accutime website.

Customer Support:

For any questions, technical assistance, or support inquiries not covered in this manual, please contact Accutime customer service. You can find contact information on the product packaging or the official Accutime website:

Accutime Official Website: www.accutime.com

Please have your model number (PAW4016) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question