

[Manuals.plus](#) /

› [Accutime](#) /

› Nickelodeon Paw Patrol Kids Digital LED Watch with Light-Up Display Featuring Chase Marshall Rocky and Blue Silicone Strap in Gift Tin for Boys and Girls Ages 4+ Fits Wrists 5.5"-8"

Accutime PAW4039

Nickelodeon Paw Patrol Kids Digital LED Watch

Model: PAW4039

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Nickelodeon Paw Patrol Kids Digital LED Watch. Designed for young users, this watch features a clear digital display and an exciting light-up function, making time-telling engaging and fun. Please read this manual thoroughly to ensure proper use and longevity of the product.



Figure 1: Front view of the Paw Patrol Digital LED Watch, displaying the time and character graphics.

SETUP

Battery Information

The watch comes with 2 product-specific batteries (1.5V) pre-installed. No initial battery installation is required for first use.

Setting the Time

1. Locate the buttons on the side of the watch case. Typically, there are two buttons: one for display/light and one for setting.
2. Press the **Set** button (usually the lower or right-side button) repeatedly until the desired digit (hour or minute) begins to flash.
3. Use the **Adjust** button (usually the upper or left-side button) to change the flashing digit to the correct time.
4. Continue pressing the **Set** button to cycle through hours, minutes, and potentially date/month settings, adjusting each with the **Adjust** button.
5. Once all settings are correct, press the **Set** button one last time to confirm and exit the setting mode.



Figure 2: Close-up view of the watch face, highlighting the digital time display and character details.

OPERATING INSTRUCTIONS

Reading the Time

The time is displayed digitally on the watch face. Simply press the main display button (often the upper or left-side button) to illuminate the screen and show the current time.

Activating the Light-Up Display

To activate the light-up display feature, press the designated light button (refer to the watch's buttons, typically distinct from the time-setting buttons). The watch face will illuminate with a colorful LED light show, highlighting the Paw Patrol characters.



Figure 3: The watch demonstrating its LED light show feature, illuminating the characters.

Product Demonstration Video

Your browser does not support the video tag.

Video 1: A short demonstration of the Paw Patrol watch, showcasing its design and the light-up display feature.

MAINTENANCE

Cleaning

To clean your watch, gently wipe the watch face and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or display.

Water Resistance

This watch is **not water resistant**. Avoid exposing the watch to water, including showering, swimming, or heavy rain, to prevent damage to the internal components.

Battery Replacement

When the display becomes dim or the lights no longer activate, it may be time to replace the batteries. This watch requires 2 product-specific 1.5V batteries. Battery replacement should ideally be performed by an adult or a qualified technician to ensure proper sealing and function.



Figure 4: Rear view of the watch, displaying manufacturing and battery specifications.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is dim or blank.	Low or depleted batteries.	Replace the 2 x 1.5V product-specific batteries.
Light-up feature not working.	Low battery or button malfunction.	Check battery level. Ensure the light button is pressed firmly. If issue persists, contact support.
Time is incorrect or changes easily.	Accidental button press or setting error.	Re-set the time following the "Setting the Time" instructions. Ensure buttons are not accidentally pressed during wear.

Problem	Possible Cause	Solution
Watch stopped working after contact with water.	Water damage.	This watch is not water resistant. Water exposure can cause irreversible damage.

SPECIFICATIONS

Feature	Detail
Model Number	PAW4039
Brand	Accutime
Movement	Quartz Movement
Case Diameter	31mm
Material	Plastic
Water Resistance	Not Water Resistant
Recommended Age	6 years and up (Manufacturer recommended)
Batteries	2 Product Specific batteries (1.5V) (included)
Strap Fit	5.5" - 8" wrists

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Nickelodeon Paw Patrol Kids Digital LED Watch, please contact the manufacturer, Accutime Watch Corp. Refer to the product packaging or their official website for contact details.

Note: Damage due to water exposure is not covered under warranty as the product is not water resistant.

© 2024 Accutime Watch Corp. All rights reserved.

Nickelodeon and all related titles, logos and characters are trademarks of Viacom International Inc.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question