

[Manuals.plus](#) /

> [Glem](#) /

> Glem U765MI6 Freestanding Gas Hob Cooker User Manual

Glem U765MI6

Glem U765MI6 Freestanding Gas Hob Cooker User Manual

Model: U765MI6

1. INTRODUCTION

Thank you for choosing the Glem U765MI6 Freestanding Gas Hob Cooker. This manual provides essential information for the safe and efficient use, installation, and maintenance of your appliance. Please read these instructions carefully before using the cooker and retain them for future reference.

2. SAFETY INSTRUCTIONS

Your safety and the safety of others are paramount. Please observe all safety warnings and precautions outlined below.

- **Gas Safety:** This appliance uses gas. Ensure proper ventilation. Gas installation and servicing must be performed by a qualified and registered gas installer. Do not store flammable materials near the appliance.
- **Electrical Safety:** Ensure the appliance is correctly earthed. Do not use adapters or extension cords. Disconnect from the power supply before cleaning or maintenance.
- **Hot Surfaces:** The hob and oven surfaces become hot during operation. Use oven mitts and keep children away from the appliance.
- **Child Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **General Use:** Do not use the appliance for space heating. Never line the oven with aluminum foil as this can trap heat and damage the appliance.

3. PRODUCT OVERVIEW

The Glem U765MI6 is a freestanding gas hob cooker featuring a stainless steel finish and an A energy efficiency rating. It includes a gas hob with multiple burners and an oven with a grill function.



Figure 1: Front view of the Glem U765MI6 Freestanding Gas Hob Cooker. This image displays the full appliance, including the stainless steel hob with four gas burners, control knobs located on the front panel, and the oven door with a viewing window. The top lid is shown in an open position.

4. INSTALLATION AND SETUP

Proper installation is crucial for the safe and efficient operation of your cooker. It is strongly recommended that installation be carried out by a qualified professional.

4.1 Unpacking

- Carefully remove all packaging materials.
- Check the appliance for any signs of damage. If damaged, do not install or use it, and contact your supplier.
- Keep packaging materials out of reach of children.

4.2 Positioning

- Place the cooker on a flat, stable surface.
- Ensure adequate clearance from adjacent walls and cabinets as specified in local regulations.
- The appliance must be installed in a well-ventilated area.

4.3 Gas Connection

WARNING: Gas connection must be performed by a qualified and registered gas installer.

- Ensure the gas supply pressure is compatible with the appliance.
- Use appropriate gas hoses and fittings that comply with local standards.
- Check for gas leaks using soapy water, never an open flame.

4.4 Electrical Connection

WARNING: Electrical connection must be performed by a qualified electrician.

- Connect the appliance to a properly earthed electrical outlet.
- Ensure the voltage and frequency match the specifications on the appliance rating plate.
- Do not use multi-plugs or extension cables.

4.5 Leveling

Adjust the adjustable feet at the base of the cooker to ensure it is perfectly level. This prevents spills and ensures even cooking.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the control knobs and functions before operating the cooker.

5.1 Gas Hob Operation

1. **Igniting a Burner:** Push in and turn the corresponding control knob counter-clockwise to the maximum flame setting (large flame symbol). Hold the knob in for a few seconds to allow the flame supervision device to activate.
2. **Adjusting Flame:** Once ignited, release the knob. You can then adjust the flame size by turning the knob between the maximum and minimum flame settings (small flame symbol).
3. **Turning Off:** Turn the control knob clockwise to the 'off' position (dot symbol).

5.2 Oven Operation

The oven features a grill function and temperature control via a dedicated knob.

1. **Setting Temperature:** Turn the oven control knob to the desired temperature. The oven will begin to heat.
2. **Preheating:** Allow the oven to preheat for approximately 10-15 minutes to reach the set temperature before placing food inside.
3. **Grill Function:** To use the grill, select the grill setting on the oven control knob. Ensure the oven door is slightly ajar during grilling, as per safety guidelines for gas grills.
4. **Turning Off:** Turn the oven control knob to the 'off' position.

6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Glem cooker.

6.1 General Cleaning

- Always ensure the appliance is cool and disconnected from the power supply before cleaning.
- Use mild detergents and soft cloths. Avoid abrasive cleaners, scourers, or harsh chemicals that can damage surfaces.

6.2 Hob Cleaning

- Remove pan supports and burner caps/crowns. Wash them in warm soapy water, rinse, and dry thoroughly.
- Wipe the stainless steel hob surface with a damp cloth and a mild detergent. For stubborn stains, use a specialized stainless steel cleaner.
- Ensure all burner parts are completely dry before reassembling to prevent ignition issues.

6.3 Oven Cleaning

- Remove oven racks and wash them in warm soapy water.
- Wipe the interior of the oven with a damp cloth and a mild oven cleaner (ensure it is safe for your oven type). Follow the cleaner's instructions.
- Clean the oven door glass with a glass cleaner.

7. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their potential solutions.

Problem	Possible Cause	Solution
Burner does not ignite	No gas supply; burner parts wet or blocked; ignition electrode dirty.	Check gas supply; ensure burner parts are dry and clean; clean ignition electrode.
Oven not heating	No gas supply to oven; temperature knob not set correctly.	Check gas supply; ensure oven knob is set to a temperature.
Uneven cooking in oven	Oven not preheated; food placed incorrectly; oven not level.	Preheat oven fully; ensure proper air circulation around food; level the cooker.
Gas smell	Gas leak.	Immediately turn off gas supply, open windows, do not operate electrical switches, and contact a qualified gas installer.

If the problem persists after attempting these solutions, please contact a qualified service technician.

8. SPECIFICATIONS

Feature	Specification
Brand	Glem
Model Number	U765MI6
Type	Freestanding Gas Hob Cooker
Dimensions (W x D x H)	70 x 60 x 75 cm
Oven Capacity	64 Liters
Voltage	230 VAC
Energy Efficiency Rating	A
Control Type	Knob

Feature	Specification
Material	Stainless Steel
Oven Type	Grill

9. WARRANTY AND SUPPORT

Your Glem U765MI6 cooker comes with a manufacturer's warranty. Please refer to the warranty card provided with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or to schedule a service appointment, please contact your retailer or the authorized Glem service center in your region. Always provide the model number (U765MI6) and serial number of your appliance when seeking support.

© 2023 Glem. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

On the Glem Gas U76M16, does gas continue to flow if the knob is turned without ignition, and is it normal

for air to exit from the top of the oven door during operation?

Based on the manual for the Glem U765MI6 (a similar model in the U76 series), here are the answers to your questions: Gas Safety: The appliance is equipped with a Flame Supervision Device (FSD). When...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B015XBU618>

More documents and user manuals: <https://manuals.plus/>