

## VINABTY ULG901

# VINABTY ULG901 Universal Remote Control Instruction Manual

For LG LED, OLED, LCD, Plasma, and 3D Smart TVs

## 1. INTRODUCTION

This manual provides instructions for the VINABTY ULG901 Universal Remote Control. This remote is designed as a replacement for various LG LED, OLED, LCD, Plasma, and 3D Smart TV models, as well as compatible Blu-ray DVD players. It offers direct functionality without the need for complex programming.





Image: Front view of the VINABTY ULG901 Universal Remote Control, showcasing all buttons and its ergonomic design.

## 2. COMPATIBLE MODELS

The VINABTY ULG901 remote control is compatible with a wide range of LG TV models and specific LG Blu-ray DVD players. It replaces several original LG remote models, including:

- AKB72915206
- AKB72915238
- AKB72915252
- AKB72914201
- AKB72914207
- AKB72914240
- AKB72914219
- AKB72914001

- AKB72914036
- AKB72914261
- AKB73615309
- AKB72914208
- AKB73095401
- AKB73215304
- AKB73275501
- AKB73315301
- AKB73615702
- AKB72915207
- AKB73615309
- And many more LG TV models as listed in the product description.

Some compatible LG TV series include (but are not limited to):

- **LD Series:** 42LD550, 46LD550, 32LD550, 47LD650, 52LD550UB, 60LD550, 32LD420, 42LD420, 47LD420, 32LD450, 37LD450, 42LD450, 47LD450, 32LD520, 42LD630, 47LD630, 47LD520, 55LD630, 55LD520, 26LD350.
- **LE Series:** 19LE5300, 22LE5300, 26LE5300, 22LE5500, 26LE5500, 32LE5300, 37LE5300, 42LE5300, 47LE5300, 55LE5300, 42LE7300, 47LE7300, 55LE7300, 42LE5350, 55LE5500, 42LE5500, 55LE8500.
- **PJ/PT Series:** 50PT350, 42PJ350, 50PJ340, 50PJ350.

### 3. SETUP AND FIRST USE

---

The VINABTY ULG901 remote control is designed for immediate use with compatible LG TVs and Blu-ray DVD players. No programming or pairing is required.

#### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two new AAA batteries (not included), ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery cover, sliding it back into place until it clicks securely.

Once batteries are installed, the remote is ready for operation.



Image: Angled view of the VINABTY ULG901 remote control, showing its side profile and button layout.

## 4. OPERATING INSTRUCTIONS

The remote control features standard buttons for navigating and controlling your LG television and Blu-ray DVD player. Point the remote directly at your device for optimal performance.

### 4.1 Basic Functions

- **Power Button (●):** Turns the TV or Blu-ray player on or off.
- **Number Buttons (0-9):** Directly select channels or input numerical data.
- **VOL +/-:** Adjusts the volume level.

- **CH +/-**: Changes the channel up or down.
- **MUTE**: Mutes or unmutes the audio.
- **INPUT**: Cycles through available input sources (HDMI, AV, Component, etc.).
- **REMOTE MODE (TV/BD)**: Switches the remote's operating mode between TV and Blu-ray Disc Player.
- **LIST**: Displays the channel list.
- **FAV**: Accesses favorite channels.
- **FLASHBK**: Returns to the previously viewed channel.

## 4.2 Navigation and Menu Controls

- **OK Button**: Confirms selections within menus.
- **Arrow Buttons (Up, Down, Left, Right)**: Navigate through menus and options.
- **SETTINGS**: Accesses the TV's main settings menu.
- **INFO**: Displays information about the current program or input.
- **DQ.MENU (Quick Menu)**: Provides quick access to frequently used settings.
- **EXIT**: Exits the current menu or function.
- **↶ (Back/Return)**: Returns to the previous screen or menu.

## 4.3 Smart TV and Media Playback Functions

- **NETFLIX**: Direct access button for the Netflix application.
- **3D OPTION**: Activates or deactivates 3D mode (if supported by your TV).
- **Media Control Buttons (Play, Pause, Stop, Fast Forward, Rewind, Skip)**: Control media playback on compatible devices.
- **HOME**: Accesses the Smart TV home screen or main menu.
- **DISC MENU**: Accesses the menu of a Blu-ray or DVD disc.
- **TITLE/POPUP**: Displays the title menu or pop-up menu of a disc.
- **OPEN/CLOSE**: Opens or closes the disc tray (for Blu-ray players).
- **REPEAT**: Repeats playback (for Blu-ray players).

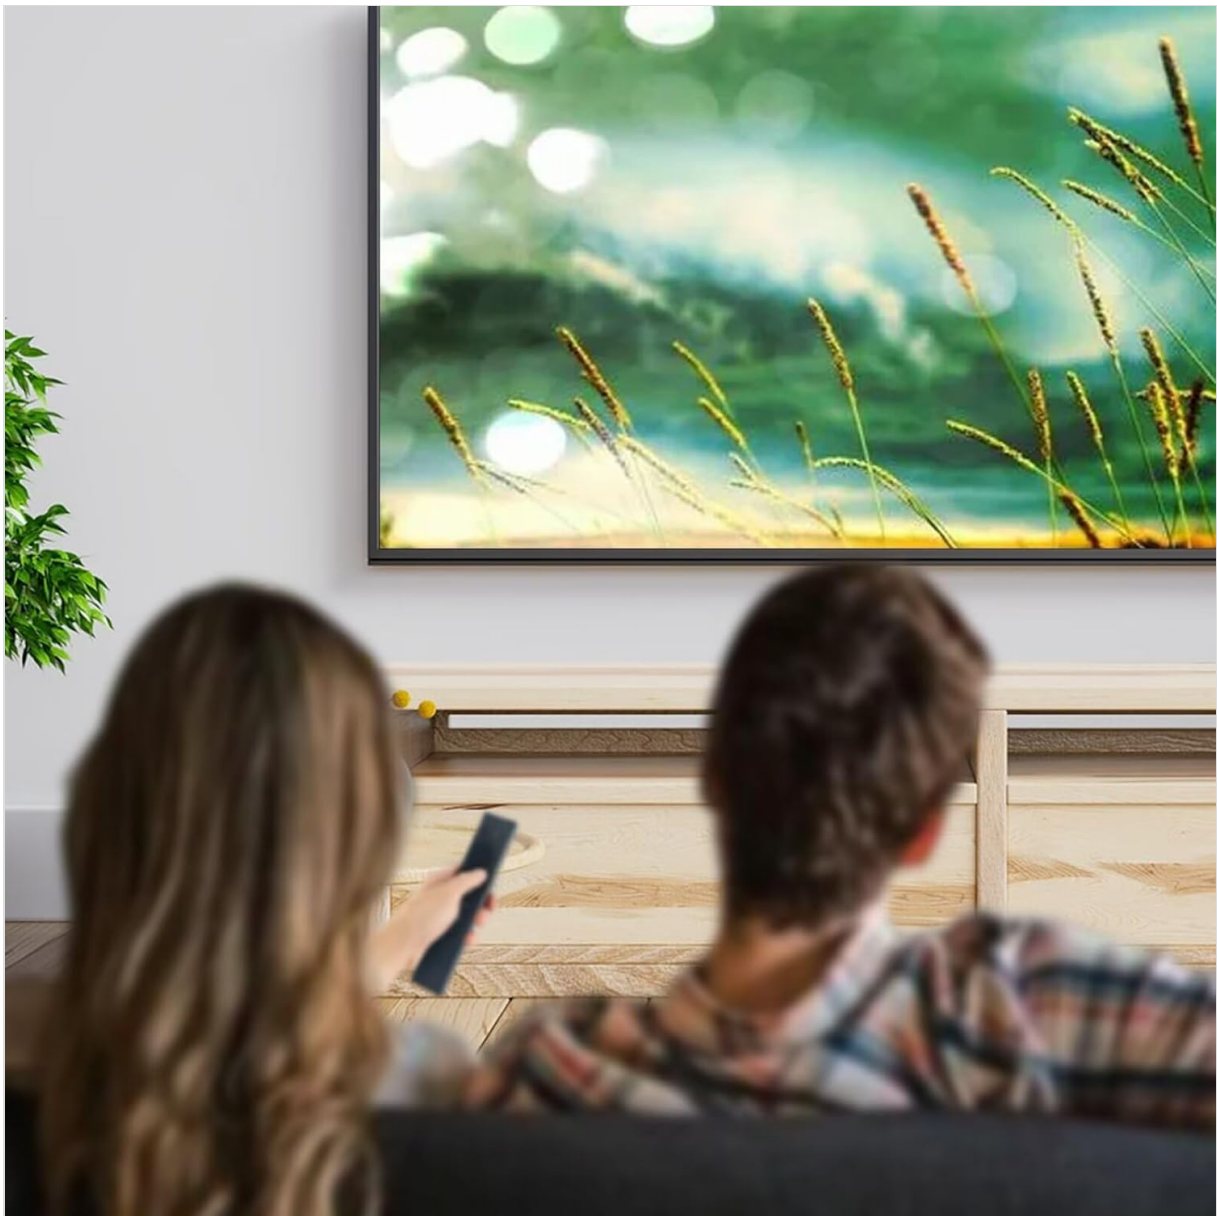


Image: Two individuals comfortably seated, using the VINABTY ULG901 remote control to operate a television.

## 5. MAINTENANCE

---

### 5.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

### 5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

### 5.3 Storage

Store the remote control in a dry place, away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

## 6. TROUBLESHOOTING

- **Remote not responding:**
  - Ensure batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new ones.
  - Check for any obstructions between the remote and the TV's infrared sensor.
  - Make sure you are within the effective range of the TV's IR receiver.
- **Specific buttons not working:**
  - Clean the remote's surface, especially around the non-working buttons, to remove any dirt or debris that might be interfering.
  - If the remote has a "REMOTE MODE" button, ensure it is set to the correct mode (e.g., TV for TV functions, BD for Blu-ray player functions).
- **Remote works intermittently:**
  - This often indicates low battery power. Replace the batteries.
  - Ensure a clear line of sight to the TV.

## 7. SPECIFICATIONS

Feature	Detail
Brand	VINABTY
Model Number	ULG901
Product Dimensions	9 x 3 x 2 inches
Item Weight	3 ounces
Color	BLACK
Special Feature	Ergonomic
Max Number of Supported Devices	1 (Universal for specific LG models)
Compatible Devices	Television, Blu-ray DVD Player





Image: Front view of the VINABTY ULG901 remote control, illustrating its length (9.06 inches) and width (1.97 inches).

## 8. WARRANTY AND SUPPORT

Information regarding specific warranty terms or direct customer support contacts for the VINABTY ULG901 remote control is not available in the provided product data. Please refer to the seller's policies or contact the point of purchase for further assistance.

### Related Documents - ULG901





[Roku Remote Button Customization: Options and Guides](#)

Explore how to change or customize Roku remote buttons, including third-party remote options, compatibility with various Roku models, and alternatives for enhanced usability.