

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Philips Audio](#) /

› [Philips Audio AZ215B/12 Portable CD Player/FM Radio User Manual](#)

Philips Audio AZ215B/12

Philips Audio AZ215B/12 Portable CD Player/FM Radio

User Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Philips Audio AZ215B/12 Portable CD Player/FM Radio. Please read these instructions carefully before using the device and retain them for future reference.

WHAT'S IN THE BOX

Verify that all components are present upon unpacking:

- Philips Audio AZ215B/12 Portable CD Player/FM Radio unit
- AC Power Cord
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your device.



Figure 1: Angled view of the Philips Audio AZ215B/12, showing the CD compartment, control buttons, and dual speakers.



Figure 2: Front view of the Philips Audio AZ215B/12, highlighting the digital display and speaker grilles.

Controls and Connections

- **CD Compartment:** For inserting audio CDs.
- **Display:** Shows track number, time, radio frequency, and mode.
- **Function/Mode Button:** Switches between CD, FM Radio, and Audio Input modes.
- **Play/Pause Button:** Starts or pauses CD playback.
- **Stop Button:** Stops CD playback.
- **Skip/Search Buttons (<< / >>):** Skips tracks on CD or tunes radio frequency.
- **Volume Control:** Adjusts audio output level.
- **Dynamic Bass Boost (DBB) Button:** Enhances bass frequencies.
- **FM Antenna:** Telescopic antenna for FM radio reception.
- **Audio In (AUX) Jack:** 3.5mm input for external audio devices.
- **AC Power Input:** Connects to the main power supply.
- **Battery Compartment:** For optional battery operation (C size LR14 batteries).

SETUP

Power Connection

Your Philips Audio AZ215B/12 can be powered by AC mains or batteries.

AC Power

1. Ensure the voltage of your local power supply matches the voltage indicated on the rating plate located on the bottom of the unit.

2. Connect the supplied AC power cord to the AC power input jack on the unit.
3. Plug the other end of the power cord into a wall outlet.

Battery Operation (Optional)

1. Open the battery compartment cover on the bottom of the unit.
2. Insert the required number of C size LR14 batteries (not included), ensuring correct polarity (+/-) as indicated inside the compartment.
3. Close the battery compartment cover securely.

Note: Disconnect the AC power cord when operating on batteries to prevent potential interference or damage.

Antenna Setup

For optimal FM radio reception, fully extend the telescopic FM antenna. Adjust its position for the best signal clarity.

OPERATING INSTRUCTIONS

Power On/Off

Press the **POWER** button to turn the unit on or off.

CD Playback

1. Press the **FUNCTION/MODE** button to select "CD" mode. The display will show "CD".
2. Open the CD compartment cover.
3. Place an audio CD with the label side facing up into the compartment.
4. Close the CD compartment cover securely. The unit will begin reading the disc.
5. Press the **PLAY/PAUSE** button to start playback.
6. To pause, press **PLAY/PAUSE** again. Press again to resume.
7. To skip to the next track, press the **>>** button. To go to the beginning of the current track or previous track, press the **<<** button.
8. To stop playback, press the **STOP** button.

FM Radio Operation

1. Press the **FUNCTION/MODE** button to select "FM" mode. The display will show the radio frequency.
2. Extend the FM telescopic antenna fully and adjust its position for optimal reception.
3. To manually tune, press the **<<** or **>>** buttons briefly to adjust the frequency step by step.
4. To auto-scan for the next available station, press and hold the **<<** or **>>** buttons until the frequency starts scanning. Release the button when a station is found.

Audio Input (AUX)

1. Connect an external audio device (e.g., smartphone, MP3 player) to the **AUDIO IN (AUX)** jack using a 3.5mm audio cable (not included).
2. Press the **FUNCTION/MODE** button to select "AUX" mode.
3. Start playback on your external audio device. The sound will be output through the Philips Audio AZ215B/12 speakers.
4. Adjust the volume using the volume control on the unit and/or your external device.

Dynamic Bass Boost (DBB)

Press the **DBB** button to activate or deactivate the Dynamic Bass Boost feature, which enhances low-frequency sounds for a richer audio experience.

MAINTENANCE

Cleaning the Unit

- Always unplug the unit from the power outlet before cleaning.
- Use a soft, damp cloth to clean the exterior of the unit. Do not use abrasive cleaners, waxes, or solvents.
- For the CD lens, use a specialized CD lens cleaner. Avoid touching the lens directly.

Storage

When not in use for extended periods, store the unit in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for more than a few weeks to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Batteries depleted or incorrectly inserted.	Ensure AC cord is securely plugged in. Replace batteries or check polarity.
No sound from CD	CD inserted incorrectly; CD dirty or scratched; Unit in wrong mode.	Insert CD with label side up. Clean or replace CD. Select "CD" mode.
Poor FM reception	Antenna not extended or positioned correctly; Weak signal.	Fully extend and adjust the telescopic antenna. Try moving the unit to a different location.
No sound from AUX input	Cable not connected; Unit in wrong mode; Volume too low on external device.	Ensure 3.5mm cable is connected. Select "AUX" mode. Increase volume on external device.

SPECIFICATIONS

Feature	Detail
Model	AZ215B/12
Brand	Philips Audio
Product Dimensions (L x W x H)	23.2 x 25.2 x 12.4 cm
Weight	1 kg
Power Source	AC Power Cable, Battery (C size LR14)
Rated Power Consumption	6 Watts
Speaker Output Power	3 Watts (Max)
Supported Audio Formats	CD
Tuner Technology	FM
Signal-to-Noise Ratio	72 dB
Connectivity	3.5mm Audio Input (AUX)
Display Type	LED

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Philips Audio website. Keep your purchase receipt as proof of purchase for warranty claims.

Online Support: www.philips.com/support

© 2024 Philips Audio. All rights reserved.