

KEMEI KM-2530

KEMEI KM-2530 4-in-1 Cordless Rechargeable Hair Removal Shaver

Model: KM-2530 | Brand: KEMEI

1. INTRODUCTION

Thank you for choosing the KEMEI KM-2530 4-in-1 Cordless Rechargeable Hair Removal Shaver. This versatile device is designed for efficient and convenient personal grooming, offering multiple functions including epilation, shaving, hair trimming, and foot callus removal. Please read this manual carefully before first use to ensure safe and optimal operation.

2. SAFETY INFORMATION

- This appliance is not water-resistant. Do not immerse the device in water or use it in the shower or bath to avoid electric shock.
- Keep the device out of reach of children.
- Do not use the device on irritated, inflamed, infected, or broken skin. Consult a doctor if you have any skin conditions or concerns.
- Only use the provided power adapter for charging. Using an incorrect adapter may damage the device or cause injury.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel for any repairs.
- Ensure the device is fully charged before first use for optimal battery life.
- The foot callus remover head is designed for use only on feet and heels. Do not use it on other parts of the body.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x KEMEI KM-2530 Main Device
- 1 x Epilator Head

- 1 x Shaver Head
- 1 x Foot Callus Remover Head
- 1 x Hair Trimmer Head
- 1 x Power Adapter
- 1 x Cleaning Brush
- 1 x User Manual (English)



Image: KEMEI KM-2530 device and its interchangeable heads.

4. SETUP

4.1 Charging the Device

1. Before first use, fully charge the device for approximately 8-10 hours.
2. Connect the power adapter to the charging port on the device and plug it into a suitable electrical outlet.
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off, depending on the model.
4. Subsequent charges typically take 6-8 hours. Do not overcharge the device.

4.2 Attaching and Detaching Heads

1. To detach a head: Press the two side buttons located at the top of the unit and gently pull the head upwards.
2. To attach a head: Align the desired head with the main unit and press it firmly into place until you hear a click. Ensure it is securely fastened before use.



Image: Main device with epilator head attached and other heads ready for attachment.

5. OPERATING INSTRUCTIONS

The KEMEI KM-2530 features two-speed settings to accommodate different hair types (fine or coarse) and areas. Press the power button to turn on the device. Press it again to switch between speed settings.

5.1 Epilation (Hair Removal Head)

1. Ensure the epilator head is securely attached.
2. Hold the epilator at a 90-degree angle to your skin.
3. For larger areas with stronger hair growth, select speed 2.
4. Move the epilator slowly over your skin, against the direction of hair growth. The on/off switch indicates the direction of movement.
5. For best results, ensure your skin is clean and dry.



Image: Using the epilator head on the skin.

5.2 Shaving (Shaver Head)

1. Attach the shaver head to the main unit.
2. Turn on the device.
3. For optimal results, shave against the direction of hair growth.

5.3 Foot Callus Removal (Callus Remover Head)

- This head is designed for use only on feet or heels. Do not use on other body parts.
- Attach the foot callus remover head.
- Turn on the device.
- Gently rotate the device back and forth or side to side on the desired area for 2-3 seconds at a time. Avoid applying excessive pressure.

5.4 Hair Trimming (Hair Trimmer Head)

- Attach the hair trimmer head, suitable for shaping long and fine hair.
- Press the power switch on the main body to operate the trimmer.
- Trim hair to the correct length by slowly moving the shaver back and forth against the hair flow.

6. MAINTENANCE AND CLEANING

- Always turn off and unplug the device before cleaning.
- Detach the head after each use.
- Use the provided cleaning brush to remove any hair or debris from the heads and the main unit.
- Do not rinse the device or its heads under water as it is not water-resistant.
- Wipe the exterior of the device with a soft, dry cloth.
- Store the device and its accessories in a cool, dry place, away from direct sunlight and moisture.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided adapter.
Poor hair removal performance.	Head is dirty or improperly attached. Hair is too short/long.	Clean the head thoroughly. Ensure the head is securely attached. For epilation, hair should be 0.5-3mm long for best results.
Device stops during use.	Battery is low.	Recharge the device.
Skin irritation after use.	Incorrect technique or sensitive skin.	Ensure you are using the correct technique (e.g., holding at 90 degrees, moving against hair growth). If irritation persists, discontinue use and consult a dermatologist.

If you encounter any issues not listed here, please contact KEMEI customer support or your retailer.

8. SPECIFICATIONS

- **Model Number:** KM-2530
- **Brand:** KEMEI
- **Power Source:** Electric & Battery
- **Functions:** Hair removal, shaving, foot callus removal, hair trimming
- **Speed Settings:** 2
- **Dimensions (Shipping):** 20.8 x 20.2 x 6.4 cm
- **Weight (Shipping):** 475 grams (approx. 1.05 pounds)
- **Water Resistance:** Not water-resistant
- **UPC:** 702874274876
- **Included Components:** Main device, Epilator head, Shaver head, Foot callus remover head, Hair trimmer head, Power adapter, Cleaning brush, User manual.

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, replacement parts, or warranty claims, please contact your retailer or the KEMEI customer service department. Keep your proof of purchase for warranty validation.

