

BLACK+DECKER TRO420

BLACK+DECKER TRO420 Toast-R-Oven 4-Slice Countertop Oven/Broiler Instruction Manual

Model: TRO420

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Extreme caution should be exercised when using containers constructed of other than metal or

glass.

- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

SAVE THESE INSTRUCTIONS.

GETTING STARTED

Unpacking and Components

Carefully unpack your BLACK+DECKER TRO420 Toast-R-Oven. Remove all packaging materials, labels, and stickers. Ensure all components are present:

- Toaster Oven Unit
- Bake Pan
- Broil Rack
- Wire Rack



Includes

Slide Rack and Bake/Broil Pan

Image: The BLACK+DECKER TRO420 Toaster Oven shown with its included slide rack and bake/broil pan, ready for use.

Initial Use

Before first use, wipe the interior and accessories with a damp cloth. Ensure the crumb tray is properly installed. It is normal for a slight odor or smoke to occur during the first few minutes of operation as protective coatings burn off. This is temporary and harmless.

SETUP

Placement

Place the toaster oven on a stable, level, heat-resistant surface. Ensure there is at least 6 inches (15 cm) of space on all sides and above the oven for proper ventilation. Do not place the oven directly against a wall or under cabinets during operation.

Power Connection

Plug the power cord into a standard 120V AC electrical outlet. This product is designed for North American electrical standards.



Image: The BLACK+DECKER TRO420 Toaster Oven, showing its compact design suitable for countertop placement.

OPERATING INSTRUCTIONS

The BLACK+DECKER TRO420 Toast-R-Oven features two control knobs for various functions:

- **Top Knob:** Temperature/Function Selector (TEMP °F/°C, BROIL)
- **Bottom Knob:** Toast Shade/Timer (TOAST / TIMER)



Image: A detailed view of the upper control knob, indicating temperature settings from 200°F to 450°F and the Broil function.



30-Minute Timer

Precise toasting shades and
stay-on functionality for longer task

Image: A detailed view of the lower control knob, featuring toast shade settings, a 30-minute timer, and a "STAY ON" function.

Toasting

1. Place items directly on the wire rack. Up to 4 slices of standard bread can be toasted.
2. Close the oven door.
3. Turn the **Top Knob** to the TOAST setting (indicated by a toast icon).
4. Turn the **Bottom Knob** past the 10-minute mark, then back to your desired toast shade (light to dark). The timer will begin counting down.
5. When toasting is complete, the timer will ding and turn off the oven.

Note: For optimal toasting, ensure the crumb tray is clean and the wire rack is in the middle position.



Image: The toaster oven interior with four slices of bread being toasted, illustrating its capacity.

Baking

1. Place food in the bake pan, or an oven-safe dish on the wire rack.
2. Close the oven door.
3. Turn the **Top Knob** to the desired baking temperature (up to 450°F / 235°C).
4. Turn the **Bottom Knob** to the desired baking time (up to 30 minutes). For longer baking times, turn the knob to "STAY ON" and monitor food manually.
5. When baking is complete, turn the **Bottom Knob** to "OFF" if using "STAY ON", or the timer will ding and turn off the oven.



Image: The toaster oven interior with baked rolls, demonstrating its baking capability.

Broiling

1. Place food on the broil rack, which sits inside the bake pan to catch drippings.
2. Position the wire rack in the upper slot for broiling.
3. Close the oven door.
4. Turn the **Top Knob** to the BROIL setting.
5. Turn the **Bottom Knob** to the desired broiling time (up to 30 minutes). Broiling often requires shorter times, so monitor closely.
6. When broiling is complete, turn the **Bottom Knob** to "OFF" or the timer will ding and turn off the oven.

Keep Warm

To keep food warm, set the **Top Knob** to a low temperature (e.g., 200°F / 95°C) and the **Bottom Knob** to "STAY ON". Monitor food to prevent overcooking or drying out.

CARE AND CLEANING

Proper cleaning ensures the longevity and safe operation of your toaster oven.

- Always unplug the appliance and allow it to cool completely before cleaning.
- **Crumb Tray:** The swing-down crumb tray (located at the bottom front) should be emptied regularly. Open the door, then gently pull the crumb tray forward and down to release. Wipe clean with a damp cloth.
- **Wire Rack, Bake Pan, Broil Rack:** Wash these accessories in warm, soapy water. Rinse and dry thoroughly. These are not dishwasher safe.
- **Interior:** Wipe the interior walls with a damp cloth and mild liquid soap. Do not use abrasive cleaners or metal scouring pads.
- **Exterior:** Wipe the exterior with a damp cloth. Dry thoroughly.

- Do not immerse the appliance in water or any other liquid.



Crumb Tray

For easy clean up

Image: The toaster oven with its swing-down crumb tray opened, illustrating the ease of access for cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in. Power outlet not functioning.	Ensure power cord is securely plugged into a working outlet. Check household circuit breaker.
Food is not cooking evenly.	Incorrect rack position. Overcrowding.	Refer to operating instructions for correct rack placement. Avoid overcrowding the oven; cook in smaller batches if necessary.
Smoke or odor during initial use.	Protective coatings burning off.	This is normal for first use and will dissipate. Ensure good ventilation.

Problem	Possible Cause	Solution
Timer knob is difficult to turn.	Mechanical resistance.	The timer knob may have some initial stiffness. Ensure you are turning it past the 10-minute mark before setting the desired time for toasting. If persistent, contact customer support.

If the problem persists, please contact BLACK+DECKER customer support.

SPECIFICATIONS

Model: TRO420

Brand: BLACK+DECKER

Capacity: 4-slice toast, 9 liters

Power: 1200 Watts

Voltage: 120V (North American Electrical Standards)

Temperature Range: Up to 450°F (235°C)

Timer: 30-minute with Stay-On function

Dimensions (approx.): 48.26 cm (19 in) x 27.69 cm (10.9 in) x 31.75 cm (12.5 in)

Weight: 3.95 kg (8.7 lbs)

Included Components: Bake Pan, Broil Rack, Wire Rack

WARRANTY AND SUPPORT

For warranty information, product registration, or customer support, please refer to the warranty card included with your product or visit the official BLACK+DECKER website. Keep your purchase receipt as proof of purchase for warranty claims.

Online Support: www.blackanddecker.com/support