

Playmobil 6927

Playmobil 6927 Country Pony Farm Instruction Manual

Detailed guide for assembly, operation, and care of your Playmobil Pony Farm playset.

1. INTRODUCTION

The Playmobil 6927 Country Pony Farm is a detailed playset designed for children aged 4 to 10 years. This manual provides essential information for setting up, operating, and maintaining the playset to ensure a safe and enjoyable experience.

The set includes a two-story farm building with two pony stalls, an outdoor enclosure, and various accessories to simulate daily life on a pony farm. It encourages imaginative play with figures, ponies, and farm equipment.

2. SAFETY INFORMATION

WARNING: Not suitable for children under 3 years of age due to the dangers of suffocation caused by small parts.

Always supervise young children during play. Ensure all small parts are kept out of reach of infants and toddlers.

3. WHAT'S IN THE BOX

The Playmobil 6927 Country Pony Farm set contains 194 pieces, including:

- 1 x Female Stable hand Figure
- 1 x Boy Figure
- 1 x Girl Figure
- 3 x Ponies with reins
- 2 x Cats

- 2 x Mice
- 1 x Bird nest with baby birds
- 2 x Birds
- 2 x Riding Helmets
- 1 x Horse manure
- 1 x Sack
- 1 x Pitch Fork
- 1 x Broom
- 2 x Buckets
- 1 x Pond
- 1 x Vegetable Box with assortment of fruits and veg
- 7 x Fence panels with connectors
- 1 x Lockable gate
- 1 x Ladder
- 1 x Dustpan and brush
- 6 x Grooming accessories
- 1 x Grooming storage box
- 1 x Hay Bale
- 2 x Grass stacks

The set can be combined with other Playmobil Country sets such as the Country Horseback Ride (6947) and Picnic with Pony Wagon (6948), sold separately.

4. SETUP AND ASSEMBLY

Assembly of the Playmobil 6927 Country Pony Farm is required. While designed for ease of assembly, adult assistance is recommended, especially for younger children. Some pieces may require a firm 'snap' to connect, and a tool may be included for this purpose.

Follow the detailed instructions provided in the box for step-by-step assembly of the farm building, fences, and placement of accessories. Ensure all connections are secure before play begins.



Figure 1: The Playmobil 6927 Country Pony Farm in its original packaging, showing the main farm building, ponies, and figures.



Figure 2: The fully assembled Playmobil 6927 Country Pony Farm, showcasing the farm building, outdoor paddock, and various play elements.

5. OPERATING THE PLAYSET

The Playmobil Pony Farm offers numerous opportunities for imaginative play:

- **Pony Care:** Use the included grooming accessories (brushes, combs) to care for the ponies. Feed them using the hay bales and grass stacks.
- **Stall Management:** The farm features two lockable pony stalls. Place ponies inside for rest or use the wheelbarrow, pitchfork, and broom for cleaning the stalls.
- **Outdoor Play:** Utilize the flexible fence panels to create a paddock for the ponies to roam freely. The pond accessory provides a drinking area.
- **Figure Interaction:** Position the figures to ride the ponies (using riding helmets and reins), interact with the cats and mice, or perform farm chores.
- **Storage Loft:** The two-story barn includes a storage loft accessible via a ladder, which can be used for storing hay or other accessories.



Figure 3: Playmobil figures engaged in caring for the ponies within the stable area, demonstrating grooming and feeding activities.



Figure 4: Playmobil figures demonstrating the cleaning of pony stalls using the provided wheelbarrow, broom, and pitchfork accessories.

Your browser does not support the video tag.

Video 1: An overview of the Playmobil Pony Farm playset, showcasing its various features and play possibilities. This video highlights the interactive elements and overall setup of the farm.

6. MAINTENANCE AND CLEANING

To maintain the quality and longevity of your Playmobil Pony Farm, follow these cleaning guidelines:

- Clean parts (excluding any stickers) under running water.
- Avoid using chemical cleaning agents, as these may damage the plastic or paint.
- Regularly check for any loose or damaged parts and replace if necessary.

7. TROUBLESHOOTING

If you encounter any issues with your Playmobil 6927 Country Pony Farm, consider the following:

- **Missing or Damaged Parts:** Refer to the 'What's in the Box' section and the product's original packaging for a complete list of components. Contact Playmobil customer support for assistance with missing or damaged parts.
- **Assembly Difficulties:** Ensure all pieces are correctly oriented and firmly snapped into place. Review the assembly instructions carefully. Adult assistance is often beneficial for complex connections.
- **Figures or Accessories Not Functioning:** Playmobil toys are generally robust. Check for any obstructions or incorrect placement of accessories.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	17.13 x 4.72 x 12.8 inches
Item Weight	0.01 ounces
Model Number	6927
Manufacturer Recommended Age	4 - 10 years
Manufacturer	Playmobil

9. WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please refer to the contact details provided in your product packaging or visit the official Playmobil website. Keep your proof of purchase for any warranty claims.