

Pursonic FE120P

Pursonic FE120P Cordless Epilator Instruction Manual

Model: FE120P | Brand: Pursonic

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- Keep out of children's reach.
- Do not use this appliance with a damaged cord or plug.
- Do not use this appliance in a moist-free area.
- Always store your appliance in a moisture-free area.
- For household use only.

2. PRODUCT OVERVIEW

The Pursonic FE120P Cordless Epilator is designed for efficient and long-lasting hair removal. Its compact and ergonomic design makes it comfortable to hold and easy to use across various body areas.



Image: Pursonic FE120P Cordless Epilator and its retail packaging.

Key Features:

- **40 Tweezers:** Equipped with close grip technology to capture even the finest hairs from the root.
- **Rechargeable & Cordless:** Provides convenience and flexibility for use anywhere.
- **Two Speed Settings:** Allows for adjustment based on hair type and comfort level.
- **Versatile Use:** Suitable for arms, legs, underarms, bikini area, and face.
- **Compact Design:** Lightweight and easy to handle for precise control.



Comfort, Control, and Consistent Results



Affordable and Efficient ✓

Rechargeable and Cordless Convenience ✓

Dual-Speed Settings for Custom Comfort ✓

40 Tweezers Hair Removal System ✓

Simple and User-friendly ✓

Image: The epilator showcasing its affordable, efficient, rechargeable, dual-speed, 40-tweezer, and user-friendly features.

3. GETTING STARTED (SETUP)

Charging the Device:

1. Ensure the device is turned off before charging.
2. Connect the provided AC adapter/charger to the charging port on the epilator.
3. Plug the adapter into a suitable power outlet.
4. Allow the device to charge completely before first use.



Image: The epilator displayed with its charging cable, cleaning brush, and trimmer cap.

4. OPERATING INSTRUCTIONS

Preparation:

- For best results, exfoliate your skin before epilation to prevent ingrown hairs.
- Ensure your skin is clean and dry.

Using the Epilator:

1. Turn on the device and select your desired speed setting (Speed 1 for finer hair/sensitive areas, Speed 2 for coarser hair/larger areas).
2. Hold the epilator at a 90-degree angle to your skin.
3. Gently glide the epilator slowly over the skin in the opposite direction of hair growth.
4. Do not press too hard; let the epilator do the work.
5. For sensitive areas like the face, underarms, or bikini line, use the lower speed setting and proceed with caution.



Effortless, Long-lasting Hair removal

Your own next level
personal grooming
essential, expertly
designed to deliver
smooth, hair-free
skin that lasts
for weeks.



Image: The epilator in use on a leg, demonstrating its application for long-lasting hair removal.

Smooth Skin, Salon Results

Your go-to solution for long-lasting, silky-smooth skin. Removes even the finest hairs from the root, leaving you hair-free for up to 4 weeks.



Image: The epilator being applied to an underarm, illustrating its use for achieving smooth skin.

5. MAINTENANCE AND CLEANING

Cleaning the Epilator Head:

1. Ensure the device is turned off and unplugged before cleaning.
2. Press the release button to detach the epilator head from the main body.
3. Use the provided cleaning brush to remove any trapped hairs from the tweezers.
4. The epilator head can be rinsed under running water for thorough cleaning. Ensure it is completely dry before reattaching.
5. The main body of the epilator is **Not Water Resistant**. Do not submerge it in water or rinse it under running water. Clean the body with a dry cloth.

Storage:

Store the epilator in a dry, cool place, away from direct sunlight and out of reach of children. Use the protective cap to cover the epilator head when not in use.

6. TROUBLESHOOTING

- **Device not turning on:** Ensure the epilator is fully charged. If it still doesn't turn on, check the power switch.
- **Hair not being removed effectively:** Ensure the epilator head is clean and free of debris. Make sure you are gliding the device slowly and against the direction of hair growth. Hair might be too short; allow it to grow slightly longer for optimal epilation.
- **Skin irritation:** Always exfoliate before use. Apply a soothing lotion after epilation. If irritation persists, discontinue use and consult a dermatologist.

7. SPECIFICATIONS

Feature	Detail
Item Model Number	FE120P
Product Dimensions	5.9 x 2 x 7.5 inches
Item Weight	12.8 ounces
Batteries	1 Nonstandard Battery required
Power Source	Battery Powered
Water Resistance Level	Not Water Resistant

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or to purchase replacement parts, please refer to the product packaging or visit the official Pursonic website. Keep your proof of purchase for any warranty claims.