

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [instax](#) /

› [Fujifilm Instax Mini 70 White Camera Instruction Manual](#)

instax Mini 70

Fujifilm Instax Mini 70 Instant Camera

INSTRUCTION MANUAL

Introduction

This manual provides essential information for the safe and effective use of your Fujifilm Instax Mini 70 Instant Camera. Please read it thoroughly before operating the camera and keep it for future reference. The Instax Mini 70 is designed for capturing instant photos with various shooting modes and features.

Safety Precautions

- Do not disassemble or modify the camera.
- Keep the camera away from water and moisture.
- Avoid exposing the camera to extreme temperatures.
- Use only specified batteries and Instax Mini film.
- Keep out of reach of small children.

What's in the Box

Your Fujifilm Instax Mini 70 package includes:

- Instax Mini 70 Camera Body
- 2 x CR2 Batteries

Setup

1. Inserting Batteries

The Instax Mini 70 requires two CR2 lithium batteries. To insert them:

1. Locate the battery compartment on the side of the camera.
2. Open the battery compartment cover.

3. Insert the two CR2 batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Image: Side view of the Instax Mini 70, highlighting the battery compartment.

2. Loading Film

Use only Fujifilm Instax Mini film packs. Each pack contains 10 exposures.

1. Open the film compartment cover on the back of the camera.
2. Align the yellow mark on the film pack with the yellow mark on the camera.
3. Gently insert the film pack straight into the compartment. Do not press down on the film pack.
4. Close the film compartment cover. The camera will automatically eject the black film cover.

5. The film counter on the back will display '10', indicating 10 photos remaining.



Image: Back view of the Instax Mini 70, showing the film compartment and film counter display.
For a visual guide on film loading and camera operation, watch the video below:

Video: Demonstration of the Instax Mini 70 camera, including film loading and basic functions.

Operating the Camera

1. Power On/Off

Press the power button located on the top right of the camera to turn it on. The lens will extend. Press it again to turn off the camera and retract the lens.



Image: Front view of the Instax Mini 70, showing the lens and power button.

2. Taking a Photo

With the camera powered on, compose your shot through the viewfinder. Press the shutter button on the front of the camera to take a picture. The photo will automatically eject from the top slot.

3. Selfie Mode

The Instax Mini 70 features a small mirror next to the lens for easy selfie composition. Select selfie mode using the mode button to optimize settings for close-up shots.

4. Shooting Modes

The camera offers various shooting modes to adapt to different lighting conditions and subjects. Use the 'MODE' button to cycle through options such as:

- **Macro Mode:** For close-up shots (0.3m - 0.6m).
- **Landscape Mode:** For distant subjects (3m and beyond).
- **High-Key Mode:** Brightens the subject for a softer look.
- **Fill-in Flash:** Ensures proper exposure in low light or backlit situations.



Image: Top view of the Instax Mini 70, displaying the mode selection buttons.

5. Self-Timer

Activate the self-timer function for group photos or when you want to be in the shot. Press the self-timer button, and the camera will take a photo after a short delay (typically 10 seconds).

Maintenance

To ensure the longevity and optimal performance of your Instax Mini 70:

- **Cleaning:** Use a soft, dry cloth to clean the camera body and lens. Do not use alcohol, thinner, or other solvents.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.
- **Film Handling:** Keep film packs in their original packaging until ready to use. Avoid exposing film to direct light before or after loading.

Troubleshooting

If you encounter issues with your camera, refer to the following common problems and solutions:

Problem	Solution
Camera does not power on.	Check if batteries are inserted correctly and are not depleted. Replace if necessary.
Film does not eject.	Ensure a film pack is loaded correctly and the film counter is not '0'.
Photos are too dark/light.	Adjust shooting mode (e.g., High-Key for brighter, Fill-in Flash for low light). Ensure flash is not obstructed.
Image is blurry.	Ensure the subject is within the appropriate focus range for the selected mode (Macro for close-ups, Landscape for distant). Hold the camera steady.

Specifications

Feature	Detail
Product Dimensions	4 x 3.5 x 7 inches
Item Weight	8 ounces (0.5 Pounds)
Item Model Number	CPL7B101-A00
Batteries	2 CR2 batteries (included)
Film Format Type	Instax Mini
Special Feature	Automatic exposure control and versatile shooting modes
Manufacturer	FUJIFILM
Date First Available	October 2, 2015

Warranty Information

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Retain your proof of purchase for any warranty claims.

Support

For further assistance, technical support, or to purchase accessories, please visit the official Fujifilm Instax website or contact their customer service department. Contact details can typically be found on the product packaging or the manufacturer's website.