

ELECOM M-XGM10DBBK

ELECOM M-XGM10DBBK Wireless 5-Button BlueLED Mouse User Manual

Model: M-XGM10DBBK | Brand: ELECOM

1. INTRODUCTION

Thank you for purchasing the ELECOM M-XGM10DBBK Wireless 5-Button BlueLED Mouse. This mouse is designed for comfort and precision, featuring an ergonomic shape that fits naturally in your hand and BlueLED technology for reliable tracking on various surfaces. This manual provides essential information for proper setup, operation, and maintenance of your device.

2. PRODUCT OVERVIEW

The M-XGM10DBBK mouse is part of the "EX-G" series, known for its ergonomic design and comfortable grip. It features five buttons, including dedicated back and forward buttons, to enhance productivity.

Key Features:

- **Ergonomic Design:** Shaped to fit the hand for ultimate grip comfort.
- **BlueLED Sensor:** Provides precise tracking on a wide range of surfaces, including glass and fabric.
- **5-Button Functionality:** Includes left, right, scroll wheel, and dedicated back/forward buttons.
- **2.4GHz Wireless Connection:** Offers a stable connection with a range of approximately 10 meters (3 meters on steel desks).
- **Customizable Buttons:** Button functions can be re-assigned using the free "ELECOM Mouse Assistant" software (Windows/Mac only).
- **Battery Indicator:** A lamp indicates remaining battery life.

Components:

Familiarize yourself with the mouse components:



Chromebook 対応認定



※この製品は、Google の互換性基準を満たすためにエレコム株式会社によって認定されています。
Google は、この製品の動作や、該当する安全要件やその他の安全要件の遵守について責任を負いません。
この製品は、製品の契約条件に従ってエレコム株式会社によってのみサービスおよびサポートされます。
テクニカルサポートとカスタマーサービスについては、エレコム株式会社に直接お問い合わせください。
Chromebook 及び "Works With Chromebook" のラベルは、Google LLC の商標です。

Figure 2.1: Top view of the mouse, highlighting the main buttons.



押しやすいボタン配置

無料ソフト「エレコムマウスアシスタント」で
ボタン機能を自由に割り当て可能です

デフォルト機能



※マウスアシスタントはWindows/Macのみ対応しています

Figure 2.2: Side view of the mouse, showing the back and forward buttons.



Figure 2.3: Size comparison of EX-G mice (S, M, L). The M-XGM10DBBK is the M size.



Figure 2.4: Bottom view of the mouse, indicating the optical sensor, power switch, and receiver storage compartment.

絶妙なクリック感

左右のボタンは、耐久性とクリック感に定評のあるオムロン社製を採用しました



Figure 2.5: Illustration of the durable Omron switches used for the left and right click buttons.

場所を選ばずに快適に使用できる

小さな凹凸やホコリでもより正確に光が反射し、場所を選ばずに快適に使用できるBlueLEDを搭載しています。

BlueLEDとは？

BlueLEDの青い光は、従来の光学式マウスに使用されている赤い光と比較して波長が短く、小さな凹凸やホコリでもより正確に光が反射してセンサーに届くため、場所を選ばず快適に使用することができます。（光が完全に透過するガラス面や、完全にフラットな面上ではトラッキング能力が低下する場合があります。すべての面上での使用を保証するものではありません。）

Blue LED 搭載 マウス

どんな環境でも場所を選ばず快適

紙	ガラス面	透明シート	布
 書類の上でも	 ガラステーブルでも安心	 フィルムなどでもラクラク	 テーブルクロスでも快適

Blue LED

どんな環境でも場所を選ばず快適



BlueLEDの青い光は、波長が短く、高い読み取り性能を発揮します。

こんな方におすすめ！

- 色々な場所でマウスを使いたい方
- 会議室やリビングのテーブルがガラス素材の方

※光が完全に透過するガラス面や、完全にフラットな面上ではトラッキング能力が低下する場合があります。すべての面上での使用を保証するものではありません。

Figure 2.6: Explanation of BlueLED technology, demonstrating its versatility on different surfaces. Note: Tracking performance may decrease on completely transparent or perfectly flat surfaces.

無線方式は2.4GHz帯を採用



無線方式は2.4GHz帯を採用し、非磁性体で約10m、スチールデスクなど磁性体上でも約3mの範囲で使用可能です。(当社調べ)

電池残量表示ランプを搭載

本体裏面に電源スイッチがあり、不使用時の電池の消耗を防止できます。電池の交換時期をお知らせする電池残量表示ランプを搭載しています。

ボタン機能の割り当て変更ができる

ボタンの機能割り当ては、無料でダウンロードできる「エレコム マウスアシスタント」を利用して変更可能です。

※Windows RTには対応していません。

分解能2000カウント

スムーズで快適な操作を実現する分解能2000カウントです。



Figure 2.7: Details on 2.4GHz wireless, battery indicator, and 2000 DPI resolution for smooth operation.



Figure 2.8: The ELECOM M-XGM10DBBK mouse is certified to work with Chromebooks.

3. SETUP

3.1 Battery Installation

1. Locate the battery cover on the bottom of the mouse.

2. Slide the cover open.
3. Insert one AA alkaline, manganese, or nickel-metal hydride battery, ensuring correct polarity (+/-).
4. Close the battery cover securely.

3.2 Receiver Connection

1. Remove the USB receiver from its storage compartment on the bottom of the mouse.
2. Plug the USB receiver into an available USB-A port on your computer.
3. Your computer should automatically detect and install the necessary drivers. This may take a few moments.

3.3 Powering On

1. Slide the power switch on the bottom of the mouse to the "ON" position.
2. The mouse is now ready for use.

4. OPERATING INSTRUCTIONS

4.1 Basic Functions

- **Left Click:** Primary selection and activation.
- **Right Click:** Opens context menus.
- **Scroll Wheel:** Scrolls documents and web pages vertically. Can also be clicked for middle-click functionality.

4.2 Back/Forward Buttons

The dedicated back and forward buttons located on the side of the mouse allow for quick navigation in web browsers and file explorers.

- Press the **Back** button to go to the previous page or folder.
- Press the **Forward** button to go to the next page or folder.

4.3 Customizing Buttons (ELECOM Mouse Assistant)

For advanced customization, download the free "ELECOM Mouse Assistant" software from the official ELECOM website. This software allows you to re-assign functions to the mouse buttons according to your preferences. Please note that this software is compatible with Windows and macOS only.

5. MAINTENANCE

5.1 Cleaning

To maintain optimal performance and hygiene, regularly clean your mouse:

- Turn off the mouse using the power switch.
- Use a soft, dry cloth to wipe the surface of the mouse.
- For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately.
- Avoid using harsh chemicals, abrasives, or solvents.
- Gently clean the optical sensor area on the bottom of the mouse with a cotton swab if tracking issues occur.

5.2 Battery Replacement

When the battery indicator lamp flashes or the mouse performance degrades, replace the battery:

- Turn off the mouse.
- Open the battery cover.
- Remove the old battery and dispose of it according to local regulations.
- Insert a new AA battery, ensuring correct polarity.
- Close the battery cover and turn the mouse back on.

6. TROUBLESHOOTING

If you encounter issues with your mouse, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mouse not responding	Low battery; Power switch off; Receiver not connected; Receiver interference.	Replace battery; Turn power switch ON; Ensure receiver is firmly plugged in; Try a different USB port; Move closer to the receiver.
Erratic cursor movement	Dirty optical sensor; Unsuitable surface; Interference.	Clean optical sensor; Use on a suitable mouse pad or surface; Reduce interference from other wireless devices.
Buttons not working	Software conflict; Driver issue.	Restart computer; Reinstall mouse drivers; Check for conflicting software.
Wireless connection issues	Distance too far; Obstructions; Interference.	Ensure mouse is within range (10m); Remove obstructions between mouse and receiver; Avoid using near other 2.4GHz devices.

7. SPECIFICATIONS

Feature	Detail
Model Number	M-XGM10DBBK
Connection Method	2.4GHz Wireless (USB-A Receiver)
Sensor Type	BlueLED Optical
Buttons	5 buttons (Left, Right, Scroll Wheel, Back, Forward)
Resolution	2000 DPI
Dimensions (W x D x H)	73.8 x 109.6 x 40.8 mm (M Size)
Weight	Approx. 151.95 g (including battery)
Power Source	1 x AA battery (Alkaline, Manganese, or Ni-MH)
Estimated Battery Life	Approx. 722 days (based on typical usage)
Compatible OS	Windows 11, 10, RT8.1, 8.1, 7, Vista; macOS High Sierra 10.13, OS X 10.10; Chrome OS

Feature	Detail
Color	Black

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This product comes with a **6-month warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

8.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please visit the official ELECOM website or contact ELECOM customer support. Contact details can typically be found on the ELECOM website under the 'Support' or 'Contact Us' section.